

		CAPABILITY LIST
#	Part Number	Description
1	07-3016-6900	FUEL SAMPLE UNIT
2	29-TB1PT35A	INSTALLATION TOOL
3	29-TP1PT35A	INSTALLATION TOOL
4	1908	NLG SOCKET
5	2309-T006-001	SOCKET- REMOVAL/INSTALLATION, LOCK NUT
6	2900-5-1	Starrett Indicator model
7	351-2100-18GSE	A350 FAN COWL HOLD OPEN ROD
8	351-3000-11GSE	C-DUCT STEP FOAM BLOCK
9	1702198	INHIBITING RIG - ENGINE SYSTEM ON WING
10	2558757	CONE - WHEEL GUIDE
11	2558758	CONE - BRAKE GUIDE
12	2558759	TOOL - BRAKE HANDLING
13	2558806	SUPPORT, ADAPTER, INST. OBWH&IBWH
14	2CF65B05528-1	BALANCE STAND - OUTBOARD AILERON, UPPER RUDDER AND OUTBOARD ELEVATOR
15	81267600	RETAINER ADAPTER
16	81267700	ADAPTER, FILL BOSS
17	81268100	WELDING FIXTURE
18	81270000	WRENCH
19	81270100	WRENCH
20	81270200	HEAT SINK
21	83000089	CRADLE-FIRE EXTINGUISHER BOTTLE
22	460001794/6	PRESSURE TEST BUNG
23	460002502	CHARGING ADAPTOR
24	460003180-24	RING - KEEP
25	460003180-51	RING - KEEP
26	460004459/5	TEST ADAPTER
27	460004459/6	TEST ADAPTER
28	460005812	SPANNER - TUBE
29	460005832	SPRING EXPANDER-MLG SIDE STAY
30	460005834	SPANNER - TUBE
31	460005835	SLEEVE - GROUND LOCK
32	460006228	ADAPTER - TORQUE
33	460006428	BLOCK - SETTING
34	460006465	SPANNER-PEG
35	460006567	SPLINT SLING
36	460006804	BLEED ADAPTOR
37	460007011	SPANNER-AXLE NUT, MLG
38	460007019	SPACER, BRAKE ROD
39	460007020	SPACER, BRAKE ROD
40	460007021	SPANNER
41	460007022	SPANNER
42	460007028	REACTOR
43	460007033	SPANNER- A LINK
44	460007070	ADAPTOR
45	460007102	EQUIPMENT - LIFTING
46	460007156	ADAPTER, CHARGING - MLG
47	460007169	COMPRESSOR - SPRING
48	460007174	PIN-GROUNDLOCK, MLG
49	460007229	ADAPTER - TORQUE
50	460007230	ADAPTOR - TORQUE
51	460007242	ADAPTOR-TORQUE REACTOR
52	460007253	SPANNER PIN
53	460007280	SLEEVE-GROUND LOCK
54	460007305	GAG - SHOCKABSORBER
55	460007316-5	CLAMP
56	460007334	REACTOR BOGIE
57	27504095000	SPANNER-TRUNNION NUT (TRK1)
58	04Y0006-001	SLEEVE THRUST REVERSER ACTUATOR (SAFETY)
59	04Y0008-001	DISENGAGEMENT TOOL (HOOK LOCK KEY)

60	060-72-00-8V272	VANE 7-8 STG. HOLDER-CMM
61	0S22406	ADJUSTING BROACH
62	0S22473	PRESS IN GUIDE
63	0S22489	PRESS IN GUIDE
64	0S23119	PLUG
65	0U141267	MOUNTING CONE
66	0U141853	MOUNTING CONE
67	0U141854	MOUNTING CONE
68	0U141859	MOUNTING CONE
69	0U141861	MOUNTING CONE
70	0U141879	PRECASTING BUSH
71	0U141883	PRECASTING BUSH
72	0U141884	MOUNTING CONE
73	0U141889	MOUNTING CONE
74	0U141937	ASSEMBLY TOOL
75	0U142144	TORQUE WRENCH ADAPTOR
76	0U142195	MOUNTING CONE
77	0U142216	SPECIAL JAWS
78	0U144729	MOUNTING CONE
79	0U144929	SEAL-GUIDE
80	0U144930	SEAL-ASSEMBLY TOOL
81	0U144932	SEAL-GUIDE
82	0U144934	SEAL-ASSEMBLY TOOL
83	0U144936	SEAL-GUIDE
84	0U144937	SEAL-GUIDE
85	0U144940	SEAL-GUIDE
86	0U144945	SEAL-GUIDE
87	0U144946	SEAL-GUIDE
88	0U144950	SEAL-ASSEMBLY TOOL
89	0U144953	SEAL-GUIDE
90	0U144955	SEAL-GUIDE
91	0U144956	SETTLING BLOCK
92	0U144957	SEAL-GUIDE
93	0U144958	SETTLING BLOCK
94	0U144960	SETTLING BLOCK
95	0U144962	SETTLING BLOCK
96	0U145409	SPECIAL WRENCH
97	0U145506	CONE-MOUNTING,THS ACTUATOR
98	0U145920	TOOL-MANUAL CRANKING STOP,THS ACTUATOR
99	0U147196	SEAL MOUNTING
100	0U147197	SEAL MOUNTING
101	0U147198	SEAL MOUNTING
102	0U147200	SEAL MOUNTING
103	0U147204	PRECASTING BUSH
104	0U147205	PRECASTING BUSH
105	0U147244	SEAL MOUNTING
106	0U190360	PIN-RIGGING,THS ACTUATOR,MECHANICAL INPUT LEVER
107	0U190364	OIL DRAINING TOOL
108	0U190484	SPECIAL WRENCH
109	0U190834	TOOL-ZERO POSITIONING,THS ACTUATOR
110	0U190844	TOOL-RELEASE,POB
111	0U190863	BACKLASH CHECKING TOOL-THS ACTUATOR
112	0U191191	CHECKING TOOL-BALL SCREW AND TIE BAR
113	0U192146	TORQUE WRENCH
114	0U300054	PRECASTING BUSH
115	0U300093	CHECKING TOOL FOR SLIDING TORQUE
116	0U300395	RIVETING TOOL
117	0U301727	SEAL GUIDE
118	1C6173G02	FIXTURE, LIFT - FWD POWER TURBINE
119	1C6806P06	HALF RING of TRUCKk, TRANS and STORAGE
120	1C6807G01	ADAPTER BRACKETS, AFT SHAFT - PT ROTOR
121	1C6839G01	BRACKET SET, SUB ASSEMBLY STAND - TRF

122	1C6859P10	PROTECTOR No. 7B BEARING
123	1C6864G03	DOLLY,ASSY/DISASSY PT-VERTICAL
124	1C6865G01	FIXTURE, LIFT - POWER TURBINE TURNOVER, FORWARD
125	1C6868G01	FIXTURE, DRIVE - POWER TURBINE
126	1C6896G01	FIXTURE, HOLDING - PTR to TRF
127	1C6909G01	FIXTURE, DROP CHECK - PT ROTOR, AFT
128	1C6950G04	ADAPTER, TORQUE
129	1C6950G05	ADAPTER, TORQUE
130	1C8127G01	FIXTURE, LIFT - FWD POWER TURBINE
131	1C8134G01	FIXTURE, INSTALL & REMOVE COMPR ROTOR HUB TIE
132	114-263	PRESSURE RELIEF VALVE PENETRATION TEST TOOL
133	114-264	TIRE AND WHEEL ASSEMBLY TOOL
134	114-265	WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
135	114-266	BEARING CUP REMOVAL AND INSTALLATION
136	114-268	BEARING CUP REMOVAL AND INSTALLATION
137	114-332	TOOL FOR INSTALLATION OF A TORQUE BAR HOLE REPAIR BUSHING
138	114-349	TOOL FOR A LEAK TEST OF THERMAL RELIEF PLUGS AND THE OVERINFLATION PLUG
139	114-369	R/I OF TORQUE PLATE BUSHING
140	114-370	BULLET FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
141	114-371	SUPPORT TOOL FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
142	114-374	TEST SHIMS
143	114-375	ASSEMBLly TOOL
144	114-429	CUP REMOVAL PLATE
145	114-441	INSPECTS LIP HEIGHT OF SEALS
146	114-452	BULLET FOR INSTALLATION OF ADJUSTER PINS INTO PISTONS
147	114-780-4	TOOL THAT SIZES BACKUP RINGS ON ADJUSTER SLEEVES
148	114-901	RIVETING ANVIL
149	114-902	RIVETING PEEN
150	114-1074	TOOL FOR ASSEMBLY OF THE WHEEL AND TIRE
151	114-1075	TOOL THAT HOLDS THE OUTER WHEEL HALF FOR REMOVAL OR INSTALLATION OF A BEARING CUP AND THE INNER
152	114-1076	TOOL THAT HOLDS THE INNER WHEEL HALF FOR REMOVAL OF THE BEARING CUP
153	114-1077	TOOL FOR A LEAK TEST OF THE OVERINFLATION PLUG
154	114-1078	TOOL FOR ASSEMBLY OF THE TIRE AND THE WHEEL
155	114-1079	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
156	114-1080	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
157	114-1086	BEARING CUP REMOVAL PLATE FOR INNER AND OUTER WHEEL HALVES
158	114-1087	BEARING CUP INSTALLATION PLATE FOR INNER WHEEL HALF
159	114-1088	BEARING CUP INSTALLATION PLATE FOR OUTER WHEEL HALF
160	114-1089	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
161	114-1090	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
162	114-1091	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
163	114-1092	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
164	114-1230	GREASE SEAL INSPECTION TOOL W/ CLAMP KNOB AND BOLT RETAINER
165	114-1274	TOOL FOR ASSEMBLY OF THE WHEEL AND TIRE
166	114-1276	OUTER WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
167	114-1277	INNER WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
168	114-1278	OUTER WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
169	114-1279	INNER WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
170	114-1280	OUTER WHEEL HALF (REMOVAL PLATE DIAMETER)
171	114-1281	INNER WHEEL HALF (REMOVAL PLATE DIAMETER)
172	114-1282	OUTER WHEEL HALF (INSTALLATION PLATE DIAMETER)
173	114-1283	INNER WHEEL HALF (INSTALLATION PLATE DIAMETER)
174	114-1424	WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
175	114-1307	TOOL FOR INSPECTION OF INNER GREASE SEAL
176	114-1308	TOOL FOR INSPECTION OF INNER GREASE SEAL
177	19ME65B00116	KIT - HANDLING OUTBOARD TRAILING EDGE FLAP
178	24ME65B00116	LOCK - INBOARD TRAILING EDGE FLAP
179	3MIT65B80190	LOCK - DOOR, WING LANDING GEAR
180	11MIT65B04012	ACTUATOR LOCK - NLG DOOR
181	25-6Y1663A	SPANNER
182	290435-1-1	ADAPTER
183	2C14029	PULLER, LP TURB MODULE

184	2C14029G01	PULLER, LP TURB MODULE
185	2C14029G02	PULLER, LP TURB MODULE
186	2C14029G03	PULLER, LP TURB MODULE
187	2C14029G04	PULLER, LP TURB MODULE
188	2C14030G04	FIXTURE LIFT AND TURN - CORE ENGINE, AFT
189	2C14040	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
190	2C14040G01	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
191	2C14040G02	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
192	2C14040G03	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
193	2C14040G04	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
194	2C14040G05	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
195	2C14040G06	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
196	2C14040G07	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
197	2C14040G08	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
198	2C14052	FIXTURE, LIFT & TURN - LPT
199	2C14052G01	FIXTURE, LIFT & TURN - LPT
200	2C14052G02	FIXTURE, LIFT & TURN - LPT
201	2C14052G03	FIXTURE, LIFT & TURN - LPT
202	2C14052G04	FIXTURE, LIFT & TURN - LPT
203	2C14052G05	FIXTURE, LIFT & TURN - LPT
204	2C14092	WRENCH, STARTER-LPT
205	2C14092G01	WRENCH, STARTER-LPT
206	2C14092G02	WRENCH, STARTER-LPT
207	2C14093G03	WRENCH COUPLING NUT - LOW PRESSURE TURBINE MIDSHAFT
208	2C14131	FIXTURE, SEATING CHECK HP TURB
209	2C14131G01	FIXTURE, SEATING CHECK HP TURB
210	2C14131G02	FIXTURE, SEATING CHECK HP TURB
211	2C14186	FIXTURE, LIFT/TURB-CORE MODULE
212	2C14186G01	FIXTURE, LIFT/TURB-CORE MODULE
213	2C14186G02	FIXTURE, LIFT/TURB-CORE MODULE
214	2C14186G03	FIXTURE, LIFT/TURB-CORE MODULE
215	2C14193G03	STAND, SHIPPING/STORAGE HIGH PRESSURE TURBINE MODULE
216	2C14199G07	FIXTURE, INSTALL AND REMOVE - HP TURBINE MODULE ASSEMBLY
217	2C14220	FIXTURE, LIFT-HP TURB HORIZONTAL
218	2C14220G01	FIXTURE, LIFT-HP TURB HORIZONTAL
219	2C14220G02	FIXTURE, LIFT-HP TURB HORIZONTAL
220	2C14222	STAND, INSTALL/REMOVE-HP TURB RTR
221	2C14222G01	STAND, INSTALL/REMOVE-HP TURB RTR
222	2C14227G02	DOLLY, SUB-ASSEMBLIES - FRAMES
223	2C14240	FIXTURE, RUNOUT - HPC
224	2C14240G01	FIXTURE, RUNOUT - HPC
225	2C14241	GUIDE, COOLING AIR TUBE
226	2C14241G01	GUIDE, COOLING AIR TUBE
227	2C14602	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
228	2C14602G01	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
229	2C14602G02	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
230	2C14602G03	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
231	2C14650	WRENCH, RETAINER NUT-INNER RACE NO 6 BEARING
232	2C14650G01	WRENCH, RETAINER NUT-INNER RACE NO 6 BEARING
233	2C14686	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
234	2C14686G01	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
235	2C14686G02	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
236	2C14686G03	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
237	2C14686G04	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
238	2C14686G05	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
239	2C14726G01	ADAPTOR SET PEDESTAL SET CF6-80C2
240	2C14726G02	ADAPTOR SET PEDESTAL SET CF6-80C2
241	2C14726G03	ADAPTOR SET PEDESTAL SET CF6-80C2
242	2C14726G04	ADAPTOR SET PEDESTAL SET CF6-80C2
243	2C14726G05	ADAPTOR SET PEDESTAL SET CF6-80C2
244	2C14729	ADAPTER SET PEDESTAL ENGINE AFT
245	2C14729G01	ADAPTER SET PEDESTAL ENGINE AFT

246	2C18012	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
247	2C18012G01	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
248	2C18012G02	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
249	2C14682G01	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
250	2C14682G02	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
251	2C14682G03	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
252	2C14682G04	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
253	2C6122	FIXTURE,R/I-FWD FAN SHAFT BOLTS
254	2C6122G01	FIXTURE,R/I-FWD FAN SHAFT BOLTS
255	2C6122G02	FIXTURE,R/I-FWD FAN SHAFT BOLTS
256	2C6339	SUPPORT - ENGINE HANDLING
257	2C6339G01	SUPPORT - ENGINE HANDLING
258	2C6339G02	SUPPORT - ENGINE HANDLING
259	2C6339G03	SUPPORT - ENGINE HANDLING
260	2C6339G04	SUPPORT - ENGINE HANDLING
261	2C6339G05	SUPPORT - ENGINE HANDLING
262	2C6339G06	SUPPORT - ENGINE HANDLING
263	2C6352G01	WRENCH SET, SPANNER-AIRTUBE NUTS
264	2C6352G02	WRENCH SET, SPANNER-AIRTUBE NUTS
265	2C6352G03	WRENCH SET, SPANNER-AIRTUBE NUTS
266	2C6352G04	WRENCH SET, SPANNER-AIRTUBE NUTS
267	2C6352G05	WRENCH SET, SPANNER-AIRTUBE NUTS
268	2C6352G06	WRENCH SET, SPANNER-AIRTUBE NUTS
269	2C6352G07	WRENCH SET, SPANNER-AIRTUBE NUTS
270	2C6613G01	GAGE, IMMERSION DEPTH - IGNITER PLUG
271	2C6823G01	PULLER, MANIFOLD-NO.I BRG.
272	2C6856G04	FIXTURE, LIFT - FAN ROTOR SUB-ASSEMBLY
273	2C6894	REMOVAL,TOOL-FAN SPINNER
274	2C6894G01	REMOVAL,TOOL-FAN SPINNER
275	2C6894G02	REMOVAL,TOOL-FAN SPINNER
276	2C6894G03	REMOVAL,TOOL-FAN SPINNER
277	2C6894G04	REMOVAL,TOOL-FAN SPINNER
278	2C8073	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
279	2C8073G01	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
280	2C8073G02	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
281	2C8073G03	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
282	2C8073G04	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
283	2C8073G05	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
284	2ME140W9255	CRADLE TOOL
285	460002661-2	TEST ADAPTER
286	460002661-3	TEST ADAPTER
287	4MIT65B80307-1	PROTRACTOR ASSEMBLY-CONTROL COLUMN
288	6MIT65B04002	SPANNER WRENCH SOCKET
289	558-1-05845	HEXAGON DRIVER
290	558-1-05846	TORQUE WRENCH ADAPTER
291	558-1-05903-002	EXTRACTOR-FUEL PUMP
292	56724S0000	SPANNER SET
293	57759A0000-01	WRENCH, SPECIAL
294	5952169-5	PIN ASSY
295	5952169-7	PIN ASSY
296	5952169-9	PIN ASSY
297	5952169-11	RIGPIN
298	5952169-13	SAFETY PIN
299	5952169-15	PIN
300	5952169-17	RIG PIN
301	5952169-19	PIN
302	5952169-21	PIN
303	5952169-23	RIG PIN
304	5952169-25	PIN
305	5952169-27	PIN RIGGING
306	5952169-29	RIG PIN
307	5952169-31	RIG PIN

308	5952169-33	RIG PIN
309	5952169-37	RIG PIN
310	5952169-71	RIG PIN
311	5952169-77	RIG PIN
312	5952169-79	RIG PIN
313	5952169-81	RIG PIN
314	5952169-83	RIG PIN
315	5952169-85	PIN
316	5952169-99	PIN
317	5E92-0300	PROTECTOR-AXLE,MLG
318	636GSE3009-901	TR HOLD OPEN STRUT TO PYLON
319	6026-4102	PROTECTOR - NLG WHEEL AXLE
320	6260-0003	SPANNER - NLG AXLE NUT
321	701-2978000	PIN-RIGGING
322	713292	TRANSDUCER EXTRACTOR
323	7ME65-73761-1	SPANNER WRENCH FWD TRUNNION
324	7MIT5-88439	WRENCH GEAR RETAINER STAB TRIM
325	833564-2	DRIVER INSTALLATION SEAL
326	852D102/4	TOOL, FLAP ACTUATORSB 27-069
327	856A1007G01	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
328	856A1007G02	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
329	856A1007G03	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
330	856A1007G04	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
331	856A1007G05	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
332	856A1008G01	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
333	856A1008G02	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
334	856A1008G03	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
335	856A1008G04	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
336	856A1009G01	ADAPTER, VERTICAL LIFT FIXTURE
337	856A1009G02	ADAPTER, VERTICAL LIFT FIXTURE
338	856A1010G01	WRENCH, RATCHET - COMPRESSOR ROTOR INTERNAL NUT
339	856A1015G01	SLING - FRAMES
340	856A1016G01	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
341	856A1016G02	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
342	856A1016G03	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
343	856A1016G05	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
344	856A1017G01	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
345	856A1017G02	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
346	856A1017G03	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
347	856A1017G04	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
348	856A1018G01	STAND, SUB - ASSEMBLY - FRAMES
349	856A1018G02	STAND, SUB - ASSEMBLY - FRAMES
350	856A1018G03	STAND, SUB - ASSEMBLY - FRAMES
351	856A1020G01	FIXTURE, RESTRAINING - CORE MODULE AFT
352	856A1020G02	FIXTURE, RESTRAINING - CORE MODULE AFT
353	856A1020G03	FIXTURE, RESTRAINING - CORE MODULE AFT
354	856A1020G04	FIXTURE, RESTRAINING - CORE MODULE AFT
355	856A1020G05	FIXTURE, RESTRAINING - CORE MODULE AFT
356	856A1020G06	FIXTURE, RESTRAINING - CORE MODULE AFT
357	856A1020G07	FIXTURE, RESTRAINING - CORE MODULE AFT
358	856A1020G08	FIXTURE, RESTRAINING - CORE MODULE AFT
359	856A1021G01	FIXTURE, LIFT & TURN - COMPRESSOR ROTOR ASSY
360	856A1021G02	FIXTURE, LIFT & TURN - COMPRESSOR ROTOR ASSY
361	856A1028G01	FIXTURE, LIFT - C/R STAGE 1-2 SPOOL, AFT, AND STG 4-9 SPOOL, FWD
362	856A1027G01	FIXTURE, LIFT - C/R STG 3 DISK AND BLADES
363	856A1034G01	WRENCH - 35-TOOTH BEVEL GEAR LOCKNUT
364	856A1038G01	FIXTURE, INSTALLATION - IGB BEARING and SPACER
365	856A1039G01	ADAPTER - INLET GEARBOX TO POWER ARM
366	856A1042G01	WRENCH, TORQUE - NO 4 BRG RETAINER
367	856A1042G02	WRENCH, TORQUE - NO 4 BRG RETAINER
368	856A1042G03	WRENCH, TORQUE - NO 4 BRG RETAINER
369	856A1042G04	WRENCH, TORQUE - NO 4 BRG RETAINER

370	856A1042G05	WRENCH, TORQUE - NO 4 BRG RETAINER
371	856A1042G06	WRENCH, TORQUE - NO 4 BRG RETAINER
372	856A1042G07	WRENCH, TORQUE - NO 4 BRG RETAINER
373	856A1042G08	WRENCH, TORQUE - NO 4 BRG RETAINER
374	856A1050G01	FIXTURE, INSPECT SHIMMING INLET GEARBOX
375	856A1050G02	FIXTURE, INSPECT SHIMMING INLET GEARBOX
376	856A1050G03	FIXTURE, INSPECT SHIMMING INLET GEARBOX
377	856A1050G04	FIXTURE, INSPECT SHIMMING INLET GEARBOX
378	856A1051G01	PULLER ARM - COMPRESSOR
379	856A1051G02	PULLER ARM - COMPRESSOR
380	856A1052G01	FIXTURE - PRECISION BUILDUP/RUNOUT
381	856A1052G02	FIXTURE - PRECISION BUILDUP/RUNOUT
382	856A1052G03	FIXTURE - PRECISION BUILDUP/RUNOUT
383	856A1052G04	FIXTURE - PRECISION BUILDUP/RUNOUT
384	856A1052G05	FIXTURE - PRECISION BUILDUP/RUNOUT
385	856A1056G05	FIXTURE, GRIND - COMPRESSOR STATOR FLOWPATH
386	856A1057G01	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
387	856A1057G02	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
388	856A1057G03	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
389	856A1057G04	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
390	856A1061G01	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
391	856A1061G02	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
392	856A1061G03	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
393	856A1062G01	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
394	856A1062G02	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
395	856A1062G03	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
396	856A1063G01	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
397	856A1063G02	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
398	856A1063G03	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
399	856A1063G04	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
400	856A1063G05	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
401	856A1063G06	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
402	856A1063G07	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
403	856A1070G01	FIXTURE, SPLINE BOLT REMOVAL
404	856A1070G02	FIXTURE, SPLINE BOLT REMOVAL
405	856A1071G01	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
406	856A1071G02	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
407	856A1071G03	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
408	856A1071G04	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
409	856A1071G05	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
410	856A1071G06	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
411	856A1072G01	TRUCK, COMPRESSOR ROTOR, HORIZONTAL
412	856A1072G02	TRUCK, COMPRESSOR ROTOR, HORIZONTAL
413	856A1072G03	TRUCK, COMPRESSOR ROTOR, HORIZONTAL
414	856A1072G04	TRUCK, COMPRESSOR ROTOR, HORIZONTAL
415	856A1074G01	FIXTURE, CHILL RETAINER
416	856A1074G02	FIXTURE, CHILL RETAINER
417	856A1075G01	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
418	856A1075G02	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
419	856A1075G03	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
420	856A1081G01	DOLLY, CORE MODULE - HORIZONTAL
421	856A1081G02	DOLLY, CORE MODULE - HORIZONTAL
422	856A1081G03	DOLLY, CORE MODULE - HORIZONTAL
423	856A1081G04	DOLLY, CORE MODULE - HORIZONTAL
424	856A1081G05	DOLLY, CORE MODULE - HORIZONTAL
425	856A1083G01	FIXTURE- LIFT AND TURN CORE MODULE
426	856A1083G02	FIXTURE- LIFT AND TURN CORE MODULE
427	856A1084G01	ACTUATOR PORTABLE HYDRAULIC
428	856A1084G02	VBV / VSV TEST SET
429	856A1084G03	ACTUATOR PORTABLE HYDRAULIC
430	856A1084G04	ACTUATOR PORTABLE HYDRAULIC
431	856A1084G04-1	HOSE ASSEMBLY

432	856A1086G02	STAND, ASSEMBLY - CORE SECTION
433	856A1093G01	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
434	856A1093G02	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
435	856A1093G03	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
436	856A1102G01	ADAPTER, HORIZONTAL LIFT-FIXTURE
437	856A1102G02	ADAPTER, HORIZONTAL LIFT-FIXTURE
438	856A1102G03	ADAPTER, HORIZONTAL LIFT-FIXTURE
439	856A1103G01	LIFT-HPT NOZZLE ASSEMBLY FIX
440	856A1110G01	INSTALLATION STAND
441	856A1110G02	INSTALLATION STAND
442	856A1110G03	INSTALLATION STAND
443	856A1110G04	INSTALLATION STAND
444	856A1110G05	INSTALLATION STAND
445	856A1112G01	STAND, INSTALLATION-REAR COMPRESSOR STATOR
446	856A1112G02	STAND, INSTALLATION-REAR COMPRESSOR STATOR
447	856A1115G01	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
448	856A1115G02	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
449	856A1115G03	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
450	856A1115G04	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
451	856A1115G05	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
452	856A1115G06	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
453	856A1115G07	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
454	856A1115G08	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
455	856A1117G01	FIXTURE, LIFT - HPTR HORIZONTAL
456	856A1117G02	FIXTURE, LIFT - HPTR HORIZONTAL
457	856A1117G03	FIXTURE, LIFT - HPTR HORIZONTAL
458	856A1126G01	DRIVER SET HPC
459	856A1126G02	DRIVER SET HPC
460	856A1126G03	DRIVER SET HPC
461	856A1126G04	DRIVER SET HPC
462	856A1130G01	TOOL SET JACKSCREW
463	856A1130G02	TOOL SET JACKSCREW
464	856A1130G03	TOOL SET JACKSCREW
465	856A1130G04	TOOL SET JACKSCREW
466	856A1130G05	TOOL SET JACKSCREW
467	856A1130G06	TOOL SET JACKSCREW
468	856A1130G07	TOOL SET JACKSCREW
469	856A1130G08	TOOL SET JACKSCREW
470	856A1130G09	TOOL SET JACKSCREW
471	856A1130G10	TOOL SET JACKSCREW
472	856A1140G01	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
473	856A1140G02	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
474	856A1140G03	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
475	856A1140G04	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
476	856A1140G05	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
477	856A1140G06	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
478	856A1156G01	PYLON IND-CPRSR
479	856A1157G01	FIXTURE, LIFT-VARIABLE C G GEN. PURPOSE, HEAVY
480	856A1157G02	FIXTURE, LIFT-VARIABLE C G GEN. PURPOSE, HEAVY
481	856A1196G01	FIXTURE, LIFT AND TURN - COMB CASE FWD (LIFT AND TURN FIXTURE)
482	856A1196G02	FIXTURE, LIFT AND TURN - COMB CASE FWD (LIFT AND TURN FIXTURE)
483	856A1199P01	RESTRAINER, BOLT-HPC TO CDP
484	856A1204G01	FIXTURE, REMOVAL - HPCR
485	856A1216G01	PULLER-NO4 BEARING OUTER RACE, OIL SEAL & AIR DUCT
486	856A1216G02	PULLER
487	856A1225G01	BASE, INSPECTION - HP TURB RUN-OUT
488	856A1266G01	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
489	856A1266G02	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
490	856A1266G03	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
491	856A1266G04	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
492	856A1266G05	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE
493	856A1266G06	PIN, ALINGMENT, HIGH PRESSURE COMPRESSOR CASE

494	856A1281G01	FIXT VERT LIFT HPT FWD OUTER SEAL
495	856A1281G02	FIXT VERT LIFT HPT FWD OUTER SEAL
496	856A1290G01	FIXTURE, CORE ENGINE SUPPORT, ROTATION AND RUNOUT
497	856A1291G01	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
498	856A1291G02	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
499	856A1291G03	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
500	856A1291G04	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
501	856A1291G05	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
502	856A1291G06	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
503	856A1291G07	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
504	856A1291G08	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
505	856A1291G09	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
506	856A1291G10	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
507	856A1308G01	PULLER-HP TURB ROTOR FWD OUTER SEAL
508	856A1308G02	PULLER-HP TURB ROTOR FWD OUTER SEAL
509	856A1310G01	TOOL, KIT – BOR ESCOPE GUIDE, HP TURBINE
510	856A1310P02	GE GUIDE TUBE
511	856A1312G01	SUPPORT ENGINE HANDLING
512	856A1312G02	SUPPORT ENGINE HANDLING
513	856A1312G03	SUPPORT ENGINE HANDLING
514	856A1312G04	SUPPORT ENGINE HANDLING
515	856A1312G05	SUPPORT ENGINE HANDLING
516	856A1312G06	SUPPORT ENGINE HANDLING
517	856A1312G07	SUPPORT ENGINE HANDLING
518	856A1312G08	SUPPORT ENGINE HANDLING
519	856A1312P13	PEDESTAL EXTENSION COLUMN
520	856A1313G01	RING, ENGINE HANDLING SUPPORT
521	856A1313G02	RING, ENGINE HANDLING SUPPORT
522	856A1313G03	RING, ENGINE HANDLING SUPPORT
523	856A1313G04	RING, ENGINE HANDLING SUPPORT
524	856A1314G01	BRACKET SET SUPPORT C+F MILLIER 4 OFF
525	856A1332G01	FIXT LIFT & TURN CORE FWD
526	856A1334G01	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
527	856A1334G02	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
528	856A1334G03	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
529	856A1334G04	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
530	856A1342G01	FIXTURE, PRESEAT - VSV LEVER ARMS
531	856A1351P01	GUIDE TUBE, BORESCOPE - HP TURB SHROUD
532	856A1356G02	FIXTURE, LIFT - HPCR STAGE 1 THRU 2 SPOOL, FORWARD
533	856A1364G01	SET-PRINT, IDENTIFICATION, MAGNETIC CHIP DETECTOR
534	856A1364G02	SET-PRINT, IDENTIFICATION, MAGNETIC CHIP DETECTOR
535	856A1377G01	FIXTURE, LIFT AND TURN - HPTS/LPTN ASSEMBLY
536	856A1377G02	FIXTURE, LIFT AND TURN - HPTS/LPTN ASSEMBLY LIFT
537	856A1380G01	PULLER
538	856A1381G01	PULLER, OUTER AIR DUCTS
539	856A1382G01	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
540	856A1382G02	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
541	856A1382G03	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
542	856A1382G04	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
543	856A1382G05	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
544	856A1382G06	PROTECTOR, HPT SHROUD LPTN ASSEMBLY STUD
545	856A1384G01	HPT SHROUD RETAINING CLIP REM.
546	856A1384G02	TOOL-REMOVAL, RETAINING CLIP, HPT SHROUD
547	856A1386G01	FIXTURE, LIFT - HPT NOZZLE
548	856A1386G02	FIXTURE, LIFT - HPT NOZZLE
549	856A1386G03	FIXTURE, LIFT - HPT NOZZLE
550	856A1386G04	FIXTURE, LIFT - HPT NOZZLE
551	856A1387G01	GAGE
552	856A1389G01	FIXTURE, INSTALL - No. 4 BRG OUTER RACE
553	856A1394G01	FIXTURE - LIFT ADJ C/G GEN PURPOSE
554	856A1394G02	FIXTURE - LIFT ADJ C/G GEN PURPOSE
555	856A1394G03	FIXTURE - LIFT ADJ C/G GEN PURPOSE

556	856A1396G01	FIXTURE
557	856A1404G01	FIXTURE, PRECISION BUILDUP & RUNOUT - HP TURBINE ROTOR
558	856A1411G01	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
559	856A1411G02	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
560	856A1411G03	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
561	856A1411G04	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
562	856A1411G05	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
563	856A1412G06	FIXTURE ASSL./DISASSEMBL. MOD.6 (5B/7B)
564	856A1417G01	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
565	856A1417G02	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
566	856A1417G03	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
567	856A1417G04	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
568	856A1418G01	FIXT HPT SHROUD HANGER
569	856A1418G02	FIXT HPT SHROUD HANGER
570	856A1421G01	FIXTURE, LIFT HPC STATOR FWD CASE
571	856A1421G02	FIXTURE LIFT HP COMPR STATOR CASE
572	856A1423G01	FIXTURE, RETRAINING-CORE MODULE, AFT
573	856A1423G02	FIXTURE, RETRAINING-CORE MODULE, AFT
574	856A1423G03	FIXTURE, RETRAINING-CORE MODULE, AFT
575	856A1423G04	FIXTURE, RETRAINING-CORE MODULE, AFT
576	856A1423G05	FIXTURE, RETRAINING-CORE MODULE, AFT
577	856A1423G06	FIXTURE, RETRAINING-CORE MODULE, AFT
578	856A1423G07	FIXTURE, RETRAINING-CORE MODULE, AFT
579	856A1423G08	FIXTURE, RETRAINING-CORE MODULE, AFT
580	856A1424G01	FIXTURE LIFT COMBUSTION VERT & HORIZ
581	856A1424G02	FIXTURE LIFT COMBUSTION VERT & HORIZ
582	856A1424G03	FIXTURE LIFT COMBUSTION VERT & HORIZ
583	856A1424G04	FIXTURE LIFT COMBUSTION VERT & HORIZ
584	856A1428G01	TOOL SET, INSTALL/REMOVE - NO. 3 BEARING OUTER RACE AND SPANNER NUT
585	856A1429G02	PULLER, NO 3 BALL AND ROLLER BEARING INNER RACES
586	856A1430G02	FIXTURE, HOLDING - IGB MODULE
587	856A1433G01	TOOL, TORQUING- HPT STATOR MANIFOLD BUSHING
588	856A1433G02	TOOL, TORQUING- HPT STATOR MANIFOLD BUSHING
589	856A1469G01	WRENCH SET MEC FUEL PUMP NUTS
590	856A1469G02	WRENCH SET HMU/MEC/FUEL PUMP
591	856A1491G01	BRACKET SET, HANDLING - COMPRESSOR MID FLANGE
592	856A1491G02	BRACKET SET, HANDLING - COMPRESSOR MID FLANGE
593	856A1492G01	FIXTURE, REMOVAL - HP TURB FWD SHAFT BOLTS
594	856A1492G02	FIXTURE, REMOVAL - HP TURB FWD SHAFT BOLTS
595	856A1520G01	CHILLING, KIT HPTR & HPCR ASSEMBLY PROCEDURE
596	856A1520G02	CHILLING, KIT HPTR & HPCR ASSEMBLY PROCEDURE
597	856A1600G01	RETAINER, SLAVE BLADE- H P TURB ROTOR
598	856A1604G01	FIXTURE. REMOVAL - BOLT INNER NOZZLE SUPPORT
599	856A1604G02	FIXTURE. REMOVAL - BOLT INNER NOZZLE SUPPORT
600	856A1606G01	PROTECTOR STUDS HPT
601	856A1607G01	FIXT LIFT COMB CHAMBER
602	856A1607G02	FIXTURE, LIFT - COMBUSTION CHAMBER /HPT NOZZLE
603	856A1611G01	ENGINE PEDESTAL BRACKET SET
604	856A1800G01	BRACKET SET, SUPPORT - TURBINE, REAR FRAME FORWARD FLANGE
605	856A1800G02	BRACKET SET, SUPPORT - TURBINE, REAR FRAME FORWARD FLANGE
606	856A1801G01	RING, SUPPORT-ENGINE HANDLING
607	856A1801G02	RING, SUPPORT-ENGINE HANDLING
608	856A1801G03	RING, SUPPORT-ENGINE HANDLING
609	856A1805G01	GUIDE-FAN FRAME
610	856A1812G01	FIXTURE, ASSEMBLY/DISASSEMBLY - HPT NOZZLE, STAGE 1 (FIXTURE)
611	856A1812G02	FIXTURE, ASSEMBLY/DISASSEMBLY - HPT NOZZLE, STAGE 1 (FIXTURE)
612	856A1820G01	FIXTURE SUPPORT HP COMPR ROTOR ASSY STACK PROJECTION
613	856A1827G01	SET - ADAPTER, TORQUE HYDROMECHANICAL UN & MN FUEL PUMP NUTS
614	856A1832G01	FIXTURE, LIFT/TURN - CORE ENGINE, FWD
615	856A1836G01	TOOL-ADAPTOR,MAINT STAND
616	856A1839G01	FIXTURE, DISASSEMBLY - HIGH PRESSURE TURBINE ROTOR/HIGH PRESSURE COMPRESSOR ROTOR
617	856A1845G01	FIXTURE, ALIGNING HIGH PRESSURE COMPRESSOR

618	856A1845G02	FIXTURE, ALIGNING-HIGH PRESSURE COMPRESSOR
619	856A1845G03	FIXTURE, ALIGNING-HIGH PRESSURE COMPRESSOR
620	856A1865G01	FIXTURE, TORQUE – BRG 3
621	856A1865G04	FIXTURE, TORQUE - BRG 3
622	856A1868G01	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
623	856A1868G02	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
624	856A1868G03	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
625	856A1869G01	FIXTURE, PUSH/PULL – HP TURB ROTOR, AFT, BLADE RETAINER
626	856A1897G01	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
627	856A2308G01	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
628	856A2308G02	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
629	856A2310G01	ALIGNMENT FIXTURE - BOOSTER/LPT SHAFT
630	856A2310G02	ALIGNMENT FIXTURE - BOOSTER/LPT SHAFT
631	856A2316G01	WRENCH TORQUE LPT CPLG NUT
632	856A2351G01	TOOL SET, HANDLING SECTOR - TURBINE FRAME MAINTENANCE MODULE
633	856A2357G01	FIXTURE RESTRAINING LPT. ROTOR TO STATOR
634	856A2390G01	WRENCH BOLT DISK 1,2,3,5
635	856A2425G01	FIXTURE, RESTRAINING - LTP ROTOR TO STATOR
636	856A2501G01	RATCHET WRENCH DUAL PURPOSE
637	856A2524G01	FIXTURE, HANDLING - LPT MAJOR MODULE
638	856A2524G03	FIXTURE, HANDLING - LPT MAJOR MODULE
639	856A2537G01	PROTECTOR MOUNTING PIN
640	856A2540G01	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
641	856A2540G02	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
642	856A2540G03	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
643	856A2540G04	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
644	856A2548G01	DOLLY, STORAGE AND ASSEMBLY/DISASSEMBLY. LPT SHAT MODULE
645	856A2567G01	EYE LIFT
646	856A2568G01	LIFTING EYE - AFT LPT SHAFT
647	856A2575G01	STAND, STORAGE _LPT
648	856A2575G02	STAND, STORAGE _LPT
649	856A2611G01	PULLER, LP TURBINE
650	856A2618G01	FIXTURE, HOLDING-ROTOR/STATOR
651	856A2618G02	FIXTURE, HOLDING-ROTOR/STATOR
652	856A2618G03	FIXTURE, HOLDING-ROTOR/STATOR
653	856A2618G04	TUBE DUMMY LPT SHAFT FWD END
654	856A2625G01	STAND, STORAGE MODULE 1
655	856A2626G01	STAND, STORAGE - MODULE 2
656	856A2626G02	STAND, STORAGE - MODULE 2
657	856A2627G01	LIFTING BEAM
658	856A2627G02	LIFTING BEAM
659	856A2627G03	LIFTING BEAM
660	856A2627G04	LIFTING BEAM
661	856A2627G05	LIFTING BEAM
662	856A2627G06	LIFTING BEAM
663	856A2631G01	STAND, STORAGE BLADE
664	856A2632G01	PULLER - ADAPTER, COMPONENT REMOVAL
665	856A2644G01	FAN DISK HOLDING TOOL
666	856A2644G02	FAN DISK HOLDING TOOL
667	856A2644G03	FAN DISK HOLDING TOOL
668	856A2645G01	BEAM, VARIABLE CG - ENGINE
669	856A2645G02	BEAM, VARIABLE CG - ENGINE
670	856A2645G03	BEAM, VARIABLE CG - ENGINE
671	856A2645G04	BEAM, VARIABLE CG - ENGINE
672	856A2645G05	BEAM ,LIFTING
673	856A2645G06	BEAM, VARIABLE CG - ENGINE
674	856A2646G01	DOLLY TRUNNION TURBINE FRAME MAINTENANCE MODULE
675	856A2647G01	STAND, MOBILE - HORIZONTAL MOD 3 STORAGE
676	856A2647G02	STAND, MOBILE - HORIZONTAL MOD 3 STORAGE
677	856A2651G01	SUPPORT # PAD SUPPORT ENGINE
678	856A2651G02	SUPPORT # PAD SUPPORT ENGINE
679	856A2661G01	PULLER, AFT ROTATING AIR/OIL SEPARATOR

680	856A2664G01	GAGE, SETTING - VARIABLE BLEED VALVE DOORS
681	856A2667G01	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
682	856A2667G02	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
683	856A2667G03	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
684	856A2667G04	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
685	856A2667G05	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
686	856A2667G06	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
687	856A2668G01	KIT, PULLER ADAPTERS
688	856A2668G02	KIT, PULLER ADAPTERS
689	856A2673G02	TOOL,INSTALL ENRSEAL
690	856A2674G01	PROTECTION COVER LPT SHAFT
691	856A2677G01	FIXTURE - REMOVAL AND INSTALLATION, REMOVABLE RETAINING RING
692	856A2683G01	DETECTOR: CHIP,MAGNETIC
693	856A2690G01	ALIGNEMENT FIXTURE - N° 1 & N°2 BRG
694	856A2691G01	FAN BLADE SPACER PLIERS
695	856A2691G02	FAN BLADE SPACER PLIERS
696	856A2702G01	PINS GUIDE NO5 BEARING SUPPORT
697	856A2709G01	FORWARD SUPPORT
698	856A2713G01	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
699	856A2713G02	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
700	856A2713G03	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
701	856A2713G04	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
702	856A2713G05	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
703	856A2713G06	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
704	856A2713G07	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
705	856A2714G01	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
706	856A2714G02	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
707	856A2714G03	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
708	856A2714G04	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
709	856A2716G01	RING DISTRIBUTION TORQUE
710	856A2717G01	CORE ENGINE LOCK ADAPTER
711	856A2718G01	INS/REM SET - AGB MANUAL DRIVE
712	856A2718G02	INS/REM SET - AGB MANUAL DRIVE
713	856A2718G03	INS/REM SET - AGB MANUAL DRIVE
714	856A2718G04	INS/REM SET - AGB MANUAL DRIVE
715	856A2719G01	FIXT SUPPORT R/I TGB
716	856A2719G02	FIXT SUPPORT R/I TGB
717	856A2719G03	FIXT SUPPORT R/I TGB
718	856A2726G01	TURNBUCKLE-TGB/AGB
719	856A2727G01	PULLER, RADIAL DRIVE SHAFT
720	856A2752G01	HOOKS, RESTRAIN AIR SEAL TO LPT DISK 2 AND 4
721	856A2752G02	HOOKS, RESTRAIN AIR SEAL TO LPT DISK 2 AND 4
722	856A2754G01	SUPPORT -AGB
723	856A2764G01	HEATER - LPT FWD ROTATING OIL SEAL
724	856A2764G02	HEATER - LPT FWD ROTATING OIL SEAL
725	856A2764G03	HEATER - LPT FWD ROTATING OIL SEAL
726	856A2764G04	HEATER - LPT FWD ROTATING OIL SEAL
727	856A2775G01	PULLER - OIL SUMP ASSEMBLY AND AIR HEATER COVER
728	856A2783G01	FIXTURE, SYSTEM BALANCING, BOOSTER
729	856A2783G02	FIXTURE, SYSTEM BALANCING, BOOSTER
730	856A2784G01	DOLLY, SYSTEM BALANCING, BOOSTER
731	856A2784G02	DOLLY, SYSTEM BALANCING, BOOSTER
732	856A2819G01	BEAM PUSHER / PULLER ADAPTATION
733	856A2820G01	BEAM TORQUE ADAPTION
734	856A2822G01	#4 BEARING RETAINER TORQUE FIXTURE
735	856A2822G02	#4 BEARING RETAINER TORQUE FIXTURE
736	856A2789G01	RING, CENTERING ROTATING REAR AIR SEAL ON LPT SHAFT
737	856A2789G02	RING, CENTERING ROTATING REAR AIR SEAL ON LPT SHAFT
738	856A2903G01	BEAM, TORQUE ADAPTATION
739	856A2904G01	FIXTURE, HANDLING - BOOSTER ROTOR/STATOR ASSEMBLY
740	856A2904G02	FIXTURE, HANDLING - BOOSTER ROTOR/STATOR ASSEMBLY
741	856A2905G01	WRENCH, TORQUE/LOOSEN - FAN DISK COUPLER (WRENCH)

742	856A2905G02	WRENCH, TORQUE/LOOSEN - FAN DISK COUPLER (WRENCH)
743	856A2906G01	GUIDE,COUNTERTORQ WRENCH
744	856A2906G02	GUIDE,COUNTERTORQ WRENCH
745	856A2943G01	SLEEVE, PROTECTION-REAR INNER ROTATING AIR/OIL SEAL
746	856A2954G01	PULLER - SPACERS, FAN BLADE
747	856A2954G02	PULLER - SPACERS, FAN BLADE
748	856A2954P02	HOOK
749	856A2954P02B	HOOK
750	856A2956G01	TOOL - ASSISTANCE, FAN BLADE, RETAINING RING
751	856A2956P04	BOLT (PULLER – SPACERS FAN BLADE)
752	856A2961G01	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
753	856A2961G02	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
754	856A2961G03	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
755	856A2969G01	TOOL SET, TARGET - HANDLING SEAL
756	856A2969G02	TOOL SET, TARGET - HANDLING SEAL
757	856A2976G02	ASSY/DISASSY FIXTURE - LPT VANES STG3
758	856A2978G01	FIXTURE, HANDLING-LPT ROTOR/STATOR
759	856A2980G01	FIXTURE, TORQUE-CENTER VENT TUBE SPACER SLEEVE NUT
760	856A2984G01	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
761	856A2984G02	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
762	856A2985G01	DRIVE ADAPTER - BOOSTER LPT SHAFT
763	856A2986G01	GUIDE BOOSTER ALIGNMENT FIXTURE
764	856A2986G02	GUIDE BOOSTER ALIGNMENT FIXTURE
765	856A2990G01	BEAM PUSHER / PULLER ADAPTATION
766	856A2993G01	GAGE, SEATING CHECK-CORE MODULE TO IGB
767	856A2994G01	BACKUP TORQUE TOOL
768	856A3030G01	EYE LIFT
769	856A3057G01	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
770	856A3057G02	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
771	856A3057G03	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
772	856A3057G04	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
773	856A3057G05	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
774	856A3057G06	FIXTURE, TORQUE - CENTER VENT TUBE SPACER SL. NUT
775	856A3062G01	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
776	856A3062G02	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
777	856A3062G03	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
778	856A3100G01	PIN, LOCATING CENTER VENT TUBE
779	856A3100G02	PIN, LOCATING CENTER VENT TUBE
780	856A3100G03	PIN, LOCATING CENTER VENT TUBE
781	856A3100G04	PIN, LOCATING CENTER VENT TUBE
782	856A3100G05	PIN, LOCATING CENTER VENT TUBE
783	856A3101G01	PLUG, LOCATING-CENTER VENT TUBE
784	856A3101G02	PLUG, LOCATING-CENTER VENT TUBE
785	856A3114G01	WRENCH VBV ACT BALLSCREW ACTUATOR
786	856A3234P01	PROTECTOR CENTER VENT TUBE AFT
787	856A3260G01	PLUG, EXTRACTION-MAIN COMPONENTS LPT SHAFT
788	856A3260G02	PLUG, EXTRACTION-MAIN COMPONENTS LPT SHAFT
789	856A3269G01	WRENCH - NO 5 BRG INNER FACE
790	856A3269G02	WRENCH - NO 5 BRG INNER FACE
791	856A3269G03	WRENCH - NO 5 BRG INNER FACE
792	856A3308G01	BALL_RACE 4 EXTRACTOR
793	856A3308G02	BALL_RACE 4 EXTRACTOR
794	856A3308G03	BALL_RACE 4 EXTRACTOR
795	856A3308G04	BALL_RACE 4 EXTRACTOR
796	856A3308G05	BALL_RACE 4 EXTRACTOR
797	856A3308G06	BALL_RACE 4 EXTRACTOR
798	856A3322G01	TOOL CRIMPING NO 5 BRG NUT, LOCKING PIN
799	856A3322G02	TOOL CRIMPING NO 5 BRG NUT, LOCKING PIN
800	856A3322G03	TOOL CRIMPING NO 5 BRG NUT, LOCKING PIN
801	856A3323G01	NO 1 BALL BEARING, CENTERING BUSH
802	856A3373G01	LIFTING FIXTURE, LPT BLADED
803	856A3373G02	LIFTING FIXTURE, LPT BLADED

804	856A3373G03	LIFTING FIXTURE, LPT BLADED
805	856A3383G01	FIXTURE ALIGNMENT_TURBINE FRAME OR LPT/LPT SHAFT
806	856A3392G01	TORQUE WRENCH
807	856A3409G01	PIN GUIDE KIT SPINNER CONE ENGINE
808	856A3409P03	GUIDE
809	856A3410G01	TORQUING DISTRIBUTION RING
810	856A3460G01	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
811	856A3460G02	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
812	856A3460G03	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
813	856A3460G04	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
814	856A3460G05	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
815	856A3460G06	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
816	856A3472G01	TOOL, CHECKING, AXIAL POSITION -CENTER VENT T. SU
817	856A3474G01	TOOL, CHECKING EXPANSION LOAD -CENTER VENT T. SUP
818	856A3480G01	FIXTURE, PUSH/PULL - HPT ROTOR, AFT, BLADE RETNR
819	856A3480G02	RING, CHECKING CENTER VENT TUBE INNER SUPPORT RING
820	856A3486G01	TOOL ASSY SEAL CENTER VENT TUBE
821	856A3489G01	TOOL SET TARGETS-NO1 BRG AIR IMPINGEMENT CHECKS
822	856A3501G01	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
823	856A3501G02	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
824	856A3501G03	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
825	856A3501G04	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT
826	856A3503G01	FIXTURE REMOVAL/ INSTALLATION AND HANDLING
827	856A3504G01	FIXTURE, PUSHER/PULL
828	856A3504G02	FIXTURE, PUSHER/PULL
829	856A3504G03	FIXTURE, PUSHER/PULL
830	856A3506G01	WRENCH, TORQUE-LPT COUPLING NUT
831	856A3506G02	WRENCH, TORQUE-LPT COUPLING NUT
832	856A3506G03	WRENCH, TORQUE-LPT COUPLING NUT
833	856A3508G01	SLEEVE CENTERING & RMVL/INS
834	856A3513G01	BEAM, RESIDUAL TORQUE
835	856A3513G02	BEAM, RESIDUAL TORQUE
836	856A3513G03	BEAM, RESIDUAL TORQUE
837	856A3513G04	BEAM, RESIDUAL TORQUE
838	856A3515G01	EXTENSION BEAM - VARIABLE CG LIFT FIXT.
839	856A3515G02	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE
840	856A3515G03	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE
841	856A3515G04	DRIVE ADAPTOR, BOOSTER & LPT
842	856A3519G01	SLING LIFT AGB
843	856A3519G02	SLING LIFT AGB
844	856A3519G03	SLING LIFT AGB
845	856A3519G04	SLING LIFT AGB
846	856A3519G05	SLING LIFT AGB
847	856A3520G01	COVER, PROTECTIVE - FAN DISK/BOOSTER BALANCING
848	856A3524G01	BOOSTER & LOW PRESSURE TURBINE DRIVE ADAPTER TOOL SET
849	856A3525G01	CRADLE - REMOVAL/INSTALLATION, ACCESSORY GEARBOX
850	856A3525G02	CRADLE - REMOVAL/INSTALLATION, ACCESSORY GEARBOX
851	856A3525G03	CRADLE - REMOVAL/INSTALLATION, ACCESSORY GEARBOX
852	856A3525G04	CRADLE - REMOVAL/INSTALLATION, ACCESSORY GEARBOX
853	856A3537G01	TOOL CHECK AGB POSITION
854	856A3537G02	TOOL CHECK AGB POSITION
855	856A3544G01	ADAPTER FLANGE TRANS. GEAR BOX
856	856A3544G02	ADAPTER FLANGE TRANS. GEAR BOX
857	856A3544G03	ADAPTER FLANGE TRANS. GEAR BOX
858	856A3545G01	FIXTURE RIGGING AGB
859	856A3545G02	FIXTURE RIGGING AGB
860	856A3545G03	FIXTURE RIGGING AGB
861	856A3546G01	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
862	856A3546G02	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
863	856A3546G03	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
864	856A3546G04	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
865	856A3546G05	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO

866	856A3546G06	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
867	856A3548G01	TOOL SET TARGETS AGB OIL
868	856A3548G02	TOOL SET TARGETS AGB OIL
869	856A3548G03	TOOL SET TARGETS AGB OIL
870	856A3548G04	TOOL SET TARGETS AGB OIL
871	856A3548G05	TOOL SET TARGETS AGB OIL
872	856A3549G01	TOOL SET, LEAK TEST - AGB
873	856A3549G02	TOOL SET, LEAK TEST - AGB
874	856A3549G03	TOOL SET, LEAK TEST - AGB
875	856A3557G01	D SEAL FITTING-MAGNETIC PLUG LUB UNI
876	856A3573G01	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
877	856A3573G02	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
878	856A3573G03	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
879	856A3576G01	PUSHER/PULLER
880	856A3576G02	PUSHER/PULLER
881	856A3582G01	WRENCH
882	856A3591G01	PROTECTOR - MOUNTING PIN, ACCESSORY GEARBOX
883	856A3598G01	CRADLE - SUPPORT, FUEL PUMP AND MEC
884	856A3598G02	CRADLE - SUPPORT, FUEL PUMP AND MEC
885	856A3598G03	CRADLE - SUPPORT, FUEL PUMP AND MEC
886	856A3600G01	RADIAL DRIVE SHAFT PULLER
887	856A3601G01	ADAPTER - DRAIN, LUBRICATION UNIT
888	856A3603G01	CONTAINER, SHIPPING_ NO.1 AND NO.2 BRG SUPPORT MODULE
889	856A3603G02	CONTAINER, SHIPPING_ NO.1 AND NO.2 BRG SUPPORT MODULE
890	856A3610G01	FIXTURE CHECKING DIM, "V" MODULE 2
891	856A3617G01	PULLER MAGNETIC PLUG ENGINE
892	856A3618G01	TOOL SET PUSHERS
893	856A3621G01	PINS GUIDE BOOSTER STG1 AND 2 VANE ASSEMBLIES OUTER SHROUDS
894	856A3621G02	PINS GUIDE BOOSTER STG1 AND 2 VANE ASSEMBLIES OUTER SHROUDS
895	856A3628G01	INSTALLATION TOOL NO 1 BRG INNER RACE
896	856A3702G01	SLEEVE CENTER LPT MAJ MOD R/I
897	856A3702G02	SLEEVE CENTER LPT MAJ MOD R/I
898	856A3703G01	GUIDE, COUNTER TORQUE WRENCH
899	856A3704G01	TORQUE ADAPTATION BEAM
900	856A3707G01	PULLER - FAN BLADE SPACER
901	856A3707G02	PULLER - FAN BLADE SPACER
902	856A3707G03	PULLER - FAN BLADE SPACER
903	856A3707G04	PULLER - FAN BLADE SPACER
904	856A3707G05	PULLER - FAN BLADE SPACER
905	856A3707G06	PULLER - FAN BLADE SPACER
906	856A3707G07	PULLER - FAN BLADE SPACER
907	856A3707G08	PULLER - FAN BLADE SPACER
908	856A3707P15	STOP TOOL
909	856A3707P16	SUPPORT TOOL
910	856A3707P17	SUPPORT TOOL
911	856A3707P18	SUPPORT TOOL
912	856A3707P22	PULLER FAN BLADE SPACER
913	856A3707P23	PIN, FAN BLADE SPACER
914	856A3707P24	PIN, FAN BLADE SPACER
915	856A3707P25	PIN, FAN BLADE SPACER
916	856A3707P27	PIN-FAN BLADE SPACER PULLER
917	856A3707P28	PIN-FAN BLADE SPACER PULLER
918	856A3707P29	PIN-FAN BLADE SPACER PULLER
919	856A3708G01	PUSHER/PULLER - RADIAL DRIVE SHAFT INSTALLATION/EXTRACTION
920	856A3709G01	FIXTURE, ALIGNMENT - AGB
921	856A3709G02	FIXTURE, ALIGNMENT - AGB
922	856A3709G03	FIXTURE, ALIGNMENT - AGB
923	856A3712G01	BASE PLATE, MOBILE - FAN FRAME
924	856A3717G01	TOOL SET, REMOVAL/INSTALLATION VBV ACT RING
925	856A3721G01	#1 & #2 BEARING MODULE BRACKETS
926	856A3721G02	#1 & #2 BEARING MODULE BRACKETS
927	856A3721G03	#1 & #2 BEARING MODULE BRACKETS

928	856A3722G01	DUMMY FAN DISK
929	856A3722G02	DUMMY FAN DISK
930	856A3722G03	DUMMY FAN DISK
931	856A3722G04	DUMMY FAN DISK
932	856A3723G01	FIXTURE GUIDE/PULLING - BOOSTER
933	856A3723G02	FIXTURE GUIDE/PULLING - BOOSTER
934	856A3724G01	FAN DISK RUN-ON FIXTURE
935	856A3724G02	FAN DISK RUN-ON FIXTURE
936	856A3725G01	WRENCH, TORQUE
937	856A3725G02	WRENCH, TORQUE
938	856A3725G03	WRENCH, TORQUE/LOOSEN FAN DISK
939	856A3728G01	CORE ENGINE SEALING PLATE AND LOCKING ADAPTER
940	856A3728G02	CORE ENGINE SEALING
941	856A3729G01	SHIELD THERMAL
942	856A3730G01	FIXTURE, HANDLING BOOSTER SPOOL
943	856A3730G02	FIXTURE, HANDLING BOOSTER SPOOL
944	856A3731G01	HANDLING FIXTURE - FAN DISK
945	856A3731G02	HANDLING FIXTURE - FAN DISK
946	856A3731G03	HANDLING FIXTURE - FAN DISK
947	856A3732G01	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
948	856A3732G02	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
949	856A3732G03	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
950	856A3732G04	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
951	856A3732P39	RING
952	856A3735G03	GUIDE PIN
953	856A3736G01	TEMPLATE, LOCATING - DRAIN TUBE AND OIL SUPPLY TUBE
954	856A3738G01	FIXTURE, TORQUE / LOOSEN - #1 BEARING NUT
955	856A3746G01	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
956	856A3746G02	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
957	856A3746G03	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
958	856A3749G01	TOOL SET STAGE 2 AND 3 STRIPS SEAL
959	856A3750G01	LPT SHAFT LOCATOR
960	856A3750G02	LPT SHAFT LOCATOR
961	856A3750G03	LPT SHAFT LOCATOR
962	856A3750G04	LPT SHAFT LOCATOR
963	856A3751G01	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
964	856A3751G02	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
965	856A3751G03	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
966	856A3755P01	TOOL, FOOL-PROOF INSTALLATION LPT STG1 AND 2 ROTATING AIR SEAL
967	856A3756G01	FIXTURE INSTALLATION SHIELD STAGE 2
968	856A3756G02	FIXTURE INSTALLATION SHIELD STAGE 2
969	856A3759G01	SECTORS HANDLING TURBINE FRAME MODULE
970	856A3759G02	SECTORS HANDLING TURBINE FRAME MODULE
971	856A3759G03	SECTORS HANDLING TURBINE FRAME MODULE
972	856A3760G01	FIXTURE, ASSY/DISASSY-LPT NOZZLE SEGMENTS, STG2
973	856A3760G02	FIXTURE, ASSY/DISASSY-LPT NOZZLE SEGMENTS, STG2
974	856A3760G03	FIXTURE, ASSY/DISASSY-LPT NOZZLE SEGMENTS, STG2
975	856A3760G04	FIXTURE, ASSY/DISASSY-LPT NOZZLE SEGMENTS, STG2
976	856A3760G05	FIXTURE, ASSY/DISASSY-LPT NOZZLE SEGMENTS, STG2
977	856A3773G01	LPT HANDLING FIXTURE
978	856A3773G02	LPT HANDLING FIXTURE
979	856A3773G03	LPT HANDLING FIXTURE
980	856A3777G01	TEMPLATE, LOCATING - OIL SUPPLY #3 BEARING SUPPORT
981	856A3777G02	TEMPLATE, LOCATING - OIL SUPPLY #3 BEARING SUPPORT
982	856A3778G01	PINS - GUIDE, SPINNER REAR CONE
983	856A3779G01	PULLER - PLATFORMS FAN BLADE
984	856A3779G02	PULLER - PLATFORMS FAN BLADE
985	856A3779P10	HANDLE
986	856A3780G01	REMOVAL / INSTALLATION KIT, AGB / TGB BEARINGS
987	856A3780G02	REMOVAL / INSTALLATION KIT, AGB / TGB BEARINGS
988	856A3780G03	REMOVAL / INSTALLATION KIT, AGB / TGB BEARINGS
989	856A3782G01	WRENCH - REMOVAL FAN BLADE, RETAIRNER RING

990	856A3782G02	WRENCH - REMOVAL FAN BLADE, RETAINER RING
991	856A3783G01	FIXTURE CHECKING, #1 & #2 BEARING SUPPORT
992	856A3783G02	FIXTURE CHECKING, #1 & #2 BEARING SUPPORT
993	856A3788G01	TOOL SET INST - LPT OUTER STATIONARY AIR SEAL STG 2 & 3
994	856A3788G02	TOOL SET INST - LPT OUTER STATIONARY AIR SEAL STG 2 & 3
995	856A3790G01	FIXTURE, PUSHER/PULLER - DUCT REAR
996	856A3793G01	FIXTURE PUSHER/PULLER TUBE CENTER VENT
997	856A3793G02	FIXTURE PUSHER/PULLER TUBE CENTER VENT
998	856A3793G03	FIXTURE PUSHER/PULLER TUBE CENTER VENT
999	856A3793G04	FIXTURE PUSHER/PULLER TUBE CENTER VENT
1000	856A3795G01	STAND, MOBILE LP TURBINE
1001	856A3795G02	STAND, MOBILE LP TURBINE
1002	856A3900G01	TOOL REM / INST DETECTOR DMS
1003	856A3905G01	PULLER SPACERS FAN BLADE
1004	856A3905G02	PULLER SPACERS FAN BLADE
1005	856A3905G03	PULLER SPACERS FAN BLADE
1006	856A3906G01	FIXTURE, TORQUE FAN DISK COUPLING
1007	856A3909G01	FIXTURE, PUSHER PLATFORM BUSHING
1008	856A3913G01	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1009	856A3913G02	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1010	856A3913G03	FIXT, CHECK ASSEMBLY TRF / 5 BEARING SUPPORT
1011	856A3916G01	FIXTURE, SUPPORT - TABLE BOOSTER A/D FAN DISK
1012	856A3916G02	FIXTURE, SUPPORT - TABLE BOOSTER A/D FAN DISK
1013	856A3916P04	SUPPORT
1014	856A3917G01	TORQUE FIXTURE
1015	856A3918G01	FIXTURE, PULLER / PRESS #2 ROLLER BEARING OUTER RACE
1016	856A3918G02	FIXTURE, PULLER / PRESS #2 ROLLER BEARING OUTER RACE
1017	856A3920G01	HANDLING SUPPORT - PUMP / AGB
1018	856A3923G01	FAN BLADE SPACER LINE PULLER
1019	856A3923G02	FAN BLADE SPACER LINE PULLER
1020	856A3924G01	WRENCH, TRF CLEVIS MOUNT BUSHING
1021	856A3929G01	CHECKING TOOL DIM ZP- LPT
1022	856A3947G01	FAN BLADE SPACERS PULLER
1023	856A3947G02	FAN BLADE SPACERS PULLER
1024	856A3947P12	INCONEL PIN ASSY
1025	856A3958G01	ZONING TOOL, ROOT RADIUS - FAN BLADE
1026	856A4627P17	TORQUE SCREW
1027	856A4633G01	GAUGE-FAN DISC,DOVE TAIL SLOT
1028	856A4633G02	GAUGE-FAN DISC,DOVE TAIL SLOT
1029	856A4637G01	BOOSTER FLANGE GAGE
1030	856A4640G01	FAN DISK LUGS INSPECTION
1031	856A4640G03	FAN DISK LUGS INSPECTION
1032	856A4646G01	FAN BLADE REAR SHANK WEAR INSPECTION TOOL
1033	856A5817G01	CHECK FANBLADE SHANK MEASURE
1034	856A5944G01	FIXTURE, ALIGNMENT - LPT SHAFT
1035	856A5945G01	MASTER, ALIGNMENT - LPT SHAFT
1036	856A5945G02	MASTER ETALON
1037	856A5945G03	MASTER, ALIGNMENT - LPT SHAFT
1038	856A5945G04	MASTER, ALIGNMENT - LPT SHAFT
1039	968RB-1	DEFLATOR - TIRE, VALVE CORE REMOVAL AND INSTALLATION (LARGE BORE)
1040	991-008-A01	TAB TEST TOOL
1041	991-042-A01	HINGE FITTING POSITION TOOL
1042	956A8675G02	FIXTURE, INSTALL PLATFORM FRONT SHROUD
1043	97A28002117002	PURGING TOOL
1044	97A29102035000	CONNECTOR-PRESSURIZING,HYDRAULIC TANK
1045	97A29102035001	CONNECTOR-PRESSURIZING,HYDRAULIC TANK
1046	97A29102062000	CONNECTOR-DEPRESSURIZING, HYD RESERVOIR
1047	98A07003906200	ADAPTER LOAD CELL
1048	98A07003906201	ADAPTER LOAD CELL
1049	98A07003906202	ADAPTER LOAD CELL
1050	98A07003907003	ADAPTER LOAD CELL
1051	98A07003907200	ADAPTER LOAD CELL

1052	98A07003907201	ADAPTER LOAD CELL
1053	98A07003907202	ADAPTER LOAD CELL
1054	98A07003907203	ADAPTER LOAD CELL
1055	98A07003907206	ADAPTER LOAD CELL
1056	98A07003911200	ADAPTER LOAD CELL
1057	98A10001005000	COVER - PITOT PROBE
1058	98A10001013000	COVER - TOTAL TEMP SENSOR
1059	98A10001500000	COVER-SLIP ON,ANGLE OF ATTACK SENSOR
1060	98A24403000000	CABLE HOLDING STRAP
1061	98A25207503000	ASSY PULLEY SEALING CORD
1062	98A27003001000	RIGGING PIN
1063	98A27103002000	TOOL-LOCKING,ALL SPEED AILERON
1064	98A27203500000	MEASUREMENT BASE-FLIGHT CONTROL SURFACE DEFLECTION
1065	98A27207543000	RIGGING PIN
1066	98A27407508001	TOOL SET – REMOVAL/INSTALLATION HORIZON
1067	98A27407514000	FIXTURE STRUT HORIZONTAL STABILIZER
1068	98A27407514001	FIXTURE STRUT HORIZONTAL STABILIZER
1069	98A27407514002	FIXTURE STRUT STABILIZER
1070	98A27407514003	FIXTURE STRUT HORIZONTAL STABILIZER
1071	98A27407514004	FIXTURE STRUT HORIZONTAL STABILIZER
1072	98A27407514005	FIXTURE-STRUT,HORIZONTAL STABILIZER
1073	98A27407518000	ADAPTOR EQUIPMENT HOISTING THS
1074	98A27407518001	THS HOIST EQPT
1075	98A27407518002	THS HOIST EQPT
1076	98A27407518003	THS HOIST EQPT
1077	98A27407518004	THS HOIST EQPT
1078	98A27408018000	SOCKET WRENCH SET-ELEVATOR BEARINGS
1079	98A27408640000	DEVICE-REMOVAL INSTALLATION,THS ACTUATOR
1080	98A27901002000	PIN, RIGGING - RUDDER CONTROL
1081	98A27901006000	PIN, RIGGING - RUDDER CONTROL
1082	98A28007570000	ADAPTER - VENT AND DRAIN VALVE, APU
1083	98A28101000000	ADAPTING PIPE - WATER DRAINING
1084	98A28104000000	PURGER - WATER DRAIN
1085	98A28104000002	PURGER - WATER DRAIN
1086	98A28104029000	SPANNER - OVERWING FILLER
1087	98A28104030000	ADAPTOR - BANJO
1088	98A28104031001	PURGER - WATER DRAIN
1089	98A28201003000	FUEL PUMP-SHROUD TOOL
1090	98A29113501000	WRENCH - SPECIAL
1091	98A29201000000	PIN-RIGGING, RAM AIR TURBINE DROP-OUT CONTROLS
1092	98A32101501000	GUIDING TOOL KIT-TRUNNION
1093	98A32101502000	HOISTING EQPT-MLG ACTUATING CYLINDER
1094	98A32104170000	WRENCH
1095	98A32301000000	RIGGING PIN
1096	98A32301010000	PIN RIGGING
1097	98A32301011000	PIN RIGGING
1098	98A32301013000	RIGGING PIN
1099	98A32501005000	PIN-RIGGING,NOSE GEAR WHEEL STEERING UNIT
1100	98A35207599000	HOSE ADAPTER,ALTITUDE SWITCH
1101	98A49107504000	THREAD PROTECTOR
1102	98A49107504001	THREAD PROTECTOR
1103	98A52008509000	UNIVERSAL DOOR SLING
1104	98A52307628000	SAFETY-LOCK,CARGO DOOR ACTUATOR
1105	98A52407620000	PROTECTION - ACT DOOR
1106	98A53003500000	REMOVAL TOOL OF PHILLIPS TORQUE
1107	98A53003500001	REMOVAL TOOL OF PHILLIPS TORQUE
1108	98A53407566003	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1109	98A53407566004	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1110	98A53407566005	EXTRACTOR - ATTACH BOLTS, TAIL CONE
1111	98A55308440044	TURN BUCKLE ASSEMBLY
1112	98A55308440046	TURN BUCKLE ASSEMBLY
1113	98A55308440000	SLING-UNIVERSAL,TAIL PLANE

1114	98A55308440001	SLING-UNIVERSAL,TAIL PLANE
1115	98A57103013000	TAP TEST-TOOL
1116	98A57304002000	EXTRACTION TOOL, MANHOLE BOLT
1117	98A71101502000	HOLD-OPEN FIXTURE - 55 PW FAN COWL
1118	98A71101502001	HOLD-OPEN FIXTURE - 55 PW FAN COWL
1119	98A71101502002	HOLD-OPEN FIXTURE - 55 PW FAN COWL
1120	98A71103506001	CHEST TORQUE SET
1121	98A71103506003	CHEST TORQUE SET
1122	98AMS172321002	ADAPTER - WRENCH
1123	98AMS172322005	WRENCH ADAPTER, NUT MS172322
1124	98D07103000001	DYNAMOMETER-SAFETY STAY
1125	98D07103000200	UPPER ADAPTER
1126	98D07103500000	JACK ADAPTER-FUSELAGE
1127	98D07104000001	SET, JACKING PAD, WING, A318/A319/A320
1128	98D07104000042	JACKING PAD
1129	98D07104000043	JACKING PAD
1130	98D07104000200	JACK PAD BOLT
1131	98D07203004001	CRADLE ADAPTER
1132	98D07203005001	CRADLE ADAPTER
1133	98D10003003000	COVER - SLIP-ON, AOA SENSOR
1134	98D10103500000	CAPT & F-O STATIC PROBE COVER
1135	98D10103500001	CAPT & F-O STATIC PROBE COVER
1136	98D10103500100	CAPT & F-O STATIC PROBE COVER
1137	98D10103500102	CAPT & F-O STATIC PROBE COVER
1138	98D10103500042	CAPT & F-O STATIC PROBE COVER
1139	98D10103500043	CAPT & F-O STATIC PROBE COVER
1140	98D10103501000	COVER - ICE DETECTION PROBE
1141	98D21008419000	CHECK VALVE BLANKING CAP
1142	98D26203005000	TOOL TEST ENGINE FIRE EXTINGUISHING SYSTEM LEAP-1A
1143	98D27104005000	COLLAR-AILERON
1144	98D27104005001	COLLAR-AILERON
1145	98D27203001000	RUDDER NEUTRAL ADJUSTMENT TOOL
1146	98D27203500000	BRACKET,TENSION REGULATOR-RUDDER CONTROL
1147	98D27207508000	FIXTURE – VERT. STABILIZER/RUDDER
1148	98D27207545000	PIN - RIGGING
1149	98D27207546000	PIN - RIGGING
1150	98D27207547000	PIN - RIGGING
1151	98D27207548000	PIN - RIGGING
1152	98D27207549000	PIN - RIGGING
1153	98D27208657000	DEVICE - FREEPLAY, RUDDER BEARING
1154	98D27208657040	DEVICE - FREEPLAY, RUDDER BEARING
1155	98D27208657042	DEVICE - FREEPLAY, RUDDER BEARING
1156	98D27303000001	LOAD APPLICATION TOOL - ELEVATOR, AILERON, RUDDER
1157	98D27303001001	HOLDER - SIDE STICK
1158	98D27303022000	CHECK TOOL (DIGITAL) - AILERON, ELEVATOR, RUDDER
1159	98D27309001000	TOOL, ELEVATOR NEUTRAL SETTING SET
1160	98D27309001040	ELEVATOR NEUTRAL SETTING LH
1161	98D273090030000	ELEVATOR LOCKING DEVICE
1162	98D27309004000	PIN ELEVATOR CENTERING
1163	98D27309005000	ELEVATOR SERVO SAFETY COLLAR
1164	98D27309006000	GAUGE - ELEVATOR NEUTRAL SETTINGS
1165	98D27309006228	GAUGE
1166	98D27309009002	COLLAR SAFETY SERVO CONTROL ELEVATOR
1167	98D27309009003	COLLAR DEPTH ACTUATOR
1168	98D27309009004	COLLAR DEPTH ACTUATOR
1169	98D27403000000	HOLDING TOOL, TRIM CTL LOWER SHAFT
1170	98D27403000100	HYDRAULIC ASSY
1171	98D27403003000	FIXTURE STRUT THSA
1172	98D27403003001	FIXTURE STRUT THSA
1173	98D27403003002	FIXTURE STRUT THSA
1174	98D27403500000	PITCH TRIM CONTROL LOCKING
1175	98D27407502000	SUPPORT STRUT - R I, THS ACTUATOR

1176	98D27407517000	TOOL SET-R I,THS
1177	98D27407532000	PIN RIGGING - THS MECHANICAL CONTROL
1178	98D27407533000	FRAME - THS ACTUATOR SUPPORT
1179	98D27407533001	FRAME - THS ACTUATOR SUPPORT
1180	98D27408624000	DEVICE-R I,THS ACTUATOR
1181	98D27504082000	FLAP TOOL
1182	98D27504005000	RIG PIN
1183	98D27504006000	PIN RIGGING FLAPS TRK 2 & 4
1184	98D27504008000	GAGE - GO/NO-GO
1185	98D27504010000	ADJUSTER KINK SEAL
1186	98D27504030001	LOCK TORQUE SHAFT
1187	98D27504031000	PIN-SETTING FLAP INTER STRUT
1188	98D27504035000	TORQUE ADAPTER TRUNNION NUT
1189	98D27504038000	FLAP RIGGING KIT
1190	98D27504038001	FLAP RIGGING KIT
1191	98D27504038003	KIT-FLAP RIGGING
1192	98D27504040000	TOOL-RESTRAINING, TK1
1193	98D27504041000	FLAP ADJUSTING TOOL
1194	98D27504081000	TOOL FLAP ADJUSTING (TRACK 2,3)
1195	98D27504082000	TOOL -FLAP ADJUST TRACK 4
1196	98D27504083000	EXTRACTOR PIN TRACKS 2 & 3
1197	98D27504084000	EXTRACTOR PIN
1198	98D27504085000	TOOL FLAP ADJUSTING TRACK 1
1199	98D27504095000	SPANNER - TRUNNION NUT, TRACK 1
1200	98D27504100000	RESTRAINER TOOL
1201	98D27504111000	SLAVE PIN TRACK 2+3
1202	98D27504114000	DISTANCE GAUGE
1203	98D27504118000	FLAP ADJUSTING SPANNER
1204	98D27504119000	FLAP ADJUSTING SPANNER
1205	98D27507536000	SOCKET WRENCH - RETAINER NUT, TRACK 1
1206	98D27507541000	WRENCH - BEARING, FLAP TO CARRIAGE TRACK 2
1207	98D27508625000	CHECK-PIN TRACK 1-4
1208	98D27508655000	RIG-SCALE,FLAP
1209	98D27603001000	LOAD APPLICATION TOOL-SPOILER
1210	98D27603002000	SPOILER MAINTENANCE KEY
1211	98D27603002001	SPOILER MAINTENANCE KEY
1212	98D27603002002	SPOILER MAINTENANCE KEY
1213	98D27604000000	COLLAR SAFETY-SPOILER
1214	98D27604001000	STRUT SUPPORT - SPOILER 2, 3, 4, AND 5
1215	98D27604002000	STRUT SUPPORT - SPOILER 1
1216	98D27803000000	LOCKING TOOL-FLAP SLAT LEVER,INT. POSITION
1217	98D27803500001	TOOL-ZERO LOCKING, FLAP SLAT CTL LEVER
1218	98D27804001000	FLAP DRIVE ADAPTOR
1219	98D27804011000	BAR, TURNING
1220	98D27804014000	TOOL-BACKSTOP SLAT (TRACKS 1, 2, 3, AND 4)
1221	98D27804015000	TOOL-BACKSTOP SLAT (TRACKS 5, 6, 7, AND 8)
1222	98D27804016000	TOOL-BACKSTOP SLAT (TRACKS 9, 10, 11, AND 12)
1223	98D27903500000	SIDE STICK LOCKING PIN
1224	98D28004000000	SPANNER - OVERWING FILLER
1225	98D28004002000	TESTER-APU FUEL FEED
1226	98D28104000000	PIPE ADAPTING WATER DRAIN
1227	98D28104000040	PIPE ADAPTING WATER DRAIN
1228	98D28108299000	GUIDE-R I,ADDITIONAL CENTER TANK
1229	98D28108299002	GUIDE-R I,ADDITIONAL CENTER TANK
1230	98D28108558000	WRENCH - R-I DRAIN VALVE
1231	98D28108561000	EXTRACTOR-WATER DRAIN TUBE
1232	98D29208246001	RAT SAFETY DEVICE
1233	98D29208581000	PROTECTION EQUIPMENT - RAT
1234	98D29208581108	POSTIONING STOP
1235	98D29208581110	STOP
1236	98D27104005000	PROTECTION EQUIPMENT - RAT
1237	98D32104002000	EQUIPMENT - MLG REMOVAL/INSTALLATION

1238	98D32104002001	EQUIPMENT-MLG REMOVAL INSTALLATION
1239	98D32104002002	EQUIPMENT - MLG R/I
1240	98D32104005000	MLG PINTLE SPANNER SET
1241	98D32104005200	WRENCH SOCKET
1242	98D32104009000	REM., INST. EQUIPMENT - MLG ACTUATOR
1243	98D32104009001	REM., INST. EQUIPMENT - MLG ACTUATOR
1244	98D32104009004	REM., INST. EQUIPMENT - MLG ACTUATOR
1245	98D32104009006	REM., INST. EQUIPMENT - MLG ACTUATOR
1246	98D32104010000	INTERFACE BRACKET ASSY
1247	98D32104010001	INTERFACE BRACKET ASSY
1248	98D32104010002	INTERFACE BRACKET ASSY
1249	98D32104013001	SPLINT ASSEMBLY
1250	98D32104013002	SPLINT ASSEMBLY - SIDE STAY
1251	98D32104013003	SPLINT ASSEMBLY - SIDE STAY
1252	98D32104013004	SPLINT ASSEMBLY - SIDE STAY
1253	98D32104015000	CONE GUIDE, MLG
1254	98D32104080000	SPANNER, MLG REAR PIN
1255	98D32104081000	TOOL - SPHERICAL LOCATION
1256	98D32104083000	SPACER, RIGGING
1257	98D32104180000	TOOL - SPHERICAL LOCATION
1258	98D32104190001	MLG FWD AND REAR PINTLE PINS R/I TOOL
1259	98D32203500000	TOOL-R I NLG
1260	98D32203500040	WHEEL WELL PICK UP TOOL
1261	98D32203500042	GRIPPER
1262	98D32203501000	GUIDE CONE - NLG
1263	98D32203502000	TOOL-NLG DOOR SAFETY PIN
1264	98D32203503000	EXTRACTOR-NLG
1265	98D32203504000	TROLLEY-NLG GROUND HANDLING
1266	98D32203504001	TROLLEY-NLG GND HDLG
1267	98D32303000000	ADAPTER-WRENCH
1268	98D32303000200	ADAPTER-WRENCH
1269	98D32303000201	ADAPTER-WRENCH
1270	98D32303000202	ADAPTER-WRENCH
1271	98D32403001000	A320 BRAKE RELEASE KIT
1272	98D32403003000	DRIVING ADAPTER
1273	98D32403004000	DRIVING ADAPTER
1274	98D32403007200	PROTECTOR,WHEEL AXLE
1275	98D34003500000	ADAPTER COVER-STATIC PORT
1276	98D34103002000	ADAPTERS - AIR DATA SYSTEM FLUSHING
1277	98D34103004001	CLEANER-PITOT PROBE
1278	98D35207599000	HOSE ADAPTER
1279	98D36109003000	FAV BANJ CLEAN-BLEED
1280	98D38108002000	ADAPTER, DRAIN MAST
1281	98D49207527000	FRAME SUPPORT APU WITH TROLLEY
1282	98D49207527001	SUPPORT FRAME, APU
1283	98D49207537001	CABLE-SAFETY, APU GENERATOR
1284	98D49209001000	APU SUPPORT FRAME
1285	98D49209001001	APU SUPPORT FRAME
1286	98D52003003001	BARRIER-SAFETY PAX DOOR
1287	98D52003003002	BARRIER,SAFETY-PAX DOOR
1288	98D52003002	SAFETY PIN
1289	98D52003004001	BARRIER SAFETY - EMERGENCY EXITDOORS
1290	98D52003004002	BARRIER SAFETY - EMERGENCY EXITDOORS
1291	98D52103006000	RIGGING PIN
1292	98D52103500000	PIN SAFETY PIN - SLIDE ARMING
1293	98D52103501000	BALLAST WEIGHT - PASSENGER CREW DOOR
1294	98D52207507000	PIN EMERGENCY SLIDE - EMERGENCY EXIT
1295	98D52207507100	PIN EMERGENCY SLIDE - EMERGENCY EXIT
1296	98D52207543000	DEVICE - SAFETY, EMERGENCY EXIT
1297	98D52207551000	PIN-SLIDE RELEASE LEVER
1298	98D52207552000	PIN-RIGGING - SLIDE RELEASE MECHANISM
1299	98D52307515000	SAFETY LOCK-ACTUATOR,CARGO DOORS

1300	98D52307515100	SAFETY LOCK KIT
1301	98D52307524000	SUPPORT - STRUT, CARGO DOORS
1302	98D52307525000	TOOL-ADJUSTMENT,CARGO DOORS
1303	98D52307525200	PIN, ADJUSTMENT TOOL
1304	98D53103500000	SLING-RADOME
1305	98D54003000000	TROLLEY, PYLON REM/INST TOOL
1306	98D54003000001	TROLLEY, PYLON REM/INST TOOL
1307	98D54003005000	PYLON SHAFT EXTRACTOR RIB4-RIB10
1308	98D54003006000	WRENCH-CASTELLETED
1309	98D54003006002	CASTELLATED WRENCH
1310	98D54403000000	DUMMY SHACKLES-PYLON TO WING YOKES
1311	98D54403002000	REM INST TOOL - SPIGOT BALL JOINT
1312	98D54503000000	PYLON REMOVAL WRENCH
1313	98D54503000001	PYLON REMOVAL WRENCH
1314	98D54503000206	WRENCH
1315	98D55109010000	WRENCH-GROOVE NUT,ELEVATOR SUPPORT STRUT
1316	98D55209004000	SLING, REM.-INST.- ELEVATOR
1317	98D56103001000	INSTALLATION TOOL, FRONT WINDOW PANELS
1318	98D56103002000	SLIDING WINDOW REMOVAL KIT
1319	98D56103002200	WRENCH,REMOVAL-SLIDING WINDOW
1320	98D56103002201	WRENCH,REMOVAL-SLIDING WINDOW
1321	98D57004005000	BRACE TOOL
1322	98D57004013000	HOOK-COVER (RIB2-SURGE DOORS)
1323	98D57004014000	HOOK-COVER (RIB2-SURGE DOORS)
1324	98D57004016001	TOOTHED SOCKET
1325	98D57004017001	BUSH EXTRACTOR
1326	98D57004027000	PYLON PICK - UP SPANNER TOOL
1327	98D57004028000	EXTRACTOR - PYLON SLEEVE
1328	98D57004028001	EXTRACTOR - PYLON SLEEVE
1329	98D57004029000	SPANNER, PYLON SLEEVE
1330	98D57004033000	SPANNER
1331	98D57004037000	RI BRG FLAP SPANNER
1332	98D57004081000	SPANNER-REM/INST BRG
1333	98D71203001000	TORQUE SET - ENGINE R/I CHEST
1334	98D71203001001	CHEST-TORQUE SET OF IAE V2500 ENGINE
1335	98D71203001002	CHEST, TORQUE SET
1336	98D71203002002	CHEST TORQUE SET - CFM56-5 ENGINE
1337	98D71203002003	CHEST TORQUE SET - CFM56-5 ENGINE
1338	98D71203010000	BOOTSTRAP SYSTEM FOR LEAP-1A
1339	98D71203011000	BOOTSTRAP SYSTEM
1340	98D71203011001	BOOTSTRAP SYSTEM FOR LEAP-1A
1341	98D71203001200	COUNTER LEVER
1342	98D71203013000	TORQUE WRENCH SET
1343	98D71203013040	TORQUE WRENCH
1344	98D71203014000	TORQUE WRENCH SET CFM
1345	98D71203014042	RATCHET TOOL - HOLDER
1346	98D71203014700	SOCKET SJN 471
1347	98D71203014701	SOCKET SJN 524 TORQ-15-16-15°
1348	98D71203022000	ADAPTER TROLLEY R/I IDG
1349	98D71203501000	BOOTSTRAP SYSTEM
1350	98D71203500001	BOOTSTRAP - SYSTEM
1351	98D71203501001	BOOTSTRAP A320(CFM56-5/V2500)
1352	98D71203501002	BOOTSTRAP A320(CFM56-5/V2500)
1353	98D71203501003	BOOTSTRAP A320(CFM56-5/V2500)
1354	98D71203501230	HINGE PIN
1355	98D71203501318	HINGE PIN -BOLT
1356	98D71203501354	PIN
1357	98D76103000002	THR.LEV.LOAD MEASURE
1358	98DAMS172321002	ADAPTER - WRENCH
1359	98DNSA20206040	RIGGING PIN
1360	98DNSA20206060	RIGGING PIN
1361	98DNSA20206080	RIGGING PIN

1362	98DNSA20206120	RIGGING PIN
1363	98DNSA20206150	RIGGING PIN
1364	98DNSA20208040	RIGGING PIN
1365	98DNSA20208060	RIGGING PIN
1366	98DNSA20208080	RIGGING PIN
1367	98DNSA20208120	RIGGING PIN
1368	98DNSA20208150	RIGGING PIN
1369	98F10103500000	CHOCK-MLG ENGINE RUN-UP
1370	98F26208551000	TROLLEY FIRE EXTINGUISHER BOTTLE
1371	98F26208586000	DEVICE-R I,FIRE EXTINGUISHER BOTTLE
1372	98F26208586046	TRAVERSE
1373	98F26208586050	RETAINER
1374	98F26208586001	DEVICE-R I,FIRE EXTINGUISHER BOTTLES
1375	98F27108231000	GAUGE SET AILERON SETTING
1376	98F27208312000	RIGGING PIN
1377	98F27401000000	PITCH TRIM CONTROL
1378	98F27407502002	STRUT DISTANCE-STRUT,FRAME 91
1379	98F27508209000	FLAP NEUTRAL SETTING PIN
1380	98F27508238002	STOP - CARRIAGE, FLAP
1381	98F27508238003	STOP - CARRIAGE, FLAP
1382	98F27508238004	STOP - CARRIAGE, FLAP
1383	98F27408394000	FRAME-SUPPORT,THS ACTUATOR
1384	98F27508498000	FLAP HOISTING SLING TOOL
1385	98F27608236000	RIGGING TOOL - ACTUATOR, SPOILER
1386	98F27608236001	RIGGING TOOL - ACTUATOR, SPOILER
1387	98F27608236002	RIGGING TOOL - ACTUATOR, SPOILER
1388	98F27608236003	RIGGING TOOL - ACTUATOR, SPOILER
1389	98F27608253000	SAFETY CLIP
1390	98F27608253001	SAFETY CLIP
1391	98F27608701000	COLLAR-DISTANCE,SPOILER
1392	98F27608701040	COLLARSPOILER 1
1393	98F27608701042	COLLAR SPOILER 2-6
1394	98F29208457000	PIN-SAFETY RAT
1395	98F30403001000	RAIN REPELLENT PRES
1396	98F32104013000	SAFETY COLLAR-DOOR MLG
1397	98F32104017000	R/I TOOL - ECCENTRIC PIN
1398	98F32201005000	TOOL,R/I-DRAG STAY NLG
1399	98F32201005001	TOOL,R/I-DRAG STAY NLG
1400	98F32204000000	HANDLING TROLLEY LG
1401	98F32204001001	SAFETY-COLLAR, NLG DOOR
1402	98F32304000000	TARGET-FALSE
1403	98F32401001000	TOOL-R I WHEELS
1404	98F34103001000	ADAPTER-PITOT PROBE
1405	98F34103003000	TOOL-PITOT PROBE
1406	98F52003002001	BARRIER SAFETY PAX DOOR
1407	98F52003006001	SAFETY BARRIER PAX MIDDLE AND AFT
1408	98F52107520000	WRENCH EMERGENCY DOOR DAMPER
1409	98F52107520001	WRENCH-ACTUATOR,EMERGENCY DOOR
1410	98F52308227002	STRUT-SUPPORT,CARGO DOOR
1411	98F52308279000	BAR-R I ACTUATOR
1412	98F54003001000	EXTRACTOR - PYLON SHAFT, RIB 12
1413	98F55209004001	SLING - LIFTING, ELEVATOR R I
1414	98F71201000021	BOOTSTRAP SYSTEM,CFMI
1415	98F71201000050	BALL LOCK PIN
1416	98F71201001020	CHEST-TORQUE SET,CFM ENGINE R I
1417	98F71201001022	CHEST-TORQUE SET, GE ENGINE R I
1418	98F71201001024	CHEST-TORQUE SET, PW ENGINE (TBA)
1419	98F71201001028	CHEST-TORQUE SET, RRT500 ENGINE
1420	98F71201001106	ADAPTER
1421	98F71201006030	BOOTSTRAP
1422	98F71201006032	BOOTSTRAP SYSTEM-A330 PW
1423	98F71201006034	BOOTSTRAP CF6-80E

1424	98F71201006036	BOOTSTRAP KIT
1425	98F71201006080	BOOTSTRAP KIT
1426	98F71201006082	BOOTSTRAP
1427	98F71201006084	BOOTSTRAP KIT
1428	98F71201006086	BOOTSTRAP KIT
1429	98F71203001026	CHEST-TORQUE SET, TRENT 700 ENGINE, REM.INST
1430	98F71203007000	BOOTSTRAP A330 NEO
1431	98F71203007001	BOOTSTRAP A330 NEO
1432	98F71203007002	BOOTSTRAP A330 NEO
1433	98F71203010000	FCD FLAG
1434	98L32109009116	HALF SHELL COMPL.
1435	98L32109009118	HALF SHELL COMPL.
1436	98L32109009000	GAGS - MLG
1437	98L32109009001	GAGS - MLG
1438	98L32301002000	DEVICE, SAFETY - LANDING GEAR CONTORL LEVER
1439	98L36103000000	R/I PRECOOLER EXCHANGER SLING
1440	98L36103002000	TEST SET - ENGINE BLEED
1441	98L36103002001	TEST SET - ENGINE BLEED
1442	98S57003001001	ENGINE WEIGHT RELIEF BEAM
1443	98V27008001000	TOOL FREE PLAY TOOL
1444	98V27801000000	CONTROL LEVER FLAP SLAT
1445	98V27808900000	CONTROL LEVER FLAP SLAT
1446	98V32204005000	COLLAR - SAFETY NLG DOOR
1447	98V52308780000	LOCK - SAFETY, CARGO DOOR ACTUATOR
1448	98V52308807000	BAR - R/I CC DOOR ACTUATOR
1449	99D57004005000	SPANNER MLG REAR MANTLE
1450	9C1025	FIXTURE REMOVAL
1451	9C1025G01	FIXTURE REMOVAL
1452	9C1065	FIXTURE, LIFT - STG 2
1453	9C1065G01	FIXTURE, LIFT - STG 2
1454	9C1065G02	FIXTURE, LIFT - STG 2
1455	9C1074	FIXTURE, RESTRAIN - HP CORE
1456	9C1074G01	FIXTURE, RESTRAIN - HP CORE
1457	9C1074G02	FIXTURE, RESTRAIN - HP CORE
1458	9C1074G03	FIXTURE, RESTRAIN - HP CORE
1459	9C1074G04	FIXTURE, RESTRAIN - HP CORE
1460	9C1074G05	FIXTURE, RESTRAIN - HP CORE
1461	9C1074G06	FIXTURE, RESTRAIN - HP CORE
1462	9C1074G07	FIXTURE, RESTRAIN - HP CORE
1463	9C1147	FIXTURE, LIFT - FAN MODULE
1464	9C1147G01	FIXTURE, LIFT - FAN MODULE
1465	9C1147G02	FIXTURE, LIFT - FAN MODULE
1466	9C1147G03	FIXTURE, LIFT - FAN MODULE
1467	9C1147G04	FIXTURE, LIFT - FAN MODULE
1468	9C1310	FIXTURE, I/R STG 2
1469	9C1310G01	FIXTURE, I/R STG 2
1470	9C3023	CLOSURE SET, LEAK TEST - TURBINE CENTER FRAME
1471	9C3023G01	CLOSURE SET, LEAK TEST - TURBINE CENTER FRAME
1472	9C3023G02	CLOSURE SET, LEAK TEST - TURBINE CENTER FRAME
1473	A07001-11	JACK ADAPTOR FWD BODY
1474	A07003-1	JACK ADAPTER - OUTBOARD WING
1475	A09003-1	LOCK PIN - NOSE GEAR TOWING LEVER
1476	A09003-2	LOCK PIN - NOSE GEAR TOWING LEVER
1477	A10002-1	POLE - REMOVAL/INSTALLATION, PITOT STATIC PROBE COVER
1478	A10002-7	POLE - REMOVAL/INSTALLATION PITOT STATIC PROBE COVER
1479	A10002-9	POLE - REMOVAL/INSTALLATION PITOT STATIC PROBE COVER
1480	A11025	SWAGING TOOL
1481	A12001-14	FUEL SAMPLING
1482	A12001-15	FUEL SAMPLING EQUIPMENT
1483	A12001-21	FUEL SAMPLING
1484	A12008-1	LUBRICATION ADAPTOR - AFT WHEEL WELL BULKHEAD, SPHERICAL BEARING
1485	A20001-65	BOOM HOIST EQUIPMENT - GENERAL

1486	A20001-82	BOOM HOIST EQUIPMENT - GENERAL
1487	A20001-83	BOOM HOIST EQUIPMENT - GENERAL
1488	A20001-152	BOOM HOIST EQUIPMENT - GENERAL
1489	A20001-176	BOOM HOIST EQUIPMENT - GENERAL
1490	A20001-185	BOOM HOIST EQUIPMENT - GENERAL
1491	A20004-2	RIGGING PIN SET
1492	A20004-23	RIGGING PIN ASSY
1493	A20004-68	RIGGING PIN SET
1494	A20004-72	RIGGING PIN SET
1495	A20004-76	RIGGING PIN SET
1496	A20004-78	RIGGING PIN SET
1497	A20005-9	CLAMP-CONTROL CABLE
1498	A21001-1	HOIST ADAPTERS - AIR CONDITIONING PACK
1499	A21001-14	HOIST ADAPTERS - AIR CONDITIONING PACK
1500	A21001-15	HOIST ADAPTERS - AIR CONDITIONING PACK
1501	A21001-44	HOIST ADAPTERS - AIR CONDITIONING PACK
1502	A21001-45	HOIST ADAPTERS - AIR CONDITIONING PACK
1503	A21007-1	HOLD OPEN ROD - RAM AIR DOOR, FLIGHT DISPATCH
1504	A21008-1	HOLD OPEN SET - CABIN AIR OUTFLOW
1505	A21008-2	HOLD OPEN SET - CABIN AIR OUTFLOW
1506	A21010-90	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1507	A21010-187	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1508	A21010-188	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1509	A21010-189	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1510	A21010-190	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1511	A21010-203	VACUUM TANK - PRESSURE RELIEF VALVE TEST
1512	A21015-1	DISPATCH EQPT BLANK OFF PLATE TRIM AIR CHECK VALVE
1513	A21015-8	DISPATCH EQPT BLANK OFF PLATE TRIM AIR CHECK VALVE
1514	A24007-1	SUPPORT - ELECTRICAL GROUND POWER CABLE
1515	A24011-1	HOIST ADAPTER ASSEMBLY - INTEGRATED DRIVE GENERATOR
1516	A24012-1	DISPATCH KIT - INTEGRATED DRIVE GENERATOR (IDG), PRATT AND WHITNEY ENGINES
1517	A25016-1	SAFETY EQPT - ESCAPE SYSTEM - OFF WING
1518	A25020-1	GAGE - INSPECTION, SEAT TRACK, FLIGHT CREW
1519	A25020-4	INSPECTION GAGE SEAT TRACK
1520	A25020-5	GAGE-IPECO SEAT TRACK
1521	A25020-8	GAUGE - INSPECTION, SEAT TRACK, FLIGHT CREW SEATS
1522	A26003-7	CARGO FIRE TEST EQPT TOOL
1523	A26003-10	CARGO FIRE TEST EQPT TOOL
1524	A26003-12	CARGO FIRE TEST EQPT TOOL
1525	A27001-1	GAUGES - INBD AILERON, RUDDER, OUTBD AILERON
1526	A27001-2	GAUGES - INBD AILERON, RUDDER, OUTBD AILERON
1527	A27001-3	GAUGES - INBD AILERON, RUDDER, OUTBD AILERON
1528	A27001-4	GAUGES - INBD AILERON, RUDDER, OUTBD AILERON
1529	A27007-19	LOCK GROUND LEADING EDGE SLATS
1530	A27003-23	LOCK SET - ACTUATOR, RUDDER
1531	A27003-28	LOCK ASSY
1532	A27009-7	LOCK - TRAILING EDGE FLAPS
1533	A27010-11	LOCK SET - CIRCUIT BREAKER
1534	A27010-15	LOCK SET - CIRCUIT BREAKER
1535	A27012-30	SLING EQUIPMENT - INBD/OUTB ELEVATOR SEGMENT
1536	A27017-1	SLING EQPT - LEADING EDGE SLATS
1537	A27017-41	SLING EQPT - LEADING EDGE SLATS
1538	A27021-29	ADAPTER EQUIPMENT - CONTROL WHEEL
1539	A27021-69	ADAPTER EQUIPMENT - CONTROL WHEEL
1540	A27021-96	ADAPTER EQUIPMENT - CONTROL WHEEL
1541	A27021-97	ADAPTER EQUIPMENT - CONTROL WHEEL
1542	A27021-98	ADAPTER EQUIPMENT - CONTROL WHEEL
1543	A27021-124	ADAPTER EQUIPMENT - CONTROL WHEEL
1544	A27021-125	ADAPTER EQUIPMENT - CONTROL WHEEL
1545	A27022-75	SLING EQUIPMENT - RUDDER INSTALLATION/REMOVAL
1546	A27022-81	SLING EQUIPMENT - RUDDER INSTALLATION/REMOVAL
1547	A27023-22	SPACER KIT - INBD OUTBD SLAT INSTALATION

1548	A27024-2	RIGGING BAR - AILERON
1549	A27024-29	RIGGING BAR ASSY - OUTBD
1550	A27024-31	RIGGING BAR ASSY - OUTBD
1551	A27024-47	RIGGING BAR ASSY - INBOARD
1552	A27024-55	RIGGING BAR - AILERON
1553	A27074-128	LOCK SET - INBD AND OUTBD FLAP LINKAGE
1554	A27074-146	LOCK SET - INBD AND OUTBD FLAP LINKAGE
1555	A27077-1	ADAPTOR LEADING EDGE
1556	A27088-13	LINK - DUMMY, TRIM ACTUATOR, AILERON
1557	A27088-18	LINK - DUMMY, TRIM ACTUATOR, AILERON
1558	A27092-132	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS
1559	A27092-139	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS
1560	A27092-146	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS
1561	A27092-106	ACTUATOR DEACTUATOR SET - PROXIMITY SENSORS
1562	A27092-110	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS
1563	A27092-26	ACTUATOR OF SPL-1690
1564	A27092-27	ACTUATOR OF SPL-1690
1565	A27092-29	ACTUATOR OF SPL-1690
1566	A27092-32	ACT/DEACTUATOR
1567	A27092-34	ACT/DEACTUATOR
1568	A27092-62	ACT/DEACTUATOR
1569	A27092-63	ACT/DEACTUATOR
1570	A27092-64	ACT/DEACTUATOR
1571	A27092-70	ACTUATOR / DEACTUATOR SET - PROXIMITY SENSORS
1572	A27092-84	SET PROXIMITY SENSOR ACTUATOR/DEACTUATOR
1573	A27092-85	ACT/DEACTUATOR
1574	A27102-7	ADAPTER - LE SLAT and TE FLAP, MANUAL DRIVE
1575	A27102-8	ADAPTER - LE SLAT and TE FLAP, MANUAL DRIVE
1576	A27107-1	DUMMY LINK SET - FLAP LOAD RELIEF ACTUATOR
1577	A27108-13	LOCK SET - SPOILER ACTUATOR
1578	A27111-11	LOCK EQUIPMENT - ELEVATOR ACTUATOR
1579	A27114-1	REMOVAL / INSTALLATION EQUIPMENT PIVOT BEARING HORIZONTAL STABILIZER
1580	A27124-1	FORCE EQUIPMENT - RUDDER FREEPLAY CHECK
1581	A27124-36	FORCE EQUIPMENT - RUDDER FREEPLAY CHECK
1582	A27125-17	MEASUREMENT TOOL-RDR & ELEV PWR CTRL ACT.
1583	A27127-1	CHECKING FIXTURE - INPUT ROD ASSY ELEVATOR PCU
1584	A27127-29	CHECKING FIXTURE - INPUT ROD ASSY ELEVATOR PCU
1585	A28003-88	VENTILATION EQUIPMENT - FUEL TANK
1586	A28003-89	VENTILATION EQUIPMENT - FUEL TANK
1587	A28003-90	VENTILATION EQUIPMENT - FUEL TANK
1588	A28003-91	VENTILATION EQUIPMENT - FUEL TANK
1589	A28005-24	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1590	A28005-35	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1591	A28005-42	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1592	A28005-43	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1593	A28005-48	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1594	A28005-50	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1595	A28005-53	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1596	A28005-81	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1597	A28005-82	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1598	A28005-83	TEST EQUIPMENT - LEAK AND PRESSURE APU FUEL LINE SHROUD
1599	A28008-1	DRAIN HOSE – SUMP VALVE – CENTER AUX
1600	A28008-8	DRAIN HOSE – SUMP VALVE – CENTER AUX
1601	A29002-6	LOCKING PIN – HYDRAULIC RESERVOIR PRESSURIZATION SHUTOFF VALVE
1602	A32002-14	SPRING EXTENDER - DRAG STRUT, MLG
1603	A32003-1	SPRING COMPRESSOR - SIDE STRUT - MLG
1604	A32005-13	SLIDE HAMMER
1605	A32005-54	REPLACEMENT EQUIPMENT SEAL - LOWER BEARING SEAL
1606	A32005-74	REPLACEMENT EQUIPMENT SEAL - LOWER BEARING SEAL
1607	A32006-77	SLING EQUIPMENT-RETRACT ACTUATOR-MLG
1608	A32007-17	PROTECTOR EQUIPMENT, AXLE and AXLE THREAD, MLG
1609	A32008-51	SLING EQUIPMENT - MLG COMPONENTS

1610	A32008-52	SLING EQUIPMENT - MLG COMPONENTS
1611	A32008-53	SLING EQUIPMENT - MLG COMPONENTS
1612	A32012-12	WRENCH - WHEEL RETAINING NUT, MLG
1613	A32012-13	WRENCH - WHEEL RETAINING NUT, MLG
1614	A32012-6	WRENCH - WHEEL RETAINING NUT, MLG
1615	A32012-9	WRENCH - WHEEL RETAINING NUT, MLG
1616	A32014-1	DOWNLOCK ASSY MLG
1617	A32014-2	DOWNLOCK ASSY MLG
1618	A32015-9	INST/RMVL TOOL, DOWNLOCK, MLG/NLG
1619	A32017-1	PULLER EQUIPMENT - FUSE BOLTS, FORWARD TRUNNION SUPPORT, MAIN LANDING GEAR (MLG)
1620	A32020-1	HOIST ADAPTER
1621	A32021-1	WRENCH ADAPTER
1622	A32022-1	PROTECTOR - AXLE, NOSE LANDING GEAR
1623	A32023-1	SLING - RETRACT ACTUATOR NLG
1624	A32027-174	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
1625	A32027-178	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
1626	A32027-294	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR
1627	A32028-3	RETENTION STRAP INNER CYLINDER MLG & NLG
1628	A32028-6	STRAP - INNER CYLINDER, MLG & NLG
1629	A32029-26	CAM RETAINER
1630	A32029-48	NLG LOWER SEAL-REPLACEMENT
1631	A32029-50	NLG LOWER SEAL-REPLACEMENT
1632	A32030-10	LOCK, MLG DOOR
1633	A32030-12	LOCK, MLG DOOR
1634	A32030-18	LOCK, MLG DOOR
1635	A32030-21	LOCK, MLG DOOR
1636	A32030-30	LOCK, MLG DOOR
1637	A32030-31	LOCK, MLG DOOR
1638	A32030-4	LOCK, MLG DOOR
1639	A32030-6	LOCK, MLG DOOR
1640	A32031-4	TURNBUCKLE - TRUCK POSITION ACTUATOR, MLG
1641	A32031-5	TURNBUCKLE - TRUCK POSITION ACTUATOR, MLG
1642	A32032-39	R/I EQPT - MLG
1643	A32032-52	R/I EQPT - MLG
1644	A32032-64	R/I EQPT - MLG
1645	A32032-65	R/I EQPT - MLG
1646	A32026-60	TRUNNION PIN MAIN LANDING GEAR MLG
1647	A32036-67	HOIST EQPT NLG REMOVAL/INSTALATION
1648	A32036-100	HOIST EQUIPMENT - NLG INSTALLATION & REMOVAL
1649	A32038-1	DOLLY
1650	A32038-23	TRANSPORTATION DOLLY - NOSE LANDING GEAR
1651	A32045-1	WRENCH, SPANNER
1652	A32045-2	WRENCH, SPANNER
1653	A32045-3	WRENCH, SPANNER
1654	A32045-8	WRENCH, SPANNER
1655	A32045-12	WRENCH, SPANNER
1656	A32045-19	WRENCH, SPANNER
1657	A32045-20	WRENCH, SPANNER
1658	A32045-23	WRENCH, SPANNER
1659	A32045-24	WRENCH, SPANNER
1660	A32045-25	WRENCH, SPANNER
1661	A32045-34	WRENCH
1662	A32045-37	WRENCH, SPANNER
1663	A32045-38	WRENCH, SPANNER
1664	A32045-40	WRENCH, SPANNER
1665	A32045-45	WRENCH, SPANNER
1666	A32045-46	WRENCH, SPANNER
1667	A32045-48	WRENCH, SPANNER
1668	A32045-53	WRENCH, SPANNER
1669	A32045-54	WRENCH, SPANNER
1670	A32045-57	WRENCH, SPANNER
1671	A32045-58	WRENCH, SPANNER

1672	A32045-62	WRENCH, SPANNER
1673	A32045-64	WRENCH, SPANNER
1674	A32045-65	WRENCH, SPANNER
1675	A32045-66	WRENCH, SPANNER
1676	A32045-70	WRENCH, SPANNER
1677	A32045-75	WRENCH, SPANNER
1678	A32045-76	WRENCH, SPANNER
1679	A32045-77	WRENCH, SPANNER
1680	A32045-78	WRENCH, SPANNER
1681	A32045-79	WRENCH, SPANNER
1682	A32045-83	WRENCH, SPANNER
1683	A32045-85	WRENCH, SPANNER
1684	A32045-87	WRENCH, SPANNER
1685	A32045-88	WRENCH, SPANNER
1686	A32045-90	WRENCH, SPANNER
1687	A32045-91	WRENCH, SPANNER
1688	A32045-92	NLG GLAND NUT
1689	A32045-93	WRENCH, SPANNER
1690	A32045-94	WRENCH-SPANNER,MLG GLAND NUT
1691	A32045-100	WRENCH, SPANNER
1692	A32045-101	WRENCH, SPANNER
1693	A32045-105	WRENCH, SPANNER R/I NLG WHEEL RETENTION NUT TORQUE
1694	A32045-108	WRENCH, SPANNER
1695	A32045-109	WRENCH, SPANNER
1696	A32045-110	WRENCH0-SUPPORT, MLG GLAND NUT
1697	A32045-111	SPANNER WRENCH
1698	A32045-112	WRENCH
1699	A32045-114	WRENCH - AXLE NUT, NLG
1700	A32045-121	WRENCH, SPANNER
1701	A32045-123	WRENCH, SPANNER
1702	A32045-125	WRENCH, SPANNER
1703	A32047-1	COMPONENT MAINTENANCE EQUIPMENT - SHOCK STRUT, NOSE LANDING GEAR
1704	A32047-29	COMPONENT MAINTENANCE EQUIPMENT - SHOCK STRUT, NOSE LANDING GEAR
1705	A32067-11	PULLER EQUIPMENT
1706	A32067-13	PULLER EQUIPMENT
1707	A32067-24	PULLER EQUIPMENT
1708	A32069-1	WRENCH ADAPTER - RETAINER NUT ANTI SKID TRANSDUCER
1709	A32069-7	WRENCH ADAPTER - RETAINER NUT ANTI SKID TRANSDUCER
1710	A32075-1	ADAPTER - ANTISKID TRANSDUCER, SPIN-UP
1711	A32075-9	ADAPTER - ANTISKID TRANSDUCER, SPIN-UP
1712	A32075-10	ADAPTER - ANTISKID TRANSDUCER, SPIN-UP
1713	A32080-1	BRAKE DISCONNECT
1714	A32080-4	DISCONNECT FLIGHT DISPATCH
1715	A32088-7	MAINTENANCE LOCK, RETRACTABLE TAIL SKID
1716	A32095-1	WRENCH - BEARING RET BOLT MLG
1717	A32096-70	RIGGING EQUIPMENT - LANDING GEAR, AIR/GROUND SENSORS
1718	A32096-86	RIGGING EQUIPMENT - LANDING GEAR, AIR/GROUND SENSORS
1719	A32097-1	PROTECTOR - AXLE, NLG
1720	A32097-2	PROTECTOR THREAD AXLE NLG
1721	A32097-3	AXLE PROTECTOR
1722	A32098-1	PROTECTOR EQUIPT. - AXLE MLG
1723	A32098-2	PROTECTOR AXLE THREAD MLG
1724	A32098-3	PROTECTOR EQUIPT. - AXLE MLG
1725	A32098-12	PROTECTOR EQUIPMENT - AXLE MLG
1726	A32098-13	MLG AXLE THREAD PROTECTOR
1727	A32099-76	SPRING EXTENDER EQUIPMENT
1728	A32099-78	SPRING EXTENDER EQUIPMENT
1729	A32099-111	SPRING EXTENDER EQUIPMENT
1730	A32099-112	SPRING EXTENDER
1731	A32099-38	SPRING EXTENDER EQUIPMENT
1732	A32101-1	WRENCH ADAPTER - AXLE NUT NLG
1733	A32101-2	WRENCH ADAPTER - AXLE NUT NLG

1734	A32103-1	LOCKOUT PIN - FWD AFT LOCK LINK RETR TAIL SKID
1735	A32105-1	SLING EQPT - DRAG & SIDE STRUT R/I MLG
1736	A34012-1	TEST FIXTURE - ANGLE OF ATTACK
1737	A34012-19	TEST FIXTURE - ANGLE OF ATTACK
1738	A34012-24	TEST FIXTURE - ANGLE OF ATTACK
1739	A34017-1	TEST ADAPTER KIT - PITOT STATIC CONTINUITY LEAK AND FLUSHING
1740	A34017-24	TEST ADAPTER KIT - PITOT STATIC CONTINUITY LEAK AND FLUSHING
1741	A34017-36	TEST ADAPTER KIT - PITOT STATIC CONTINUITY LEAK AND FLUSHING
1742	A36004-15	INSTALLATION EQUIPMENT - CF6-80C2B BALL JOINT
1743	A36004-20	INSTALLATION TOOL CF680C2B BALL JOINT
1744	A38001-16	VACUUM TES EQPT - VACUUM WASTE SYSTEM
1745	A38001-22	VACUUM TEST EQUIPMENT - VACUUM WASTE SYSTEM
1746	A38001-65	VACUUM TEST EQUIPMENT - VACUUM WASTE SYSTEM
1747	A38001-68	VACUUM TEST EQUIPMENT - VACUUM WASTE SYSTEM
1748	A38003-20	REMOVER - BLOCKAGE, VACUUM TOILET
1749	A38003-30	REMOVER - BLOCKAGE, VACUUM TOILET
1750	A38007-1	PLUG - VACUUM WASTE SYSTEM
1751	A38007-9	PLUG - VACUUM WASTE SYSTEM
1752	A38009-1	CLEANER - LAVATORY WASTE TANK
1753	A38009-11	CLEANER - LAVATORY WASTE TANK
1754	A38009-26	CLEANER - LAVATORY WASTE TANK
1755	A38011-1	PLUG EQUIPMENT - DRAIN MAST, WASTE WATER
1756	A38012-1	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1757	A38012-18	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1758	A38012-31	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1759	A38012-32	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1760	A38012-39	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1761	A38012-40	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1762	A38012-85	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1763	A38012-86	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
1764	A42705	GAGE, CONE BOLT NUT HEIGHT
1765	A47729	PLUG
1766	A49001-3	APU CRADLE BALLAST
1767	A49001-73	CRADLE - APU
1768	A49001-78	CRADLE - APU
1769	A49001-83	CRADLE - APU
1770	A49001-84	CRADLE - APU
1771	A49001-122	L-PIN
1772	A49001-123	L-PIN
1773	A49001-137	CRADLE - APU
1774	A49002-1	LIFTING EYE - APU GENERATOR
1775	A49002-2	EYE-LIFTING GENERATOR
1776	A49003-1	APU TRANSPORTATION DOLLY
1777	A49003-12	APU TRANSPORTATION DOLLY
1778	A49005-1	SLING - APU SHOP HANDLING
1779	A49005-12	SLING - APU SHOP HANDLING
1780	A51001-1	SERVICE PLATFORM
1781	A51001-19	SERVICE PLATFORM
1782	A51006-26	MEASUREMENT EQPT - CHECK SKIN SMOOTHNESS
1783	A52002-1	SAFETY BARRIER - ENTRY, MID-ENTRY OR SERVICE DOOR
1784	A52002-13	SAFETY BARRIER - ENTRY, MID-ENTRY OR SERVICE DOOR
1785	A52004-43	SLING EQUIPMENT - DOOR HANDLING
1786	A52004-44	SLING EQUIPMENT - DOOR HANDLING
1787	A52004-100	SLING EQUIPMENT - DOOR HANDLING
1788	A52004-101	SLING EQUIPMENT - DOOR HANDLING
1789	A52004-41	SLING EQUIPMENT - DOOR HANDLING
1790	A52004-42	SLING EQUIPMENT - DOOR HANDLING
1791	A52004-45	SLING EQUIPMENT - DOOR HANDLING
1792	A52004-46	SLING EQUIPMENT - DOOR HANDLING
1793	A52004-47	SLING EQUIPMENT - DOOR HANDLING
1794	A52004-95	SLING EQUIPMENT - DOOR HANDLING
1795	A52008-14	GROUND LOCK - ENTRY/SERVICE DOOR

1796	A52019-1	DRIVER SET - HINGE PINS, LARGE CARGO DORRS
1797	A52019-13	DRIVER SET - HINGE PINS, LARGE CARGO DORRS
1798	A52022-1	CANOPY - FORWARD ENTRY DOOR
1799	A52032-17	ADJUSTMENT TOOL SET - LATCH PINS MAIN CARGO DOOR
1800	A52033-1	VERIF EQPT - MAIN LATCH FITTINGS, MAIN DECK CARGO DOOR
1801	A52034-1	RIGGING EQUIPMENT - ROTARY ACTUATOR, MAIN DECK CARGO DOOR
1802	A52036-1	SLING EQPT - MAIN DECK CARGO DOOR
1803	A53001-1	SLING - RADOME
1804	A53001-14	SLING - RADOME
1805	A54002-9	DRILL JIG - SIDE LINK, NACELLE STRUT
1806	A54002-19	DRILL JIG - SIDE LINK, NACELLE STRUT
1807	A54003-1	SLING EQUIPMENT - STRUT REMOVAL AND INSTALLATION
1808	A54003-41	SLING EQUIPMENT - STRUT REMOVAL AND INSTALLATION
1809	A54003-42	SLING EQUIPMENT - STRUT REMOVAL AND INSTALLATION
1810	A54004-27	EQUIP PRE-LOAD STRUT
1811	A54008-1	PULLER ASSY
1812	A54008-13	PULLER EQUIPMENT - FUSE PIN
1813	A54011-18	REMOVAL/INSTALLATION KIT - MIDSPAR FUSE PIN
1814	A54011-24	REMOVAL/INSTALLATION KIT - MIDSPAR FUSE PIN
1815	A54011-25	REMOVAL/INSTALLATION KIT - MIDSPAR FUSE PIN
1816	A54011-26	REMOVAL/INSTALLATION KIT - MIDSPAR FUSE PIN
1817	A55001-19	LOCK EQUIPMENT - HORIZONTAL STABILIZER
1818	A55001-22	LOCK EQUIPMENT
1819	A55001-47	LOCK EQUIPMENT - HORIZONTAL STABILIZER
1820	A55004-98	JACKING EQUIPMENT - HINGE, HORIZONTAL STABILIZER
1821	A55005-1	REMOVAL EQUIPMENT - PIVOT BEARING, HORIZONTAL STABILIZER
1822	A55009-1	PLATFORM EQUIPMENT - EMPENNAGE ACCESS, VERTICAL FIN
1823	A56001-15	SLING SET - NUMBER 1 AND 3 CABIN WINDOW
1824	A56001-30	SET - SLING, NUMBER 1 AND 3 WINDSHIELDS
1825	A57003-1	LOCATING EQPT - WEDGE REPLACEMENT
1826	A57007-1	LUBRICATION EQPT - LE SLAT AUX ARM ROLLER BOLT
1827	A57008-1	REMOVE INSTALL EQPT - MLG BOTTLE PIN
1828	A666633	GREASE RETENTION SLEEVE
1829	A71001-18	CABLE ASSEMBLY
1830	A71001-191	BOOTSTRAP EQUIPMENT - PRATT AND WHITNEY ENGINES
1831	A71001-198	BOOTSTRAP EQUIPMENT - PRATT AND WHITNEY ENGINES
1832	A71005-33	SLING EQUIPMENT
1833	A71009-25	SLING - THRUST REVERSER CF6-80A
1834	A71011-286	BALL LOCK PIN
1835	A71011-293	BALL LOCK PIN
1836	A71011-302	BALL LOCK PIN
1837	A71011-316	BALL LOCK PIN
1838	A71011-331	BOOTSTRAP EQPT FOR CF6-80A ENGINES
1839	A71011-332	BOOTSTRAP EQPT FOR CF6-80A ENGINES
1840	A71013-82	HOIST ADAPTER - ENTEGRATED DRIVE GENERATOR
1841	A71015-94	HEAD ASSY
1842	A71015-108	LIFT FIXTURE ENGINE ACCESSORY
1843	A71015-148	LIFT FIXTURE ENGINE ACCESSORY
1844	A71015-157	LIFT FIXTURE ENGINE ACCESSORY
1845	A71016-1	SLING EQUIPMENT - CORE COWL
1846	A71016-23	SLING EQUIPMENT - CORE COWL
1847	A71016-34	SLING EQUIPMENT - CORE COWL
1848	A71016-35	SLING EQUIPMENT - CORE COWL
1849	A71023-53	CRADLE - CF6-80A ENGINE 90 - INCH RAIL
1850	A71023-56	CRADLE - CF6-80A ENGINE 90 - INCH RAIL
1851	A71030-32	HOLD OPEN EQUIPMENT - FAN COWL, 40 KNOTS, (PRATT AND WHITNEY ENGINES)
1852	A71035-1	COVER EQUIPMENT - BLEED VALVE, GE ENGINE
1853	A71035-13	COVER EQUIPMENT - BLEED VALVE, GE ENGINE
1854	A71035-27	COVER EQUIPMENT - BLEED VALVE, GE ENGINE
1855	A78001-21	HOLD OPEN EQPT. THRUST REVERSER
1856	A78001-22	HOLD OPEN EQPT. THRUST REVERSER
1857	A78001-31	HOLD OPEN EQPT. THRUST REVERSER

1858	A78001-44	S. RING REMOVABLE of A78001-48
1859	A78001-48	HOLD OPEN EQPT. THRUST REVERSER
1860	A78001-51	M. RING REMOVABLE of A78001-48
1861	A78002-1	THREAD PROTECTOR EQUIPMENT - THRUST REVERSER INSTALLATION AND REMOVAL
1862	A78002-8	THREAD PROTECTOR EQUIPMENT - THRUST REVERSER INSTALLATION AND REMOVAL
1863	A78002-9	THREAD PROTECTOR KIT
1864	A78007-1	SLING, SLEEVE, THRUST REVERSER CF6-80
1865	A78008-16	SLING - SLEEVE, THRUST REVERSER
1866	A78018-11	SLING THRUST REVERSER SLEEVE
1867	A78013-1	SLING - EXHAUST SLEEVE, ENGINE
1868	A78013-2	SLING - EXHAUST SLEEVE, ENGINE
1869	A78013-11	SLING - EXHAUST SLEEVE, ENGINE
1870	A78013-20	SLING - EXHAUST SLEEVE, ENGINE
1871	A78013-21	SLING - EXHAUST SLEEVE, ENGINE
1872	A78013-22	SLING - EXHAUST SLEEVE, ENGINE
1873	A78019-27	HAND PUMP - OPENING SYSTEM, THRUST REVERSER
1874	A78019-29	HAND PUMP - OPENING SYSTEM, THRUST REVERSER
1875	AC21817	LOOSENING WRENCH
1876	AEGG12547	SHIM SETTING ASSEMBLY TOOL
1877	AETL34168	STATOR BRG REMOVAL TOOL
1878	AGE10023	HOLDING FIXTURE
1879	AGE10024	LINER DRIVE
1880	AGE10026	DIFFERENTIAL SPLITTER
1881	AGE10027	DIFFERENTIAL SPLITTER
1882	AGE10029	LINER DRIVER
1883	AGE10031	BULLET
1884	AGE10040	ASSEMBLY HOLDER
1885	AGE10042	LINER DRIVER
1886	AGE10062	LOCATOR PLATE
1887	AGE10066	DRIVER
1888	AGE10087	PLIER TIPS RETAINER
1889	AGE10135	INSERTER, PISTON
1890	AGE10341	HOLDING FIXTURE
1891	AGE10344	PIN DRIVER
1892	AGE10346	HOLDING FIXTURE
1893	AGE10390	PULLER, EXPANDABLE
1894	AGE10789	MISCELLANEOUS PULLER
1895	AGE10953	SPRING RETAINER
1896	AGE10955	ASSEMBLY TOOL, GEN STATOR
1897	AGE11320	TONGS ASSEMBLY, BRAZING
1898	AGE11589	LINER DRIVER
1899	AGE11597	ASSY, TOOL, MISC
1900	AGE11599	PUMP ASSEMBLY TOOL
1901	AGE11828	ASSEMBLY TOOL
1902	AGE11885	BULLET
1903	AGE12033	ALIGNING FIXTURE
1904	AGE12676	PUSHER
1905	AGE12725	WOBBLER HOLDER
1906	AGE12759	DIODE MANIFOLD PULLER
1907	AGE12845	LINEAR MOVEMENT GAUGE
1908	AGE12959	SLEEVE, GUIDE
1909	AGE13076	EXTRACTOR ASSEMBLY DISK
1910	AGE13093	ASSEMBLY FIXTURE
1911	AGE13147	TERMINAL ALIGNMENT FIXTURE
1912	AGE13234	JOURNAL BEARING DRIVER
1913	AGE13239	LINER DRIVER
1914	AGE13240	LINER DRIVER
1915	AGE13244	LINER DRIVER
1916	AGE15165	LIFTING FIXTURE
1917	AGE15166	ASSEMBLY CART
1918	AGE16392	FIXTURE HOLDING, PRIMARY EXCHANGER
1919	AGE16393-01	FIXTURE, ALIGNMENT, QUAD HEAT EXCHANGER HORIZONTAL

1920	AGE18378	ADAPTER, FLUSH, 737NG GOVERNOR SUPPORT
1921	AGE70315	SWITCH BOX ASSEMBLY, FAN IDENTIFICATION
1922	AGE70316	CABLE ASSEMBLY, J1, 235V AC POWER
1923	AGE70367	CABLE ASSEMBLY, J2, FAN SWITCH BOX ID
1924	AKS-30879	TOOL ASSY
1925	AKS-31566-9	ASSEMBLY TOOL
1926	AS1908	SOCKET - WRENCH SOCKET
1927	AXG7000-501	PIN ASSY - DOWNLOCK, LANDING GEAR
1928	B12004-1	RECEPTACLE - FUEL SAMPLING
1929	B12006-1	LUBRICATION FITTING ADAPTER
1930	B20003-83	RIGGING PIN SET
1931	B20003-84	RIGGING PIN SET
1932	B20003-88	RIGGING PIN SET
1933	B20003-91	RIGGING PIN SET
1934	B20004-21	LEVERAGE ADAPTER EQUIPMENT - ACCESS PANEL
1935	B20004-42	LEVERAGE ADAPTER EQUIPMENT - ACCESS PANEL
1936	B24001-53	BRACKET WELDMENT
1937	B24001-91	HOIST-MAIN BATTERY
1938	B24001-101	HOIST-MAIN BATTERY
1939	B24001-119	HOIST-MAIN BATTERY
1940	B24001-121	HOIST MAIN BATTERY
1941	B26002-1	TEST EQUIPMENT - DISCHARGE LINES, CARGO FIRE EXTINGUISHER
1942	B26002-13	TEST EQUIPMENT - DISCHARGE LINES, CARGO FIRE EXTINGUISHER
1943	B27007-9	LOCK SPOILER
1944	B27007-12	LOCKOUT ACTUATOR
1945	B27007-15	SPOILER ACTUATOR LOCK
1946	B27008-1	LOCK - T.E. FLAP, POWER UNIT DRIVE
1947	B27009-12	LOCK-OUT EQUIPMENT - POWER CONTROL ACTUATOR, ELEVATOR
1948	B27011-79	INSTALLATION/REMOVAL EQUIPMENT - HORIZONTAL STABILIZER JACKSCREW
1949	B27013-19	LOCK SAFETY PCU RUDDER
1950	B27013-20	LOCK EQUIPMENT
1951	B27020-29	LOCK FLAP ALT. DRIVE
1952	B27020-31	LOCK SET LE SLAT DRIVE
1953	B27020-32	VALVE LOCK ASSY
1954	B27065-1	CIRCUIT BREAKER LOCK SET
1955	B27065-2	CIRCUIT BREAKER LOCK SET
1956	B27065-9	CIRCUIT BREAKER LOCK SET
1957	B27065-12	CIRCUIT BREAKER LOCK SET
1958	B27073-1	LOCKOUT TOOL - OUTBOARD SLAT
1959	B27078-36	SLING EQPT - TRAILING EDGE FLAPS
1960	B27078-56	SLING EQPT - TRAILING EDGE FLAPS
1961	B28001-1	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION
1962	B28001-8	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION
1963	B28001-11	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION
1964	B28001-13	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION
1965	B28001-18	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION
1966	B28001-2	ADAPTER ASSY
1967	B28002-1	HOSE ADPT - SUMP FUEL DRAIN
1968	B28003-1	PULLER - FUEL PUMP
1969	B28005-1	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1970	B28005-2	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1971	B28005-27	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1972	B28005-40	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1973	B28005-41	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1974	B28005-42	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1975	B28005-70	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM
1976	B28009-1	ALIGNMENT EQUIPMENT - FUEL SHUTOFF VALVE
1977	B29001-23	SCREEN EQPT - RAM AIR TURBINE
1978	B29001-46	SCREEN EQPT - RAM AIR TURBINE
1979	B29002-1	LOCK SET - HYDRAULIC RESERVOIR VENT VALVE
1980	B29002-5	LOCK SET - HYDRAULIC RESERVOIR VENT VALVE
1981	B32001-4	DOWNLOCK - MLG/NLG

1982	B32003-1	PIN PULLER - TRUNNION, NLG
1983	B32010-3	THREAD PROTECTOR
1984	B32010-5	SLEEVE
1985	B32010-6	THREAD PROTECTOR
1986	B32010-14	CHANGE EQUIPMENT - WHEEL AND BRAKE, MAIN LANDING GEAR (MLG)
1987	B32010-15	CHANGE EQPT - WHEEL & BRAKE MLG
1988	B32010-16	WRENCH ASSY
1989	B32010-23	WRENCH
1990	B32010-28	THREAD PROTECTOR EQPT - UNDERSIZED AXLE
1991	B32011-14	THREAD PROTECTOR SET
1992	B32012-15	LOCK EQUIPMENT - DOOR ACTUATOR, MAIN LANDING GEAR
1993	B32012-45	LOCK EQUIPMENT - DOOR ACTUATOR, MAIN LANDING GEAR
1994	B32013-12	LOCK-DOOR ACTUATOR, NOSE LANDING GEAR
1995	B32013-17	LOCK-DOOR ACTUATOR, NOSE LANDING GEAR
1996	B32015-38	HOISTING ADAPTER SET - MAIN LANDING GEAR COMPONENTS
1997	B32019-1	RETRAIN - SHOCK STRUT NLG
1998	B32021-1	AXLE PROTECTOR - NOSE LANDING GEAR (NLG)
1999	B32021-2	PROTECTOR
2000	B32021-3	AXLE SHAFT
2001	B49001-1	FRAME - AUXILIARY POWER UNIT (APU) INSTALLATION AND REMOVAL
2002	B49001-35	FRAME - AUXILIARY POWER UNIT (APU) INSTALLATION AND REMOVAL
2003	B49002-64	STAND - APU MAINTENANCE AND TRANSPORTATION
2004	B49004-1	SUPPORT EQUIPMENT - AUXILIARY POWER UNIT
2005	B52004-1	TOOL-INSTALLATION, DOOR SEAL
2006	B52009-1	SAFETY PIN SET
2007	B52009-10	SAFETY PIN SET - EMERGENCY POWER SYSTEM, ENTRY DOORS
2008	B54001-53	HYDRAULIC PUMP - ENGINE "C" DUCT
2009	B54002-52	SLING EQUIPMENT - STRUT RB211
2010	B54003-8	PRELOAD FIXTURE - STRUT, RB211-535 ENGINE STRUT
2011	B54017-22	SLING EQPT - FUSE PIN REM/INSTL -RB211-535 ENGINE
2012	B71001-313	ENGINE HANDLING EQUIPMENT - RB211-535
2013	B71001-371	ENGINE HANDLING EQUIPMENT - RB211-535
2014	B71001-372	ENGINE HANDLING EQUIPMENT - RB211-535
2015	B71006-79	HOLD OPEN EQUIPMENT - 'C' DUCT RB211-535 ENGINE
2016	B71007-1	CRADLE-RB211-535 ENGINE
2017	B71007-117	CRADLE-RB211-535 ENGINE
2018	B71007-127	CRADLE-RB211-535 ENGINE
2019	B71007-83	CRADLE-RB211-535 ENGINE
2020	B71034-13	TEST EQUIPMENT - ENGINE PRESSURE MONITORING
2021	B71034-29	TEST EQUIPMENT - ENGINE PRESSURE MONITORING
2022	B71034-40	TEST EQUIPMENT - ENGINE PRESSURE MONITORING
2023	B71034-48	TEST EQUIPMENT - ENGINE PRESSURE MONITORING
2024	B71034-63	TEST EQUIPMENT - ENGINE PRESSURE MONITORING
2025	B71040-24	LIFTING STRAP ASSEMBLY
2026	B71040-25	STRAP ASSY
2027	B71040-36	SLING EQUIPMENT - INLET COWL
2028	B71040-37	SLING EQUIPMENT - INLET COWL
2029	B71040-38	SLING EQUIPMENT - INLET COWL
2030	B71040-39	SLING
2031	B71040-66	SLING EQUIPMENT - INLET COWL
2032	B71042-154	HANDLING FRAME EQPT
2033	B71044-10	ADAPTER EQUIPMENT - LOAD TEST, PRESSURE RELIEF DOOR LATCH
2034	B71044-37	ADAPTER EQUIPMENT - LOAD TEST, PRESSURE RELIEF DOOR LATCH
2035	B71046-1	SLING ASSEMBLY - OVERHEAD REMOVAL/INSTALLATION, PW ENGINE
2036	B78001-1	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2037	B78001-14	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2038	B78001-2	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2039	B78001-24	LOCK - THRUST REVERSER
2040	B78001-43	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2041	B78001-5	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2042	B78001-8	LOCK ASSEMBLY – THRUST REVERSER ISOLATOR VALVE
2043	B78006-1	RIGGING BAR - THRUST REVERSER POSITION FEEDBACK

2044	B78008-5	WRENCH
2045	B78008-6	WRENCH
2046	B78008-7	WRENCH
2047	B78008-12	WRENCH ASSY
2048	B78008-17	SPANNER WRENCH
2049	B78008-19	WRENCH SET - THRUST REVERSER ACTUATOR
2050	B78008-21	ADAPTER ASSY
2051	B78010-28	STAND-FUNCTIONAL TE, LOCKING
2052	B78010-9	STAND-FUNCTIONAL TE, LOCKING
2053	B78011-25	TORQUE FIXTURE - LOCKING AND NON-LOCKING THRUST REVERSER ACTUATOR ASSEMBLY
2054	B78014-29	TEST FIXTURE - THRUST REVERSER ACTUATOR
2055	B78014-37	TEST FIXTURE - THRUST REVERSER ACTUATOR
2056	B78016-1	OVERHAUL SET - T/R ACTUATOR ASSEMBLY
2057	B78016-5	SLEEVE
2058	B78016-6	PLUG
2059	B78016-8	HOUSING, NON-LOCKING
2060	B78016-9	ADAPTER
2061	B78016-13	OVERHAUL SET - T/R ACTUATOR ASSEMBLY
2062	B78017-1	INSTALLATION EQUIPMENT – BEARING – LEAD SCREW, THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY
2063	C07002-1	FITTING - WING JACKING
2064	C07002-2	WING JACK FITTING
2065	C07004-1	PAD - AIRCRAFT JACKING, AFT BODY
2066	C07004-2	PAD - AIRCRAFT JACKING, AFT BODY
2067	C07005-1	FITTING - AIRPLANE TIEDOWN
2068	C07006-16	TETHERING FIXTURE - REAR SPAR VERT FIN, AFT FITTING
2069	C07007-10	SETSCREW
2070	C07007-11	FORWARD BODY JACK ADAPTER
2071	C07007-19	JACKING ADAPTOR
2072	C07007-21	BOLT
2073	C07007-22	ADAPTER ASSEMBLY
2074	C07007-8	INNER BUSHING
2075	C07007-9	OUTER BUSHING
2076	C07008-21	RESTRAINT EQUIPMENT - OUTBOARD TRAILING EDGE FLAP TRACKS
2077	C07008-28	RESTRAINT EQUIPMENT - OUTBOARD TRAILING EDGE FLAP TRACKS
2078	C07011-11	TETHER FITTING - FORWARD BODY JACK LOCATION
2079	C07013-1	TAIL STAND - AFT FUSELAGE JACKING POINT
2080	C07013-64	TAIL STAND - AFT FUSELAGE JACKING POINT
2081	C07013-83	TAIL STAND - AFT FUSELAGE JACKING POINT
2082	C10002-9	MOORING EQUIPMENT - NOSE LANDING GEAR
2083	C10004-1	PROTECTIVE COVER - VANE SENSOR, ANGLE-OF-ATTACK
2084	C10005-23	PROTECTIVE COVER EQPT - ENGINE INLET, CFM LEAP-1B
2085	C10007-1	PLUG EQUIPMENT - FAN REVERSER, CFM LEAP - 1B
2086	C10011-1	MOORING EQUIPMENT - UNIVERSAL KIT
2087	C10011-2	MOORING EQUIPMENT - UNIVERSAL KIT
2088	C10011-31	MOORING EQUIPMENT - UNIVERSAL KIT
2089	C10011-34	MOORING EQUIPMENT - UNIVERSAL KIT
2090	C12004-6	SPRING - BALLSCREW LUBRICATION ATTACHMENT
2091	C12005-1	OIL GUN - FLAP ACTUATOR BALL SCREW, HAND OPERATED
2092	C12005-5	OIL GUN - FLAP ACTUATOR BALL SCREW, HAND OPERATED
2093	C12006-14	LOCK EQUIPMENT - AILERON FULL - UP LUBRICATION
2094	C20002-267	BOOM HOIST - GROUND BASED REMOVAL/INSTALLATION
2095	C21001-12	TEST EQUIPMENT - COOLING SYSTEM PERFORMANCE
2096	C21001-16	TEST EQUIPMENT - COOLING SYSTEM PERFORMANCE
2097	C21001-19	TEST EQPT - COOLING SYSTEM PERFORMANCE
2098	C21002-4	GUAGE ASSEMBLY
2099	C21002-20	REVERSE FLUSHER EQUIPMENT - HEAT EXCHANGER
2100	C21002-24	REVERSE FLUSHER EQUIPMENT - HEAT EXCHANGER
2101	C21003-80	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2102	C21003-81	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2103	C21003-133	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2104	C21003-134	BACKFLUSH EQUIP-AIR CONDITIONING PACK HEAT
2105	C21003-135	BACKFLUSH EQUIPMENT - AIR CONDITIONING PACK HEAT EXCHANGER

2106	C21003-155	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2107	C21003-156	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2108	C21003-160	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2109	C21003-161	BACKFLUSH EQPT - A/C PACK HEAT EXCHANGER
2110	C21003-71	BACKFLUSH EQUIPMENT - AIR CONDITIONING PACK HEAT EXCHANGER
2111	C21003-82	BACKFLUSH EQUIPMENT - AIR CONDITIONING PACK HEAT E
2112	C21005-62	HOIST ADAPTER - AIR CONDITIONING PACK
2113	C21005-70	HOIST ADAPTER - AIR CONDITIONING PACK
2114	C21006-1	VALVE DEACTIVATOR ASSEMBLY
2115	C21006-7	VALVE DEACTIVATOR ASSEMBLY
2116	C21009-1	DISPATCH LINK - SRADA STOWAGE
2117	C21009-3	LINK
2118	C21012-1	RIGGING CLIP - SRADA EXIT LOUVERS
2119	C24002-77	JACK ADAPTOR-VSCF AND IDG BEOING 737-800
2120	C24002-78	JACK ADAPTER
2121	C25002-1	INSTALLATION/REMOVAL TOOL
2122	C25005-1	PORTABLE CART - GALLEY ASSY
2123	C24003-1	TRAY ASSEMBLY - BATTERY, REMOVAL AND INSTALLATION
2124	C24003-9	TRAY ASSEMBLY - BATTERY, REMOVAL AND INSTALLATION
2125	C24004-1	POWER DISTRIBUTION PANEL (PDP)- REMOVAL AND INSTALLATION EQUIPMENT
2126	C24004-43	POWER DISTRIBUTION PANEL (PDP)- REMOVAL AND INSTALLATION EQUIPMENT
2127	C26004-32	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2128	C26004-33	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2129	C26004-73	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2130	C26004-74	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2131	C26004-78	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2132	C26004-79	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2133	C26004-8	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2134	C26004-83	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2135	C26004-101	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2136	C26004-84	TEST EQPT - ENGINE FIRE EXTINGUISHING SYSTEM
2137	C26011-1	ALIGNMENT EQUIPMENT - FIRE SUPPRESSION BOTTLE NOZZLE
2138	C27001-34	GROUND LOCK SET - OUTBOARD SPOILER ACTUATORS
2139	C27001-41	GROUND LOCK SET - OUTBOARD SPOILER ACTUATORS
2140	C27001-42	GROUND LOCK SET - OUTBOARD SPOILER ACTUATORS
2141	C27001-43	LOCK ASSY
2142	C27001-51	SET GROUND LOCK OUTBOARD SPOILER ACTUATOR
2143	C27003-38	SLING EQUIPMENT - RUDDER REMOVAL and INSTALLATION
2144	C27012-14	LOCKOUT SET - LE SLAT ACTUATOR
2145	C27012-15	LOCKOUT ASSY
2146	C27012-16	LOCKOUT ASSY
2147	C27022-1	CLAMP SET TRAILING EDGE
2148	C27026-1	TEST FIXTURE - BRAKE ASSEMBLY, STABILIZER TRIM ACTUATOR
2149	C27026-14	TEST FIXTURE - BRAKE ASSEMBLY, STABILIZER TRIM ACTUATOR
2150	C27026-24	TEST FIXTURE - BRAKE ASSEMBLY, STABILIZER TRIM ACTUATOR
2151	C27028-1	RIGGING BAR - ELEVATOR TAB
2152	C27028-21	RIGGING BAR - ELEVATOR TAB
2153	C27028-41	RIGGING BAR - ELEVATOR TAB
2154	C27030-2	TEST EQUIPMENT - FLAP SCREW BACKLASH
2155	C27030-33	TEST EQUIPMENT - FLAP SCREW BACKLASH
2156	C27030-94	TEST EQUIPMENT - FLAP SCREW BACKLASH
2157	C27030-107	TEST EQUIPMENT - FLAP SCREW BACKLASH
2158	C27030-108	TEST EQUIPMENT - FLAP SCREW BACKLASH
2159	C27030-109	TEST EQUIPMENT - FLAP SCREW BACKLASH
2160	C27033-1	WRENCH - RETAINING NUT, STABILIZER TRIM ACTUATOR
2161	C27033-5	WRENCH - RETAINING NUT, STABILIZER TRIM ACTUATOR
2162	C27033-6	WRENCH - RETAINING NUT, STABILIZER TRIM ACTUATOR
2163	C27034-1	SLING - ELEVATOR REMOVAL / INSTALLATION
2164	C27034-43	SLING - ELEVATOR REMOVAL / INSTALLATION
2165	C27034-44	SLING - ELEVATOR REMOVAL / INSTALLATION
2166	C27035-20	SLING EQUIPMENT - RUDDER REMOVAL and INSTALLATION
2167	C27038-6	LOCKPIN CRUISE DEPRESSURIZATION VALVE

2168	C27041-1	WRENCH - COUPLING SLEEVE, FLAP ACTUATION
2169	C27042-1	WRENCH - TORQUE EQUIPMENT, RUDDER POWER CONTROL UNIT ATTACHMENT
2170	C27045-1	KIT - LE SLAT RIGGING TOOLS
2171	C27046-13	LOCK INBOARD GROUND SPOILER
2172	C27047-19	SET LOCK FLIGHT SPOILER B737-700/800
2173	C27047-41	LOCK SET - FLIGHT SPOILER ACTUATOR
2174	C27047-42	SPOILER GROUND LOCK SET
2175	C27047-43	LOCK SET - FLIGHT SPOILER ACTUATOR
2176	C27050-82	JACKSCREW R/I EQ
2177	C27050-125	HANDLING EQUIPMENT - REMOVAL/INSTALLATION, STABILIZER JACKSCREW
2178	C27051-1	SET, LOCKOUT
2179	C27051-2	LOCK OUT SET LEADING EDGE KRUGER FLAP and SLAT ACTUATOR
2180	C27051-29	KIT-LOCK SAFETY SLAT/FLAP
2181	C27051-30	LOCK ASSY - SLAT
2182	C27052-25	SLING EQUIPMENT
2183	C27052-39	SLING EQUIPMENT - TRAILING EDGE FLAPS
2184	C27055-1	SLING - AILERON INSTL/RMVL
2185	C27056-19	SLING EQUIPMENT - LEADING EDGE SLAT, REMOVAL AND INSTALLATION
2186	C27056-35	SLING EQUIPMENT - LEADING EDGE SLAT, REMOVAL AND INSTALLATION
2187	C27057-1	LOCK - RUDDER POWER CONTROL UNIT (PCU) REMOVED
2188	C27060-1	ADAPTER EQUIPMENT - CONTROL WHEEL
2189	C27060-22	ADAPTER EQUIPMENT - CONTROL WHEEL
2190	C27064-1	TORQUE WRENCH ADAPTER - MANUAL STABILIZER TRIM WHEEL
2191	C27065-1	CHECK EQUIPMENT - JACKSCREW BACKLASH, HORIZONTAL STABILIZER
2192	C27066-1	LOCK EQUIPMENT AILERON/ELEVATOR PCU
2193	C27067-81	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP
2194	C27067-82	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP
2195	C27067-83	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP
2196	C27067-87	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP
2197	C27067-88	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP
2198	C27069-12	RIGGING EQUIPMENT - INTERLOCK VALVE CABLE. GROUND SPOILER
2199	C27069-20	RIGGING EQUIPMENT - INTERLOCK VALVE CABLE. GROUND SPOILER
2200	C27076-1	ADAPTER - TORSION ROD INSTALLATION, LEADING EDGE SLAT
2201	C27076-9	ADAPTER - TORSION ROD INSTALLATION, LEADING EDGE SLAT
2202	C27078-1	MEASUREMENT TOOL - STABILIZER SYSTEM TEST
2203	C27080-1	DRUM WRENCH - STABILIZER TRIM ACTUATOR
2204	C27084-1	TEST EQUIPMENT OUT BOARD T. E TRANSMISSION
2205	C27085-1	REMOVAL/INSTALLATION EQPT-TAB MECHANISM ASSY, ELEVATOR CONTROL
2206	C27086-1	SPRING REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR TAB MECHANISM ASSEMBLY
2207	C27086-27	SPRING REMOVAL/INSTALLATION - ELEVATOR TAB MECHANISM ASSEMBLY
2208	C27090-1	TORQUE SOCKET - UPPER STOP, STABILIZER TRIM JACK SCREW
2209	C27093-1	FUNCTIONAL TEST - TRANSFER MECHANISM, AILERON CONTROL
2210	C27093-2	FUNCTIONAL TEST - TRANSFER MECHANISM, AILERON CONTROL
2211	C27093-3	FUNCTIONAL TEST - TRANSFER MECHANISM, AILERON CONTROL
2212	C27095-1	RIGGING LOCK - FOUR DEGREE SPEEDBRAKE LEVER
2213	C27097-1	STRAIGHT EDGE - CONTROL WHEEL
2214	C27107-1	LOCK SET - FLIGHT SPOILER ACTUATOR
2215	C28015-1	REMOVAL AID - FUEL QUANTITY PROCESSOR UNIT
2216	C29004-1	DRAIN HOSE - HYDRAULIC RESERVOIR
2217	C32011-7	SOCKET EQPT - BRAKE DISCONNECT VALVE
2218	C32012-12	SOCKET KIT - MLG AXLE NUT
2219	C32012-13	MLG THREAD PROTECTOR
2220	C32012-1922	NLG SOCKET
2221	C32012-20	THREAD PROTECTOR
2222	C32012-3	SOCKET AXLE NUT
2223	C32012-8	RMWL/INSTL EQPT - WHEEL RETENTION NUT, MLG AND NLG
2224	C32013-1	TORQUE WRENCH ADAPTER - AFT BEARING RETAINER NUT, MAIN LANDING GEAR TRUNNION
2225	C32013-2	ADAPTER TORQUE WRENCH
2226	C32013-9	TORQUE WRENCH ADAPTER - AFT BEARING RETAINER NUT, MAIN LANDING GEAR TRUNNION
2227	C32013-15	TORQUE WRENCH ADAPTER
2228	C32013-16	TORQUE WRENCH ADAPTER
2229	C32014-1	SPRING EXTENDER - DOWNLOCK, NOSE AND MAIN LANDING GEAR

2230	C32014-20	SPRING EXTENDER - DOWNLOCK, NOSE AND MAIN LANDING GEAR
2231	C32014-29	SPRING EXTENDER - DOWNLOCK, NOSE AND MAIN LANDING GEAR
2232	C32015-1	PULLER EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
2233	C32015-18	PULLER EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
2234	C32015-22	PULLER EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
2235	C32015-34	PULLER EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
2236	C32016-2	SCRAPER PLUNGER
2237	C32016-3	SCRAPER PLUNGER
2238	C32016-7	DYNAMIC SEAL STUFFER
2239	C32016-33	RMV/INSTL EQUIPMENT - NLG LOWER SEALS
2240	C32016-46	RMV/INSTL EQUIPMENT - NLG LOWER SEALS
2241	C32016-47	RAM ASSEMBLY
2242	C32016-59	STRAP ASSEMBLY
2243	C32016-66	REMOVAL/INSTALLATION EQUIPMENT - NOSE LANDING GEAR LOWER SEALS
2244	C32017-1	KIT TOOL
2245	C32017-30	RAM ASSEMBLY
2246	C32017-33	EXCLUDER PLUNGER
2247	C32017-34	EXCLUDER GUIDE
2248	C32017-52	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
2249	C32017-53	REPLACEMENT EQPT - MLG LWR BEARING SEALS
2250	C32017-54	DYNAMIC SEAL SLEEVE
2251	C32017-67	REPLACEMENT EQPT - MLG LWR BEARING SEALS
2252	C32019-1	EXTENSION - ORIFICE TUBE, NOSE GEAR SHOCK STRUT
2253	C32020-1	EXTENSION BAR - FUNCTIONAL TEST, NOSE LANDING GEAR STEERING
2254	C32020-15	EXTENSION BAR - FUNCTIONAL TEST, NOSE LANDING GEAR STEERING
2255	C32021-1	WRENCH SET - RETAINER NUT, REMOVAL/INSTALLATION, ANTI-SKID TRANSDUCER, MAIN LANDING GEAR
2256	C32022-12	BRAKE PROTECTOR TUBE
2257	C32022-16	MLG THREAD PROTECTOR
2258	C32022-17	PROTECTOR - THREAD, EQPT.
2259	C32022-18	THREAD PROTECTOR - MLG
2260	C32022-2	THREAD PROTECTOR EQUIPMENT - NLG AXLE
2261	C32022-20	NLG AXLE THREAD PROTECTOR EQPT
2262	C32022-21	THREAD PROTECTOR NLG
2263	C32022-23	PROTECTOR - THREAD, EQPT.
2264	C32022-24	THREAD PROTECTOR EQP - MLG AXLE
2265	C32022-26	PROTECTOR - THREAD, EQPT.
2266	C32022-3	AXLE PROTECTOR - MLG
2267	C32022-32	SPL-14320 UNDERSIZED MLG THREAD PROTECTOR
2268	C32022-33	MLG THREAD PROTECTOR
2269	C32022-35	THREAD PROTECTOR EQUIPMENT
2270	C32022-38	THREAD PROTECTOR
2271	C32022-39	THREAD PROTECTOR EQPT MLG/NLG AXLE
2272	C32022-40	THREAD PROTECTOREQP - MLG AXLE
2273	C32023-12	WRENCH - TRUNNION SPHERICAL BEARING, MLG
2274	C32025-7	SPANNER WRENCH
2275	C32025-8	WRENCH ASSEMBLY NLG
2276	C32026-1	LOCK ASSY
2277	C32026-12	DOWNLOCK PIN
2278	C32026-15	DOWNLOCK EQUIPMENT - NOSE LANDING GEAR AND MAIN LANDING GEAR
2279	C32026-6	DOWNLOCK EQUIPMENT - MLG & NLG
2280	C32028-1	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2281	C32028-3	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2282	C32028-56	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2283	C32028-58	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2284	C32028-59	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2285	C32028-109	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2286	C32028-110	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2287	C32028-111	REMOVAL/INSTALLATION EQUIPMENT - WALKING BEAM ASSEMBLY, MAIN LANDING GEAR
2288	C32029-14	THREAD PROTECTOR
2289	C32029-31	WRENCH ADAPTER ASSEMBLY
2290	C32029-33	THREAD PROTECTOR
2291	C32029-38	PIN INSTALLATION/REMOVAL KIT - MAIN LANDING GEAR

2292	C32029-39	WRENCH ADAPTER ASSEMBLY
2293	C32029-45	PIN INSTL RMVL KIT - MLG
2294	C32029-48	WRENCH ADAPTER
2295	C32029-49	WRENCH ADAPTER
2296	C32029-50	WRENCH ADAPTER
2297	C32029-51	THREAD PROTECTOR
2298	C32029-52	PIN INSTL RMVL KIT - MLG
2299	C32029-79	PIN INSTL RMVL KIT - MLG
2300	C32030-10	RETENTION STRAP EQUIPMENT - INNER CYLINDER, NOSE AND MAIN LANDING GEAR
2301	C32030-30	RETENTION STRAP EQUIPMENT - INNER CYLINDER, NOSE AND MAIN LANDING GEAR
2302	C32030-31	RETENTION STRAP EQUIPMENT - INNER CYLINDER, NOSE AND MAIN LANDING GEAR
2303	C32031-1	REMOVAL/INSTALLATION EQUIPMENT - AFT TRUNNION PIN, MAIN LANDING GEAR
2304	C32031-22	EQUIPMENT - REMOVAL/INSTALLATION
2305	C32032-98	PULLER EQUIPMENT - AXLE/BRAKE SLEEVE, MAIN LANDING GEAR
2306	C32032-125	PULLER EQUIPMENT - AXLE/BRAKE SLEEVE, MAIN LANDING GEAR
2307	C32033-1	REMOVAL/INSTALLATION EQUIPMENT - TRUNNION PIN, NOSE LANDING GEAR
2308	C32033-20	SMALL SLIDE HAMMER
2309	C32033-5	TRUNNION PIN PULLER
2310	C32033-6	NLG TRUNNION PIN
2311	C32034-9	REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
2312	C32034-211	FIXTURE-TRANSPORTATION MLG REMOVE/INSTALLATION EQPT
2313	C32034-227	FIXTURE, B767 GEAR
2314	C32034-235	PROTECTOR ASSY
2315	C32034-273	REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
2316	C32034-339	REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
2317	C32034-343	REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
2318	C32035-1	METERING PIN & RETAINER RING R/I EQPT - NLG
2319	C32036-92	FIXTURE EQUIPMENT - ACTUATOR ASSEMBLIES, NOSE LANDING GEAR
2320	C32036-101	FIXTURE EQUIPMENT - ACTUATOR ASSEMBLIES, NOSE LANDING GEAR
2321	C32037-1	HOLDING FIXTURE - MLG
2322	C32038-37	RETRACT WRENCH ASSEMBLY
2323	C32038-39	RETRACT SPANNER ASSEMBLY
2324	C32038-45	RETRACT ROD END WRENCH
2325	C32038-55	RETRACT ROD END WRENCH
2326	C32038-81	RETRACT ROD END WRENCH
2327	C32040-1	SPANNER WRENCH - NLG STREEING COLLAR RETAINER
2328	C32040-6	SPANNER WRENCH - NLG STREEING COLLAR RETAINER
2329	C32040-8	SPANNER WRENCH
2330	C32041-57	BUILDUP EQPT - NLG
2331	C32042-61	REMOVAL/INSTALLATION EQUIPMENT - ORIFICE TUBE AND METERING PIN, MAIN LANDING GEAR
2332	C32045-63	HOLDING FIXTURE - SEAL CHANGE, MLG
2333	C32048-1	ADAPTER ASSEMBLY - UPLOCK, MAIN LANDING GEAR
2334	C32049-1	OUTRIGGER EQUIPMENT - NOSE LANDING GEAR INSTALLATION/REMOVAL
2335	C32050-1	LOCK OUT PIN ASSY, FWD and AFT LOCK PIN
2336	C32053-1	FIXTURE EQUIPMENT - SIDE STRUT ASSEMBLY, MAIN LANDING GEAR
2337	C32053-37	FIXTURE EQUIPMENT - SIDE STRUT ASSEMBLY, MAIN LANDING GEAR
2338	C32053-41	FIXTURE EQUIPMENT - SIDE STRUT ASSEMBLY, MAIN LANDING GEAR
2339	C32053-50	FIXTURE EQUIPMENT - SIDE STRUT ASSEMBLY, MAIN LANDING GEAR
2340	C32055-1	CLAMP ASSY - STREERING CABLES, NLG
2341	C32055-18	CLAMP ASSY - STREERING CABLES, NLG
2342	C32062-1	ADAPTER EQPT - WRENCH, HOOK SPANNER
2343	C32064-1	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
2344	C32077-1	REMOVAL TOOL ASSY
2345	C32078-1	DOLLY - TRANSPORTATION, SIDE STRUT DOLLY
2346	C35001-1	PRESSURE LEAK TEST EQUIPMENT - CREW OXYGEN SYSTEM
2347	C35001-6	PRESSURE LEAK TEST EQUIPMENT - CREW OXYGEN SYSTEM
2348	C35001-37	PRESSURE LEAK TEST EQUIPMENT - CREW OXYGEN SYSTEM
2349	C35001-38	PRESSURE LEAK TEST EQUIPMENT - CREW OXYGEN SYSTEM
2350	C35003-10	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM
2351	C35003-11	SAFETY PIN ASSY
2352	C35003-20	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM
2353	C35004-1	PRY BAR EQUIPMENT- FIRING PIN, PASSENGER SERVICE UNIT

2354	C36001-63	TEST EQUIPMENT - ENGINE BLEED AIR SYSTEMS
2355	C36001-64	TEST EQUIPMENT - ENGINE BLEED AIR SYSTEMS
2356	C36002-1	DISPATCH KIT - PRECOOLER CONTROL VALVE
2357	C36002-3	BLANK TUBE FITTING REDUCER
2358	C36004-1	PRECOOLER REMOVAL AND INSTALLATION EQUIPMENT - ENGINE ON
2359	C36008-1	BLANKING PLATE
2360	C36008-2	BLANKING PLATE
2361	C36009-1	REFORMING TOOL KIT-FLANGE
2362	C38001-23	WASTE WATER DRAIN MAST PLUG
2363	C38001-29	PLUG DRAIN MAST
2364	C38002-1	PLUG EQPT - SKIN FITTING - DOOR SILL DRAIN
2365	C38002-2	PLUG EQPT - DOOR SILL DRAIN
2366	C38002-11	PLUG EQPT - DOOR SILL DRAIN
2367	C44001-55	REMOVAL/INSTALLATION EQUIPMENT - LIFTING STRAP ANTENNAS/ADAPTER PLATE/RADOME
2368	C44001-58	REMOVAL/INSTALLATION EQUIPMENT - LIFTING STRAP ANTENNAS/ADAPTER PLATE/RADOME
2369	C44001-67	REMOVAL/INSTALLATION EQUIPMENT - LIFTING STRAP ANTENNAS/ADAPTER PLATE/RADOME
2370	C47241	ADAPTER
2371	C47248	GUIDE CONE
2372	C47261	ADAPTOR
2373	C47271	PIN
2374	C47569	CONE
2375	C47578	PROTECTOR
2376	C49003-1	CRADLE, SUNDSTRAND AUXILIARY POWER UNIT (APU) - HOIST EQUIPMENT, CENTER OF GRAVITY (CG) COMPENSA
2377	C49003-3	BASE
2378	C49004-36	SLING EQUIPMENT - AUXILIARY POWER UNIT
2379	C49004-37	SLING EQUIPMENT - AUXILIARY POWER UNIT
2380	C49004-40	SLING EQUIPMENT - AUXILIARY POWER UNIT
2381	C49006-1	THREAD PROTECTOR EQPT - APU MOUNT BOLTS
2382	C49006-3	THREAD PROTECTOR EQPT - APU MOUNT BOLTS
2383	C49007-20	EQUIPMENT - HOIST, AUXILIARY POWER UNIT (AE131-9 APU)
2384	C49007-35	HOIST EQUIPMENT - AUXILIARY POWER UNIT
2385	C49007-36	APU HOIST EQUIPMENT
2386	C49007-42	HOIST EQUIPMENT - AUXILIARY POWER UNIT
2387	C49009-1	TOOL KIT - AUXILIARY POWER UNIT DELETION
2388	C49010-43	LH AFT ATTACH ASSY
2389	C49010-50	ASSEMBLY - CRADLE, AE131-9B APU
2390	C49012-1	INSTALLATION/REMOVAL EQUIPMENT - AUXILIARY POWER UNIT EXHAUST
2391	C49012-69	INSTALLATION/REMOVAL EQUIPMENT - AUXILIARY POWER UNIT EXHAUST
2392	C52002-32	REPAIR FIXTURE - FORWARD AND AFT CARGO DOOR
2393	C52002-33	REPAIR FIXTURE - FORWARD AND AFT CARGO DOOR
2394	C52005-1	FIXTURE EQUIPMENT - AUTOMATIC OVERWING EXIT DOOR SPRING
2395	C52006-64	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
2396	C52006-74	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
2397	C52007-1	TORQUE WRENCH ADAPTER EQUIPMENT - AUTOMATIC
2398	C52007-8	TORQUE WRENCH ADAPTER EQUIPMENT - AUTOMATIC
2399	C52008-1	TORQUE WRENCH ADAPTER
2400	C52008-2	TORQUE WRENCH ADAPTER
2401	C52009-1	LIFTING FIXTURE EQUIPMENT - MAIN DECK CARGO DOOR
2402	C52009-2	LIFTING FIXTURE EQUIPMENT - MAIN DECK CARGO DOOR
2403	C52012-15	PERSONNEL BARRIER - ENTRY AND GALLEY DOORS
2404	C52012-29	PERSONNEL BARRIER - ENTRY AND GALLEY DOORS
2405	C52012-59	PERSONNEL BARRIER - ENTRY AND GALLEY DOORS
2406	C52012-66	PERSONNEL BARRIER - ENTRY AND GALLEY DOORS
2407	C52014-91	REMOVAL/INSTALLATION EQUIPMENT - FORWARD AIRSTAIR
2408	C52022-1	LOCK EQUIPMENT - HOLD OPEN MID EXIT DOOR
2409	C52024-1	PULLER KIT - STOP, DOOR
2410	C53002-1	REMOVAL/INSTALLATION ASSEMBLY - TAIL CONE
2411	C54001-37	SLING EQUIPMENT - STRUT REMOVAL INSTALLATION
2412	C54008-1	AFT FAIRING - REMOVAL AND INSTALLATION
2413	C54008-28	AFT FAIRING - REMOVAL AND INSTALLATION
2414	C54008-53	AFT FAIRING - REMOVAL AND INSTALLATION
2415	C54008-54	AFT FAIRING - REMOVAL AND INSTALLATION

2416	C54015-1	BEARING R/I WRENCH
2417	C54016-1	SLING EQUIPMENT - ENGINE STRUT REMOVAL/INSTALLATION, CFM LEAP-1B ENGINE
2418	C54017-90	REMOVAL AND INSTALLATION EQUIPMENT - AFT STRUT FAIRING
2419	C54017-107	REMOVAL AND INSTALLATION EQUIPMENT - AFT STRUT FAIRING
2420	C54019-1	SLING EQUIPMENT - FUSE PIN REMOVAL/INSTALLATION, CFM LEAP-1B ENGINE ON
2421	C54022-1	REMOVAL/INSTALLATION KIT - FUSE PIN
2422	C55004-1	SLING EQUIPMENT - VERTICAL FIN
2423	C55005-1	SLING - ELEVATOR REMOVAL/INSTALLATION
2424	C55005-11	PIN REMOVAL EQUIPMENT - HORIZONTAL STABILIZER
2425	C55005-19	PIN REMOVAL EQUIPMENT - HORIZONTAL STABILIZER
2426	C55007-1	SLING EQUIPMENT HORIZONTAL STABILIZER REMOVAL/INSTALLATION
2427	C55007-31	SLING ASSY
2428	C55007-47	SLING EQUIPMENT - HORIZONTAL STABILIZER REMOVAL/INSTALLATION
2429	C55007-48	SLING EQUIPMENT - HORIZONTAL STABILIZER REMOVAL/INSTALLATION
2430	C55008-18	ALIGNMENT EQUIPMENT - HORIZONTAL STABILIZER INSTALLATION
2431	C55010-1	SLING EQUIPMENT – VERTICAL FIN
2432	C55010-33	SLING EQPT -VERTICAL FIN
2433	C55011-1	SPANNER WRENCH ASSY
2434	C55011-2	SPANNER WRENCH ASSY
2435	C55011-6	SPANNER WRENCH ASSY
2436	C55014-1	SLING EQUIPMENT - HORIZONTAL STABILIZER REMOVAL/INSTALLATION
2437	C55014-44	SLING EQUIPMENT - HORIZONTAL STABILIZER REMOVAL/INSTALLATION
2438	C55016-1	SLING ASSEMBLY - LEADING EDGE, VERTICAL STABILIZER
2439	C57002-15	SLING EQUIPMENT - REMOVAL/INSTALLATION, WINGLET
2440	C57002-66	SLING EQUIPMENT - REMOVAL/INSTALLATION, WINGLET
2441	C57006-1	HOLDING FIXTURE - WINGLET
2442	C71002-81	THRUST REVERSER AND COWLING HANDLING EQUIPMENT
2443	C71002-91	THRUST REVERSER AND COWLING HANDLING EQUIPMENT
2444	C71003-247	BOOTSTRAP KIT 737CL
2445	C71004-1	SLING – INLET COWL, CFM56-3 ENGINE
2446	C71006-6	THREAD PROTECTOR EQPT - CONE BOLTS CFM56-3 ENGINE
2447	C71006-9	THREAD PROTECTOR EQPT - CONE BOLTS CFM56-3 ENGINE
2448	C71013-1	SAFETY SCREEN - PERSONNEL BARRIER - CFM56-3
2449	C71013-10	SPACER
2450	C71013-11	RING SEGMENT, INTERIOR
2451	C71013-2	VERTICAL BEAM ASSY
2452	C71013-3	SUPPORT BEAM ASSY
2453	C71013-4	HORIZONTAL SUPPORT BEAM ASSY
2454	C71013-5	HORIZONTAL SUPPORT BEAM ASSY
2455	C71013-6	RING SEGMENT, EXTERIOR
2456	C71013-7	RING SEGMENT, INTERIOR
2457	C71013-8	SPACER
2458	C71013-9	RING SEGMENT, EXTERIOR
2459	C71014-1	ADAPTER WRENCH - AFT CONE BOLT NUT
2460	C71014-3	WRENCH
2461	C71015-69	FWD ATTACH ASSY LH
2462	C71015-79	ENGINE SLING EQUIPMENT - OVERHEAD SHOP HANDLING
2463	C71015-83	SLING ENG SHOP HANDLING CFM56-3 & -7
2464	C71015-105	FWD ATTACH ASSY RH
2465	C71018-1	ALINGNMENT GUDIE - CONE BOLT, FWD ENG MOUNT CFM56-3
2466	C71018-2	ALINGNMENT GUDIE - CONE BOLT, FWD ENG MOUNT CFM56-3
2467	C71019-1	WRENCH - AFT CONE BOLT NUT
2468	C71019-2	WRENCH RATCHET 15/16"
2469	C71019-7	WRENCH - AFT CONE BOLT NUT
2470	C71020-105	BOOTSTRAP EQUIPMENT - CFM56-7 ENGINE
2471	C71020-134	BOOTSTRAP EQUIPMENT - CFM56-7 ENGINE
2472	C71020-26	PIN ASSY
2473	C71020-3	AFT SIDE PLATE ASSY
2474	C71020-32	PIN ASSY
2475	C71020-4	AFT SIDE PLATE ASSY
2476	C71020-91	BOOTSTRAP KIT FOR CFM56-7 ENGINE
2477	C71020-92	LEFT HAND DYNAMOMETER ASSY

2478	C71020-93	RIGHT HAND DYNAMOMETER ASSY
2479	C71022-2	TORQUE WRENCH - ENGINE MOUNT BOLTS
2480	C71022-6	TORQUE WRENCH - ENGINE MOUNT BOLTS
2481	C71024-20	SLING ASSEMBLY - AFT ENGINE MOUNT, CFM ENGINE
2482	C71029-1	BOOTSTRAP EQPT - CFM LEAP 1B ENGINE
2483	C71030-1	PROOF LOAD FIXTURE - BOOTSTRAP, CFM LEAP-1B ENGINE
2484	C71032-1	SAFETY SCREEN - PERSONNEL BARRIER, CFM LEAP-1B INLET
2485	C71033-1	REMOVAL /INSTALLATION FRAME EQUIPMENT - INLET COWL, CFM LEAP-1B ENGINE
2486	C71034-1	INLET GUARD ENGINE RUN-UP
2487	C71035-1	SAFETY LANYARD - PERSONNEL, ENGINE MAINTENANCE
2488	C71036-1	STABILIZER – ENGINE MOUNT, CFM LEAP-1B
2489	C71040-1	TORQUE EQUIPMENT - ENGINE MOUNT BOLTS, CFM LEAP-1B
2490	C71040-30	TORQUE EQUIPMENT - ENGINE MOUNT BOLTS, CFM LEAP-1B
2491	C71040-34	TORQUE EQUIPMENT - ENGINE MOUNT BOLTS, CFM LEAP-1B
2492	C71041-1	UNLOCK POLE - FAN COWL HOLD OPEN RODS
2493	C71043-1	CLAMP SET - HOLD OPEN ROD
2494	C76002-24	HAND TOOL SET - CONTROL STAND, DISASSEMBLY/ASSEMBLY
2495	C76002-25	HAND TOOL SET - CONTROL STAND, DISASSEMBLY/ASSEMBLY
2496	C76002-26	HAND TOOL SET - CONTROL STAND, DISASSEMBLY/ASSEMBLY
2497	C76002-35	HAND TOOL SET - CONTROL STAND, DISASSEMBLY/ASSEMBLY
2498	C78003-52	SLING - THRUST REVERSER
2499	C78004-1	LOCKPIN EQUIPMENT - THRUST REVERSER ACTUATIONMODULE LOCKOUT
2500	C78004-2	PIN ASSY
2501	C78005-20	PUMP FILTER HOUSING
2502	C78005-21	HAND PUMP - OPENING SYS, THRUST REVERSER
2503	C78005-26	HAND PUMP - OPENING SYS, THRUST REVERSER
2504	C78005-53	HAND PUMP - OPENING SYS, THRUST REVERSER
2505	C78005-54	HAND PUMP - OPENING SYS, THRUST REVERSER
2506	C78005-60	HAND PUMP - OPENING SYS, THRUST REVERSER
2507	C78005-61	HAND PUMP - OPENING SYS, THRUST REVERSER
2508	C78006-1	LOCK ACTUATOR T/R
2509	C78009-1	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2510	C78009-19	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2511	C78009-38	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2512	C78009-39	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2513	C78009-77	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2514	C78009-88	REMOVE/INSTALL TOOL - PRIMARY EXHAUST ASSEMBLIES
2515	C78011-37	DOLLY AND HYDRAULIC EQUIPMENT
2516	C78011-60	DOLLY AND HYDRAULIC EQUIPMENT
2517	C78011-78	DOLLY AND HYDRAULIC EQUIPMENT
2518	C78012-14	HOLD OPEN EQPT - THRUST REVERSER
2519	C78014-6	WRENCH SET - THRUST REVERSER HINGE, CFM56-3
2520	C78014-9	WRENCH SET - THRUST REVERSER HINGE, CFM56-3
2521	C78016-1	LATHCHING LEVER - THRUST REVERSER COWLING
2522	C78018-5	LATCH FITTING ASSY
2523	C78018-50	SLING EQPT-THRUST REVERSER, CFM56-7
2524	C78018-6	FWD HINGE FTG ASSY
2525	C78018-7	AFT HINGE
2526	C78019-15	COWL HOLD OPEN CFM56-7
2527	C78019-18	PIN STRUT ATTACH
2528	C78020-11	LATCHING TOOL - THRUST REVERSER C-DUCT HALVES
2529	C78020-14	SPL-2434 Tool - LATCHING, THRUST REVERSER C-DUCT HALVES
2530	C78020-15	LATCHING TOOL, THRUST REVERSER C-DUCT HALVES
2531	C78020-21	LATCHING TOOL - THRUST REVERSER C-DUCT HALVES
2532	C78021-1	65 DEGREE HOLD OPEN EQPT - T/R COWL, CFM56-7 ENGINE
2533	C78022-35	SLING EQUIPMENT - THRUST REVERSER SLEEVE
2534	C78023-1	LOCK THRUST REVERSER ACTUATOR
2535	C78023-2	LOCK ASSEMBLY - THRUST REVERSER ACTUATOR, CFM56-7
2536	C78023-13	LOCK ASSEMBLY - THRUST REVERSER ACTUATOR, CFM56-7
2537	C78025-21	TOOL - ACTUATOR, INSTALLATION/REMOVAL
2538	C78025-30	TOOL - ACTUATOR, INSTALLATION/REMOVAL
2539	C78026-161	BOOM HOIST - GROUND BASED REMOVAL/INSTALLATION

2540	C78026-259	BOOM HOIST - GROUND BASED REMOVAL/INSTALLATION
2541	C78030-1	GAUGE GAP MEASUREMENT TRAS LOCKING ACTUATOR
2542	C78030-18	GAUGE GAP MEASUREMENT TRAS LOCKING ACTUATOR
2543	C78032-1	SLING EQUIPMENT - THRUST REVERSER, CFM LEAP-1B ENGINE
2544	C78033-1	EQUIPMENT - HOLD OPEN, THRUST REVERSER C
2545	C78033-40	HOLD OPEN EQPT - THRUSTREVERSER - CFM LEAP- 1BENGINE/LEAP-1B
2546	C78034-1	HOIST EQUIPMENT - THRUST REVERSER SLEEVE, CFM LEAP-1B ENGINE
2547	C78035-1	LOCK EQUIPMENT - THRUST REVERSER OPENING ACTUATORS, CFM LEAP-1B ENGINE
2548	C78035-2	LOCK EQUIPMENT - THRUST REVERSER OPENING ACTUATORS, CFM LEAP-1B ENGINE
2549	C78035-3	LOCK EQUIPMENT - THRUST REVERSER OPENING ACTUATORS, CFM LEAP-1B ENGINE
2550	C78035-14	LOCK EQUIPMENT - THRUST REVERSER OPENING ACTUATORS, CFM LEAP-1B ENGINE
2551	C78036-1	STAND - STORAGE/WORK, CFM LEAP-1B THRUST REVERSER
2552	C78040-1	DRIVE SOCKET - THRUST REVERSER SYNC LOCK, MANUAL DR
2553	C78040-10	DRIVE SOCKET - THRUST REVERSER SYNC LOCK, MANUAL DR
2554	C78040-11	DRIVE SOCKET - THRUST REVERSER SYNC LOCK, MANUAL DR
2555	C78042-17	GAUGE-FREE PLAY CHECK TR LOCKING ACTUATOR
2556	C78042-23	GAUGE-FREE PLAY CHECK TR LOCKING ACTUATOR
2557	C78042-30	GAUGE-FREE PLAY CHECK TR LOCKING ACTUATOR
2558	C78044-1	CUTTING, FIRE SEAL EQPT
2559	C78045-1	SPLICE REPAIR, FIRE SEAL MANDREL
2560	C79001-1	TEST EQUIPMENT - ENGINE FUEL/OIL PRESSURE SWITCH
2561	D23080000	PIN-GROUND LOCK,NLG
2562	D23156000	PIN
2563	D23304000	PIN-GROUNDLOCK, NLG
2564	D46189	EXTRACTOR
2565	D46795	JAWS - FALSE
2566	D47584	ADAPTOR
2567	D47792	EXTRACTOR
2568	DAH602734	SLEEVE-GROUND LOCK
2569	DRT67212	SPANNER-NUT BOGIE
2570	DRT68003	COMPRESSOR SPRING
2571	DRT68006	SPRING EXPENDER
2572	DRT68269	ADAPTOR-TORQUE
2573	DRT68385	HOLDING FIXTURE
2574	DRT68817	TORQUE REACTOR
2575	DRT68822	TORQUE ADAPTOR
2576	DRT68833	ADAPTER
2577	DRT68836	GAG-SIDE STAY
2578	DRT68837	GAG-BRAKE ROD
2579	DRT68838	GAG-SHOCK ABSORBER
2580	DRT68839	GAG-BOGIE BEAM
2581	DRT68840	CLAMP SIDE STAY
2582	DRT68841	GAG-BRAKE ROD
2583	DRT68842	BELLCRANK RESTRAINT
2584	DRT68855	GUIDE CONE
2585	DRT68862	CONE-GUIDE
2586	DRT68865	GUIDE CONE, BOGIE PIN
2587	DRT68860	CONE-GUIDE
2588	DRT68861	CONE-GUIDE
2589	DRT68908	SPACER, BRAKE ROD
2590	DRT68909	SPACER, BRAKE ROD
2591	DRT68921	BULLET-LOADING
2592	DRT68923	GROUND LOCK SLEEVE A321
2593	DRT68925	RECOIL NUT SPANNER
2594	DRT68930	TOOL-GLAND ASSY
2595	DRT68934	EXTRACTOR-PIN
2596	DRT68973	ADAPTER, CHARGING - MLG
2597	DRT69434	SPANNER MLG AXLE NUT A350
2598	DRT69437	SPANNER PROTECTOR MLG
2599	DRT69513	PIN, BRAKE ROD PIN AND NUT
2600	ECS-TE6013	TEST PLATE ASSEMBLY, UNIVERSAL, 787 FANS
2601	ECS-TE6014	CABLE ASSEMBLY, DATA LOGGER

2602	ES750-51	GAUGE END PIECE
2603	ES750-53	GUAGE - PDU ROLLER
2604	ES750-57	GAUGE END PIECE
2605	ES750-99	GAUGE-HANDLE
2606	F70206-1	ADAPTER ASSEMBLY - HOLLOW BOLT, FUEL LEAK TRACING
2607	F70244-17	SLING ASSEMBLY - LIFTING, FUSELAGE
2608	F46153	WRENCH
2609	F46754-1000	PROTECTOR
2610	F490700250051	APU SUBSTITUTION KIT
2611	F65-0-3218	TARE FIXTURE 737-300 THRUST REVERSER VALVE
2612	F70085	WRENCH - SPANNER, BEARING RETAINER NUT
2613	F70109	WRENCH ASSEMBLY - STABILIZER TRIM ACTUATOR
2614	F70167-1	STABILIZER TRIM ACTUATOR JIG ASSY
2615	F70199-1	INFLATION TOOL - TIRE ANALOG
2616	F70199-2	GAUGE
2617	F70199-6	AIR CHUCK
2618	F70199-18	INFLATION TOOL
2619	F70199-24	INFLATION KIT
2620	F70199-25	TIRE PRESSURE GAUGE
2621	F70199-26	INFLATION TOOL
2622	F70199-35	AIR CHUCK
2623	F70199-39	AIR CHUCK
2624	F70199-40	AIR CHUCK
2625	F70199-46	AIR CHUCK
2626	F70199-47	AIR CHUCK
2627	F70199-52	TIRE INFLATOR
2628	F70200-1	INFLATION TOOL - STRUT
2629	F70200-5	HOSE ASSEMBLY
2630	F70200-14	INFLATION TOOL
2631	F70200-17	TOOL - STRUT INFLATION, LANDING GEAR
2632	F70200-18	INFLATION TOOL - STRUT
2633	F70200-19	INFLATION TOOL
2634	F70200-20	INFLATION TOOL
2635	F70200-35	TIRE INFLATION, LANDING GEAR DIGITAL
2636	F70207-1	KIT - RIGGING PIN
2637	F70207-8	RIGGING PIN ASSY
2638	F70207-9	RIGGING PIN ASSY
2639	F70207-10	RIGGING PIN ASSY
2640	F70207-88	RIGGING PIN ASSY
2641	F70207-101	RIGGING PIN ASSY
2642	F70207-109	KIT - RIGGING PIN
2643	F70207-117	KIT - RIGGING PIN
2644	F70207-128	KIT - RIGGING PIN
2645	F70207-135	KIT - RIGGING PIN
2646	F70207-139	KIT - RIGGING PIN
2647	F70207-151	KIT - RIGGING PIN
2648	F70263-1	LOCK ASSEMBLY - NLG OLEO STRAP
2649	F70284-1	WEAR GAUGE SET - GROUND POWER PLUG and RECEPTICLE
2650	F70300-1	ADAPTER FLAP DRIVE
2651	F70300-3	ADAPTER
2652	F70330-3	STATIC BALANCE EQUIPMENT - CONTROL SURFACES
2653	F70330-4	STATIC BALANCE EQUIPMENT - CONTROL SURFACES
2654	F70330-125	STATIC BALANCE EQUIPMENT - CONTROL SURFACES
2655	F70330-126	STATIC BALANCE EQPT – CONTROL SURFACE
2656	F70330-162	STATIC BALANCE EQPT – CONTROL SURFACE
2657	F70312-1	KIT-CROWFOOT WRENCH
2658	F70312-2	KIT - CROWFOOT WRENCH
2659	F70312-3	KIT - CROWFOOT WRENCHES
2660	F70312-4	KIT - CROWFOOT WRENCHES
2661	F70312-21	WRENCH-CROWFOOT
2662	F70312-22	WRENCH-CROWFOOT
2663	F70312-25	WRENCH

2664	F70312-27	WRENCH-CROWFOOT
2665	F70312-28	WRENCH-CROWFOOT
2666	F70312-29	WRENCH-CROWFOOT
2667	F70312-30	WRENCH-CROWFOOT
2668	F70312-31	WRENCH-CROWFOOT
2669	F70312-32	WRENCH-CROWFOOT
2670	F70312-34	WRENCH-CROWFOOT
2671	F70312-35	WRENCH-CROWFOOT
2672	F70312-36	WRENCH-CROWFOOT
2673	F70312-37	WRENCH-CROWFOOT
2674	F70312-38	KIT – CROWFOOT WRENCHES
2675	F70312-39	WRENCH-CROWFOOT
2676	F70312-40	WRENCH-CROWFOOT
2677	F70312-41	WRENCH
2678	F70312-45	WRENCH-CROWFOOT
2679	F70312-46	WRENCH-CROWFOOT
2680	F70312-47	WRENCH-CROWFOOT
2681	F70312-48	WRENCH-CROWFOOT
2682	F70312-49	WRENCH-CROWFOOT
2683	F70312-50	WRENCH-CROWFOOT
2684	F70312-51	WRENCH-CROWFOOT
2685	F70312-52	WRENCH-CROWFOOT
2686	F70336-1	SPANNER WRENCH
2687	F71267	ASSEMBLY - WRENCH, PINION GEAR
2688	F71290-1	WRENCH - SPANNER, BEARING RETAINER NUT
2689	F71290-2	WRENCH - SPANNER, BEARING RETAINER NUT
2690	F71290-7	WRENCH - SPANNER, BEARING RETAINER NUT
2691	F71290-10	WRENCH - SPANNER, BEARING RETAINER NUT
2692	F71291	COMPRESSOR - ACTUATOR SPRING, STABILIZER TRIM
2693	F71291-500	COMPRESSOR - ACTUATOR SPRING, STABILIZER TRIM
2694	F71313-8	WRENCH - SOCKET, ROD END BEARING
2695	F71329	TRACER LEAKAGE
2696	F71336-500	LOCK ASSEMBLY - STABILIZER TRIM
2697	F71336-501	LOCK ASSEMBLY
2698	F71421	FIXTURE - END PLAY CHECKING, STABILIZER TRIM ACTUATOR
2699	F71421-27	FIXTURE - END PLAY CHECKING, STABILIZER TRIM ACTUATOR
2700	F71421-500	FIXTURE - END PLAY CHECKING, STABILIZER TRIM ACTUATOR
2701	F71421-501	FIXTURE - END PLAY CHECKING, STABILIZER TRIM ACTUATOR
2702	F71422-248	TEST JIG CABLE TENSION STABILIZER TRIM ACTUATOR
2703	F72719	TOWING EYE BOLT ASSEMBLY - MAIN GEAR
2704	F72719-3	TOWING EYE BOLT ASSEMBLY - MAIN GEAR
2705	F72719-5	TOWING EYE BOLT ASSEMBLY - MAIN GEAR
2706	F72719-12	TOWING EYE BOLT ASSEMBLY - MAIN GEAR
2707	F72719-500	TOWING EYE BOLT
2708	F72735	GROUND LOCK ASSY - MLG & NLG
2709	F72735-13	PIN SAFETY LOW NLG
2710	F72735-3	CABLE
2711	F72735-4	BY-PASS PIN ASSY. NLG
2712	F72790	MOUNT PROTRACTOR CONTROL WHEEL
2713	F72867-1	ADAPTER ASSEMBLY - CONTROL WHEEL
2714	F72913-1	AXLE & THREAD PROTECTOR SET
2715	F72913-10	AXLE & THREAD PROTECTOR SET
2716	F72913-11	MLG THREAD PROTECTOR
2717	F72913-13	PROTECTOR SET - THREAD NLG & MLG Axle
2718	F72913-14	MAIN GEAR AXLE PROTECTOR
2719	F72913-15	AXLE & THREAD PROTECTOR (NLG)
2720	F72913-2	AXLE PROTECTOR
2721	F72913-3	THREAD PROTECTOR
2722	F72913-4	AXLE & THREAD PROTECTOR SET
2723	F72913-5	AXLE PROTECTOR
2724	F72913-6	THREAD PROTECTOR
2725	F72913-8	MLG BRAKE PROTECTOR ASSY

2726	F72924-1	HOLDER - STABILIZER TRIM JACKSCREW BALLNUT AND SCREW ASSEMBLY
2727	F72928-33	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2728	F72928-34	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2729	F72928-52	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2730	F72928-53	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2731	F72928-54	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2732	F72928-58	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2733	F72928-62	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2734	F72928-63	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2735	F72928-107	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2736	F72928-108	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2737	F72928-109	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2738	F72928-110	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2739	F72928-111	AIR PRESSURE REGULATOR EQUIPMENT - ELEVATOR FEEL COMPUTER
2740	F72942-1	LUBRICATION SET IS B737-DOOR CAMSHAFT BEARINGS
2741	F72949-1	727/737 FUEL DRIPSTICK OPERATING
2742	F72950-138	AUXILIARY POWER UNIT TRANSPORTATION EQUIPMENT
2743	F72950-139	AUXILIARY POWER UNIT TRANSPORTATION EQUIPMENT
2744	F72950-158	APU TRANSPORTATION CART
2745	F72951-1	WATER MANOMETER - TEST EQUIPMENT
2746	F72952-1	ADAPTER SET - PROTRACTOR, FORWARD THRUST LEVER
2747	F72952-2	ADAPTER SET - PROTRACTOR, FORWARD THRUST LEVER
2748	F72952-3	ADAPTER SET - PROTRACTOR, FORWARD THRUST LEVER
2749	F72952-14	ADAPTER SET - PROTRACTOR, FORWARD THRUST LEVER
2750	F72952-15	PROTRACTOR ADAPTER (THRUST LEVER)
2751	F72959-1	SPANNER WRENCH
2752	F72959-5	SPANNER WRENCH
2753	F72959-6	SPANNER WRENCH
2754	F72959-7	SPANNER WRENCH
2755	F72959-8	SPANNER WRENCH
2756	F72959-31	SPANNER WRENCH - AN STANDARD TYPE
2757	F72959-33	SPANNER WRENCH - AN STANDARD TYPE
2758	F72959-34	SPANNER WRENCH - AN STANDARD TYPE
2759	F72959-35	SPANNER WRENCH - AN STANDARD TYPE
2760	F72959-36	SPANNER WRENCH - AN STANDARD TYPE
2761	F72959-37	SPANNER WRENCH - AN STANDARD TYPE
2762	F72959-38	SPANNER WRENCH - AN STANDARD TYPE
2763	F72959-39	SPANNER WRENCH - AN STANDARD TYPE
2764	F72959-40	SPANNER WRENCH AN STANDARD TYPE
2765	F72959-41	SPANNER WRENCH - AN STANDARD TYPE
2766	F72959-42	SPANNER WRENCH - AN STANDARD TYPE
2767	F72977-62	GAUGE EQUIPMENT - HYDRAULIC BRAKE SYSTEM PRESSURE CHECKING
2768	F73010-27	LEAKAGE TEST CHAMBER-FWD LAVATORY DRAIN
2769	F80000-7	ADAPTER
2770	F80001-1	AFT PAD JACKING
2771	F80006-1	SLING EQUIPMENT - HORIZONTAL STABILIZER
2772	F80006-2	SLING EQUIPMENT - HORIZONTAL STABILIZER
2773	F80006-51	SLING EQUIPMENT - HORIZONTAL STABILIZER
2774	F80006-52	SLING EQUIPMENT - HORIZONTAL STABILIZER
2775	F80006-54	SLING EQUIPMENT - HORIZONTAL STABILIZER
2776	F80006-67	SLING EQUIPMENT - HORIZONTAL STABILIZER
2777	F80013-1	WRENCH ASSEMBLY NLG
2778	F80016-19	LOCK ASSEMBLY - OLEO, MAIN GEAR
2779	F80016-20	ARM ASSY
2780	F80016-21	ARM ASSY
2781	F80016-22	ARM ASSY
2782	F80017-33	LOCK ASSY - GROUND / FLT SPOILERS
2783	F80018-1	SPANNER WRENCH – MLG TRUNNION BEARING NUT
2784	F80018-2	SPANNER WRENCH – MLG TRUNNION BEARING NUT
2785	F80020-5	ADAPTER WRENCH – MLG TRUNNION BEARING NUT
2786	F80027-13	LOCK EQUIPMENT - HORIZONTAL STABILIZER
2787	F80027-18	LOCK EQUIPMENT - HORIZONTAL STABILIZER

2788	F80027-41	LOCK EQUIPMENT - HORIZONTAL STABILIZER
2789	F80027-44	LOCK EQUIPMENT - HORIZONTAL STABILIZER
2790	F80033-1	WRENCH ASSEMBLY MLG
2791	F80033-4	WRENCH ASSEMBLY MLG
2792	F80033-8	ADAPTER ASSY - WRENCH HOOK SPANNER
2793	F80035-1	SLING ASSEMBLY - VERTICAL TAIL
2794	F80035-18	SLING ASSEMBLY - VERTICAL TAIL
2795	F80039-43	HOIST EQUIPMENT - AUXILIARY POWER UNIT
2796	F80040-1	LOCK ASSEMBLY, GROUND SPOILER ACTUATOR
2797	F80040-15	LOCK ASSEMBLY, GROUND SPOILER ACTUATOR
2798	F80040-2	LOCK ASSY - GROUND SPOILER ACTUATOR
2799	F80048-37	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2800	F80048-38	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2801	F80048-39	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2802	F80048-40	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2803	F80048-41	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2804	F80048-42	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2805	F80048-57	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2806	F80048-58	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2807	F80048-59	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2808	F80048-60	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2809	F80048-61	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2810	F80048-62	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2811	F80048-78	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2812	F80048-79	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2813	F80048-84	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2814	F80048-89	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2815	F80048-90	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2816	F80048-95	LOCK ASSEMBLY - LEADING EDGE FLAP AND SLAT ACTUATORS
2817	F80049-17	LOCK ASSEMBLY - FLIGHT CONTROLS
2818	F80049-18	LOCK FLIGHT CONTROL
2819	F80049-46	LOCK ASSEMBLY - FLIGHT CONTROLS
2820	F80049-56	LOCK FLIGHT CONTROL
2821	F80049-65	FLIGHT CONTROLS - LOCK ASSEMBLY
2822	F80049-66	LOCK ASSY
2823	F80049-67	LOCK ASSEMBLY - FLIGHT CONTROLS
2824	F80049-68	LOCK ASSEMBLY - FLIGHT CONTROLS
2825	F80053-1	WRENCH ASSEMBLY - FACE SPANNER, LUG
2826	F80055-1	TRAMMEL BAR - STABILIZER TRIM ACTUATOR
2827	F80055-10	TRAMMEL BAR - STABILIZER TRIM ACTUATOR
2828	F80055-36	TRAMMEL BAR - STABILIZER TRIM ACTUATOR
2829	F80060-1	ADAPTER - AIRPLANE JACKING
2830	F80060-6	ADAPTER
2831	F80113-37	KIT - ROLLER SWAGE
2832	F80113-50	KIT - ROLLER SWAGE
2833	F80113-61	KIT - ROLLER SWAGE
2834	F80113-64	KIT - ROLLER SWAGE
2835	F80113-70	KIT - ROLLER SWAGE
2836	F80113-88	KIT - ROLLER SWAGE
2837	F80113-95	KIT - ROLLER SWAGE
2838	F80113-105	KIT - ROLLER SWAGE
2839	F80113-129	KIT - ROLLER SWAGE
2840	F80114-81	CRADLE, GARRETT AUXILIARY POWER UNIT'S (APU) - HOIST EQUIPMENT
2841	F80114-82	CRADLE, GARRETT AUXILIARY POWER UNIT'S (APU) - HOIST EQUIPMENT
2842	F80115-10	THREAD PROTECTOR and ALIGNMENT TOOL - MLG
2843	F80115-11	THREAD PROTECTOR and ALIGNMENT TOOL - MLG
2844	F80115-12	THREAD PROTECTOR and ALIGNMENT TOOL - MLG
2845	F80115-13	THREAD PROTECTOR and ALIGNMENT TOOL - MLG
2846	F80115-14	THREAD PROTECTOR AND ALIGNMENT TOOLS – MAIN GEAR
2847	F80115-16	THREAD PROTECTOR AND ALIGNMENT TOOLS - MAIN GEAR
2848	F80115-17	THREAD PROTECTOR and ALIGNMENT TOOL - MLG
2849	F80118-1	KIT - BEARING RETENTION/REMOVAL

2850	F80118-54	KIT - BEARING RETENTION/REMOVAL
2851	F80118-55	KIT - BEARING RETENTION/REMOVAL
2852	F80141-1	THREAD PROTECTOR AND PIN ALIGNMENT – 737 MAIN LANDING GEAR
2853	F80150-1	LOCK - RUDDER, POWER CONTROL UNIT REMOVED
2854	F80153-1	SAFETY PIN - ELEVATOR FEEL COMP
2855	F80158-17	NOSE GEAR TRUNNION PIN & BEARING PULLER SET
2856	F80166-1	TEST FIXTURE - PRESSURE RELIEF VALVE, FLAME ARRESTOR SURGE TANK
2857	F80167-13	LUBRICATION TOOL SET – TRAILING EDGE FLAP CARRIAGE ROLLER
2858	F80168-1	NLG R/I ADAPTOR SOKET
2859	F80168-3	MLG TIRE R/I ADAPTOR SOKET
2860	F80169-1	SPRING EXPANDER SET, MLG
2861	F80176-8	T-WRENCH ADAP. MLG TRUNNION AFT
2862	F80178-1	SETTING TOOL - FORWARD ENTRY DOOR LATCH ROLLER
2863	F80197-5	WRENCH SET - LIMIT SWITCH, FLAP CONTROL UNIT
2864	F80198-12	PLUG GAGE - LANDING GEAR NUT
2865	F80198-13	PLUG GAGE - LANDING GEAR NUT
2866	F80198-14	PLUG GAGE - LANDING GEAR NUT
2867	F80198-15	PLUG GAGE - LANDING GEAR NUT
2868	F80198-20	PLUG GAGE - LANDING GEAR NUT
2869	F80198-21	PLUG GAGE - LANDING GEAR NUT
2870	F80201-1	TOOL - DRAIN - FUEL SUMP
2871	F80209-1	OUTBOARD FLAP RIGGIN
2872	F80209-2	OUTBOARD FLAP RIGGING BEAM
2873	F80212-30	ADAPTER - RUDDER PEDAL FORCE CHECK
2874	F80234-1	LOCK ASSY - MLG SHOCK STRUT
2875	F80239-21	SAFETY LANYARD EQPT - PERSONNEL ENGINE MAINTENANCE
2876	F80239-22	SAFETY LANYARD EQPT - PERSONNEL ENGINE MAINTENANCE
2877	F80239-25	SAFETY PIN ASSY
2878	F80249-7	TORQUE SOCKET - BALL NUT/SCREW ASSEMBLY, STABILIZER TRIM
2879	F80255-10	ALIGNMENT AND GUIDE EQUIPMENT - HORIZONTAL STABILIZER INSTALLATION AND REMOVAL
2880	F80255-11	ALIGNMENT AND GUIDE EQUIPMENT - HORIZONTAL STABILIZER INSTALLATION AND REMOVAL
2881	F80255-12	ALIGNMENT AND GUIDE EQUIPMENT - HORIZONTAL STABILIZER INSTALLATION AND REMOVAL
2882	FS0012	WRENCH
2883	FZES1011	UNIVERSAL ENGINE STAND BASE
2884	FZES1011	UNIVERSAL ENGINE STAND BASE
2885	FZES1101	CRADLE-RB211-535 ENGINE
2886	FZES3011	CFM56-3 ENGINE
2887	FZES3011	CFM56-3 ENGINE STAND CRADLE (Alternate to FB70000-1)
2888	FZES3021	CFM56-5A/5B ENGINE R/I & TRANSPORTATION STAND
2889	FZES3021	CFM56-5A/5B ENGINE STAND (Alternate to AM-2718-C1)
2890	FZES3021	CFM56-5A/5B ENGINE STAND CRADLE (Alternate to EC004-005)
2891	FZES3021	CFM56-5A/5B ENGINE STAND BASE (Alternate to ED005-009)
2892	FZES3021	CFM56-5A/5B ENGINE STAND CRADLE (Alternate to FB70010-1B)
2893	FZES3031	CFM56-5C ENGINE STAND CRADLE (Alternate to AM-2387)
2894	FZES3031	CFM56-5C ENGINE STAND CRADLE (Alternate to EC005-001)
2895	FZES3031	CFM56-5C ENGINE STAND BASE (Alternate to ED005-009)
2896	FZES3041	CFM56-7B ENGINE STAND CRADLE (Alternate to AM-2811-1100)
2897	FZES3041	CFM56-7B ENGINE STAND CRADLE (Alternate to AM-2811-4800)
2898	FZES3041	CFM56-7B ENGINE STAND CRADLE (Alternate to AM-2811-6400DLH)
2899	FZES3041	CFM56-7B ENGINE STAND CRADLE (Alternate to FB70077-100ISSB)
2900	FZES3051	V2500-A1/A5 ENGINE STAND CRADLE (Alternate to AM-2228-A1)
2901	FZES3051	V2500-A1/A5 ENGINE STAND BASE (Alternate to AM-2228-B1)
2902	FZES3051	V2500-A1/A5 ENGINE STAND CRADLE (Alternate to FB70010-1V250)
2903	FZES3051	V2500-A1/A5 ENGINE R / I & TRANSPORTATION STAND (BASE + CRADLE)
2904	FZES3061	PW4164/4168 ENGINE STAND CRADLE (Alternate to AM-2700R)
2905	FZES3061	PW4164/4168 ENGINE STAND BASE (Alternate to AM-2701R)
2906	FZES3071	PW4000/JT9D ENGINE STAND CRADLE (Alternate to AM-2371)
2907	FZES3071	PW4000/JT9D ENGINE STAND BASE (Alternate to AM-2372)
2908	FZES3081	Trent 500/700 ENGINE STAND BASE (Alternate to AGSE-E079, HU55280-3 / HU55281-4)
2909	FZES3081	Trent 500/700 ENGINE STAND CRADLE (Alternate to EC013-003)
2910	FZES3081	Trent 500/700 ENGINE STAND BASE (Alternate to ED009-003)
2911	FZES3081	Trent 700 ENGINE STAND (Alternate to HU55280)

2912	FZES3081	Trent 700 ENGINE STAND CRADLE (Alternate to HU55280-3)
2913	FZES3081	Trent 700 ENGINE STAND BASE (Alternate to HU55280-4)
2914	FZES3082	Trent 700 ENGINE STAND
2915	FZES3083	Trent 500 ENGINE STAND
2916	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-100)
2917	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-155)
2918	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-156)
2919	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-161)
2920	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-162)
2921	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-164)
2922	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-169)
2923	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-170)
2924	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-800)
2925	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-900)
2926	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-A24)
2927	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-A28)
2928	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-1928-R)
2929	FZES3091	CF6-80A/C2/E1 ENGINE STAND BASE/CRADLE CONFIG (Alternate to AM-2425-E1)
2930	FZES3091	UNIVERSAL ENGINE STAND BASE (Alternate to AM-2563)
2931	FZES3091	UNIVERSAL ENGINE STAND BASE (Alternate to AM-2563-200DLH)
2932	FZES3201	STAND-POWER PLANT BUILD-UP
2941	G601-71006-101	STAND-POWER PLANT BUILD-UP
2942	G07004-1	JACKING BAR EQUIPMENT - MAIN LANDING GEAR
2943	G10003-1	PROTECTIVE COVER - ENGINE INLET, GE GENX-2B
2944	G12001-47	KIT - RIGGING PIN
2945	G12001-50	KIT - RIGGING PIN
2946	G12001-54	KIT - RIGGING PIN
2947	G12001-60	KIT - RIGGING PIN
2948	G21004-1	VACUUM HARNESS - CABIN PRESSURE CONTROLLER
2949	G24015-1	DISPATCH EQUIPMENT - APU GENERATOR BLANKING PLATE
2950	G25010-98	GANTRY EQUIPMENT - PASSENGER SEAT
2951	G25010-133	GANTRY EQUIPMENT - PASSENGER SEAT
2952	G25012-1	ANTI-RATTLE NUT WRENCH KIT
2953	G25012-8	ANTI-RATTLE NUT WRENCH KIT
2954	G26005-17	ADAPTER - HOT WIRE ANEMOMETER
2955	G26005-24	ADAPTER - HOT WIRE ANEMOMETER
2956	G27012-44	SLING EQUIPMENT - UPPER RUDDER
2957	G27012-52	SLING EQUIPMENT - UPPER RUDDER
2958	G27012-62	SLING EQUIPMENT - UPPER RUDDER
2959	G27017-1	BAR - RIGGING, FLAP TRACK FAIRING, NO. 1 AND NO. 8 DOOR
2960	G27023-1	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2961	G27023-107	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2962	G27023-124	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2963	G27023-125	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2964	G27023-126	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2965	G27023-136	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2966	G27023-167	TEST EQUIPMENT - FREEPLAY, FLIGHT CONTROLS
2967	G27032-1	ACTUATOR LOCK - OUTBOARD SPOILER
2968	G27032-8	ACTUATOR LOCK - OUTBOARD SPOILER
2969	G27032-14	ACTUATOR LOCK - OUTBOARD SPOILER
2970	G27036-74	MEASURING EQPT - HORIZ STAB HINGE BEARING FREEPLAY
2971	G27036-75	MEASURING EQPT - HORIZ STAB HINGE BEARING FREEPLAY
2972	G27036-143	MEASURING EQPT - HORIZ STAB HINGE BEARING FREEPLAY
2973	G27036-186	MEASURING EQPT - HORIZ STAB HINGE BEARING FREEPLAY
2974	G27042-108	SLING EQPT. - FLAP TRACK
2975	G27042-109	SLING EQPT. - FLAP TRACK
2976	G27043-208	HANDLING EQUIPMENT - HORIZONTAL STABILIZER ACTUATOR
2977	G27043-209	HANDLING EQUIPMENT - HORIZONTAL STABILIZER ACTUATOR
2978	G27043-210	HANDLING EQUIPMENT - HORIZONTAL STABILIZER ACTUATOR
2979	G27048-1	TEST EQUIPMENT - INBOARD ELEVATOR ACTUATOR
2980	G27051-45	REMOVAL AND INSTALLATION EQUIPMENT - INBOARD AILERON PCU
2981	G27054-1	LOCK EQUIPMENT - INBOARD AILERON

2982	G27057-1	HOLD OPEN LOCK - INBOARD SPOILER ACTUATOR
2983	G27063-69	LOCK EQUIPMENT - TRAILING EDGE FLAPS AND CARRIAGES
2984	G27063-76	LOCK EQUIPMENT - TRAILING EDGE FLAPS AND CARRIAGES
2985	G27065-14	LOCK EQUIPMENT - OUTBOARD AILERON POWER CONTROL UNIT
2986	G27065-18	LOCK EQUIPMENT - OUTBOARD AILERON POWER CONTROL UNIT
2987	G28005-14	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE
2988	G28005-18	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE
2989	G28005-23	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE
2990	G28005-29	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE
2991	G28005-35	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE
2992	G29007-1	MUFFLER/SILENCER - AIR DRIVEN HYDRAULIC PUMP
2993	G29014-1	EXTENSION EQUIPMENT - GROUND SERVICE DISCONNECT, LEFT/RIGHT HYDRAULIC SYSTEMS
2994	G32008-1	THREAD PROTECTOR - AXLE, MAIN AND NOSE LANDING GEAR
2995	G32008-5	THREAD PROTECTOR - AXLE, MAIN AND NOSE LANDING GEAR
2996	G32028-116	JACK - WING/BODY MAIN LANDING GEAR
2997	G32028-117	JACK - WING/BODY MAIN LANDING GEAR
2998	G32028-141	JACK - WING/BODY MAIN LANDING GEAR
2999	G32028-146	JACK - WING/BODY MAIN LANDING GEAR
3000	G32028-149	LARGE TURNBUCKLE ASSY
3001	G32028-164	JACK - WING/BODY MAIN LANDING GEAR
3002	G32039-42	WRENCH EQUIPMENT - WHEEL RETENTION NUT MLG
3003	G32049-1	LOCK EQUIPMENT - DOOR, WING LANDING GEAR
3004	G32066-1	TORQUE EQUIPMENT - TRUNNION BOLTS, BODY LANDING GEAR AND NOSE LANDING GEAR
3005	G32066-90	TORQUE EQUIPMENT - TRUNNION BOLTS, BODY LANDING GEAR AND NOSE LANDING GEAR
3006	G32066-91	TORQUE EQUIPMENT - TRUNNION BOLTS, BODY LANDING GEAR AND NOSE LANDING GEAR
3007	G32066-95	TORQUE EQUIPMENT - TRUNNION BOLTS, BODY LANDING GEAR AND NOSE LANDING GEAR
3008	G32066-96	TORQUE EQUIPMENT - TRUNNION BOLTS, BODY LANDING GEAR AND NOSE LANDING GEAR
3009	G32074-72	RIGGING EQUIPMENT - BODY GEAR DOORS
3010	G32075-1	TEST EQUIPMENT - BRAKE BLEED PORT
3011	G32075-16	TEST EQUIPMENT - BRAKE BLEED PORT
3012	G32078-1	CLAMP ASSY-NOSE LANDING GEAR STEERING
3013	G34002-1	CALIBRATION EQUIPMENT - ANGLE OF ATTACK SENSOR
3014	G34002-2	CALIBRATION EQUIPMENT - ANGLE OF ATTACK SENSOR
3015	G34002-3	CALIBRATION EQUIPMENT - ANGLE OF ATTACK SENSOR
3016	G34002-4	CALIBRATION EQUIPMENT - ANGLE OF ATTACK SENSOR
3017	G34002-5	CALIBRATION EQUIPMENT - ANGLE OF ATTACK SENSOR
3018	G35003-1	RESTRAINING EQUIPMENT - PASSENGER SERVICE UNIT (PSU), OXYGEN DOORS
3019	G35003-4	RESTRAINING EQUIPMENT - PASSENGER SERVICE UNIT (PSU), OXYGEN DOORS
3020	G36035-1	TEST EQUIPMENT - PNEUMATIC SYSTEM HEALTH CHECK
3021	G36035-36	TEST EQUIPMENT - PNEUMATIC SYSTEM HEALTH CHECK
3022	G36035-18	FITTING ASSY
3023	G36035-77	TEST EQUIPMENT - PNEUMATIC SYSTEM HEALTH CHECK
3024	G36044-217	REMOVAL/INSTALLATION EQUIPMENT - PRECOOLER
3025	G36044-272	REMOVAL/INSTALLATION EQUIPMENT - PRECOOLER
3026	G38004-10	BLOCKAGE REMOVAL TOOL - VACUUM LAVATORY SYSTEM
3027	G38004-13	BLOCKAGE REMOVAL TOOL - VACUUM LAVATORY SYSTEM
3028	G38004-17	BLOCKAGE REMOVAL TOOL - VACUUM LAVATORY SYSTEM
3029	G38006-1	BLOCKAGE REMOVAL EQUIPMENT - VACUUM WASTE SYSTEM
3030	G47001-19	TEST EQUIPMENT - LEAK AND PRESSURE, NITROGEN GENERATION SYSTEM
3031	G47001-20	TEST EQUIPMENT - LEAK AND PRESSURE, NITROGEN GENERATION SYSTEM
3032	G49002-94	CRADLE/DOLLY - UNIVERSAL APU
3033	G49002-95	CRADLE/DOLLY - UNIVERSAL APU
3034	G49002-96	CRADLE DOLLY-UNIVERSAL, APU. 747-400.
3035	G49009-1	SUPPORT EQUIPMENT - APU EXHAUST PIPE
3036	G51003-1	FALL PROTECTION - OVERHEAD PERSONNEL SUPPORT
3037	G52015-1	TEST EQUIPMENT - ACTUATOR, ACCESS DOOR LATCH
3038	G52015-12	TEST EQUIPMENT - ACTUATOR, ACCESS DOOR LATCH
3039	G52015-17	TEST EQUIPMENT - ACTUATOR, ACCESS DOOR LATCH
3040	G53001-103	SCAFFOLD EQUIPMENT - PRESSURE BULKHEAD ACCESS
3041	G53001-104	SCAFFOLD EQUIPMENT - PRESSURE BULKHEAD ACCESS
3042	G53001-134	SCAFFOLD EQUIPMENT - PRESSURE BULKHEAD ACCESS
3043	G53001-141	SCAFFOLD EQUIPMENT - PRESSURE BULKHEAD ACCESS

3044	G53001-230	SCAFFOLD EQUIPMENT - PRESSURE BULKHEAD ACCESS
3045	G54004-36	SLING - STRUT REMOVAL/INSTALLATION
3046	G54015-1	WRENCH SET - STRUT INSTALLATION, UPPER LINK, FRONT SPAR
3047	G71001-181	BOOTSTRAP EQUIPMENT - CF6-80C2B ENGINE
3048	G71002-48	CRADLE - CF6-80C2B ENGINE
3049	G71003-24	COUPLING ROD ASSY
3050	G71003-34	PROTECTOR
3051	G71003-176	UPR FWD SPRT ASSY
3052	G71003-209	BOOTSTRAP EQUIPMENT - PW4000 ENGINES
3053	G71003-210	LWR FWD SRPT ASSY
3054	G71003-211	INBD ARM ASSY
3055	G71003-212	OUTBD ARM ASSY
3056	G71007-28	SLING EQUIPMENT - INLET COWL, CF6-80C2B ENGINE
3057	G71009-22	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3058	G71009-56	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3059	G71009-58	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3060	G71009-164	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3061	G71009-167	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3062	G71009-168	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3063	G71009-207	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3064	G71009-229	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3065	G71009-236	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3066	G71009-237	FIXTURE - PROOF LOAD, BOOTSTRAP EQUIPMENT
3067	G71010-79	SLING - ENGINE HANDLING - GE ENGINES
3068	G71010-80	SLING - ENGINE HANDLING - GE ENGINES
3069	G71010-81	SLING - ENGINE HANDLING - GE ENGINES
3070	G71022-54	HOLD OPEN EQUIPMENT - ENGINE FAN/CORE COWL, CF6-80C2B
3071	G71025-39	SLING EQUIPMENT - RB211-524 ENGINE
3072	G71029-90	BOOTSTRAP EQUIPMENT - RB211 ENGINE
3073	G71031-65	BOOTSTRAP EQUIPMENT - JT9D-3 AND -7 ENGINES
3074	G71037-130	ENGINE CHANGE KIT - GENX-2B
3075	G71037-146	ENGINE CHANGE KIT - GENX-2B
3076	G71038-1	UNLOCK POLE EQUIPMENT - FAN COWL HOLD OPEN ROD
3077	G71038-13	UNLOCK POLE EQUIPMENT - FAN COWL HOLD OPEN ROD
3078	G71038-17	UNLOCK POLE EQUIPMENT - FAN COWL HOLD OPEN ROD
3079	G71045-1	HOIST ASSEMBLY - ENGINE CHANGE KIT
3080	G71045-2	HOIST ASSEMBLY - ENGINE CHANGE KIT
3081	G71045-3	HOIST ASSEMBLY - ENGINE CHANGE KIT
3082	G71045-4	HOIST ASSEMBLY - ENGINE CHANGE KIT
3083	G71045-5	HOIST ASSEMBLY
3084	G71051-1	CALIBRATION KIT - LOAD CELL SYSTEM
3085	G76002-18	PROTRACTOR - THRUST REVERSER LEVERS
3086	G76002-19	PROTRACTOR - THRUST REVERSER LEVERS
3087	G76002-37	PROTRACTOR - THRUST REVERSER LEVERS
3088	G76002-42	PROTRACTOR - THRUST REVERSER LEVERS
3089	G78003-53	SLING EQUIPMENT - FAN REVERSER, CF6-80C2B ENGINE
3090	G78006-74	DOLLY - THRUST REVERSER, CF6-80C2 ENGINE
3091	G78006-75	DOLLY - THRUST REVERSER, CF6-80C2 ENGINE
3092	GE15C	SPHERICAL BEARING
3093	GS25174-1	LIFTING FIXTURE
3094	GS25178-1	ALIGNMENT FIXTURE , QUAD HX
3095	H-5265	AIR ADAPTER
3096	H46154	WRENCH
3097	H47282	EXTRACTOR
3098	H47682	ADAPTOR MLG WHEEL
3099	HIX1001	HANDLING SLING
3100	HIX3005	SAFETY SLEEVE-PIVOTING DOOR ACT
3101	HIX3007	STAND-HYDRAULIC ACTUATOR ROD
3102	HIX3008	CFM56 T/R BY PASS PIN
3103	HIX4001	PUMP, ACTUATOR, FAN REVERSER
3104	HU43327	COVER TOOL
3105	IAE1F10008	PULLER - REMOVAL

3106	IAE1F10021	STAND STORAGE - EXTERNAL GEARBOX MODULE
3107	IAE1F10023	ADAPTER
3108	IAE1F10028	REAR PEDESTAL, FIXED ENGINE HANDLING V2500
3109	IAE1F10031	PUSHER
3110	IAE1F10042	EYE LIFTING REAR BARE ENGINE
3111	IAE1F10043	FIXTURE SUPPORT TEC V2500
3112	IAE1F10043-4	PLATE PIN
3113	IAE1F10049	STAND VERTICAL LPT MODULE GROUP
3114	IAE1F10058	HANDLING FIXTURE
3115	IAE1F10080	STAND HORZT. LPT MODULE
3116	IAE1F10082	PIN GUIDE - COVER SCAVENGE OIL FILTER ELEMENT
3117	IAE1F10084	SUPPORT FIXTURE
3118	IAE1F10085	PEDESTAL - ADJUSTABLE - ENGINE HANDLING V2500
3119	IAE1F10087	HOLDER BASE VERTICAL GEARSHAFT
3120	IAE1F10104	WRENCH HAND NUT
3121	IAE1F10260	LIFTING BEAM
3122	IAE1F10363	ADJUSTABLE SLING
3123	IAE1J12000	BRACKET REAR ENGINE
3124	IAE1J12008	TRUNNION REAR ENGINE ASSY
3125	IAE1J12019	STAND TRANSPORT STORAGE ENGINE ASSY FAN ROTOR
3126	IAE1J12020	LEVER PULLER
3127	IAE1J12024	WRENCH, SPECIAL-ENGINE, ASSY BOLT
3128	IAE1J12141	BOLT PUSHER-ENGINE ASSY
3129	IAE1J12188	BOLT PULLER SET
3130	IAE1J12211	STAND TRANSPORT STORAGE ENGINE ASSY NO1 BRG-LPC STUB SHAFT INTERMEDIATE
3131	IAE1J12212	STAND-STORAGE LPT SHAFT
3132	IAE1J12220	PULLER, HYDRAULIC-ENGINE ASSY, LP SHAFT
3133	IAE1J12311	STAND TURN OVER INTERMEDIATE CASE MODULE
3134	IAE1J12386	HOLDER RESTRAINT LPC STUB SHAFT INTERMEDIATE
3135	IAE1J12387	STAND WORK FAN ROTOR CENTER LPC STUB SHAFT INTERMEDIATE
3136	IAE1J12507	PIN ALIGNING LPC ROTOR NO1 BPG ROTOR CENTER INTERMEDIATE
3137	IAE1J12541	SUPPORT HOLDING ENGINE ASSY LPC ROTOR INTERMEDIATE
3138	IAE1J13400	WRENCH-SPECIAL
3139	IAE1M14000	FIXTURE LIFTING LPT
3140	IAE1M14001	FIXTURE SUPPORT LP TURBINE ROTOR
3141	IAE1M14009	STAND STORAGE LPT ROTOR AND STATOR
3142	IAE1M14010	FIXTURE ASSY/DISSASY LPT ROTOR & STRATOR
3143	IAE1M14014	FIXTURE SUPPORT LPT ROTOR AND STATOR
3144	IAE1M14050	DISK LOCATING LPT ROTOR STG, 6
3145	IAE1M14051	DISK LOCATING LPT ROTOR STG, 7
3146	IAE1M14110	STAND TURN OVER LPT ROTOR AND STATOR
3147	IAE1M14125	PIN GUIDE LPT ROTOR
3148	IAE1M14143	SUPPORT FIXTURE
3149	IAE1M14146	SUPPORT PLATE
3150	IAE1N20001	COMMON NOZZLE DOLLY
3151	IAE1N20002	SLING-FAN THRUST REVERSER
3152	IAE1N20004	DOLLY - COMMON NOZZLE ASSEMBLY
3153	IAE1N20009	HYDRAULIC PUMP UNIT-REVERSER C-DUCT
3154	IAE1N20010	LOCKOUT PIN - THRUST REVERSER
3155	IAE1N20015	SLING-LIFTING
3156	IAE1N20049	PIN - LOCKOUT ACTUATOR
3157	IAE1N20403	SLING INLET COWL
3158	IAE1N20444	TOOL-TAPPING
3159	IAE1P16004	BRACKET HANDLING DIFFUSER COMBUST. GROUP FRONT FLANGE
3160	IAE1P16005	STAND BUILD DIFFUSER COMBUSTION
3161	IAE1P16014	FIXTURE LIFT TURN HPT ROTOR FIRST STAGE
3162	IAE1P16028	STAND BUILD HPT ROTOR AND STATOR ASSY
3163	IAE1P16046	FIXTURE REMOV INSTALL ENGINE ASSY HPT
3164	IAE1P16047	ADAPTER HYDRAULIC ENGINE ASSY HPT REMOVE INSTALL
3165	IAE1P16051	ADAPTER CLAMP HPT ROTORS
3166	IAE1P16285	ADAPTER TIEROD ENGINE ASSY HP SYSTEM
3167	IAE1P17038	PULLER SLIDE CASE TURBO EXHAUST ASSY

3168	IAE1R18000	SPANNER WRENCH
3169	IAE1R18001	WRENCH - ENGINE ASSY
3170	IAE1R18002	WRENCH-ENGINE ASSY. EXTERNAL PLUMBING
3171	IAE1R18003	WRENCH ENGINE ASSY EXTERNAL PLUMBING
3172	IAE1R18089	LIFTING ADAPTER
3173	IAE1R18095	UNIVERSAL SLINGING ADAPTER
3174	IAE1R18214	BUILD STAND
3175	IAE1R18217	LIFT FIXTURE
3176	IAE1R18222	SUPPORT RING
3177	IAE1R18234	SUPPORT ROD
3178	IAE1R18254	PIN RIGGING
3179	IAE1R18282	PIN, RIGGING
3180	IAE1R18423	RIGGING PIN
3181	IAE1R18673	SHAFT STUB DUMMY
3182	IAE1R18685	INHIBITING RIG ADAPTOR
3183	IAE1R18757	RIG - INHIBITING
3184	IAE2R18871	INSPECTION BRIDGE
3185	IAE1R18891	PIN, RIGGING
3186	IAE1R18907	EXPANDING RETAINER
3187	IAE1R19313	GAUGE – BAYONET SLOT WEAR
3188	IAE1R19416	WRENCH-SPECIAL 4 AND 8 SLOT CONNECTOR, LIFTING
3189	IAE2R18771	BRIDGE, INSPECTION (DEPTH GAUGE INCLUDED)
3190	IAE3P17046	BULKHEAD REMOVAL TOOL
3191	J07001-23	JACK FITTING - FORWARD BODY
3192	J07001-25	JACK FITTING - FORWARD BODY
3193	J07013-1	JACKING EQUIPMENT - MAIN LANDING GEAR AXLE
3194	J10001-1	PLUG SET - VENT, THERMAL ANTI-ICING EXHAUST
3195	J10001-2	PLUG SET - VENT, THERMAL ANTI-ICING EXHAUST
3196	J10001-13	PLUG SET - VENT, THERMAL ANTI-ICING EXHAUST
3197	J10001-14	PLUG SET - VENT, THERMAL ANTI-ICING EXHAUST
3198	J10001-15	PLUG SET - VENT, THERMAL ANTI-ICING EXHAUST
3199	J10007-1	WEIGHT EQUIPMENT - DUMMY ENGINE
3200	J10007-2	WEIGHT EQUIPMENT - DUMMY ENGINE
3201	J10007-3	WEIGHT EQUIPMENT - DUMMY ENGINE
3202	J10007-4	WEIGHT EQUIPMENT - DUMMY ENGINE
3203	J10007-53	WEIGHT EQUIPMENT - DUMMY ENGINE
3204	J10007-54	WEIGHT EQUIPMENT - DUMMY ENGINE
3205	J10007-55	WEIGHT EQUIPMENT - DUMMY ENGINE
3206	J10007-56	WEIGHT EQUIPMENT - DUMMY ENGINE
3207	J10007-57	WEIGHT EQUIPMENT - DUMMY ENGINE
3208	J10007-58	WEIGHT EQUIPMENT - DUMMY ENGINE
3209	J10007-59	WEIGHT EQUIPMENT - DUMMY ENGINE
3210	J10007-60	WEIGHT EQUIPMENT - DUMMY ENGINE
3211	J10007-99	WEIGHT EQUIPMENT - DUMMY ENGINE
3212	J20001-60	HOIST EQUIPMENT - LINE REPLACEABLE UNIT (LRU), MAIN ELECTRICAL/ELECTRONIC (EE) BAY
3213	J20001-61	HOIST EQUIPMENT - LINE REPLACEABLE UNIT (LRU), MAIN ELECTRICAL/ELECTRONIC (EE) BAY
3214	J20001-62	HOIST EQUIPMENT - LINE REPLACEABLE UNIT (LRU), MAIN ELECTRICAL/ELECTRONIC (EE) BAY
3215	J20001-63	HOIST EQUIPMENT - LINE REPLACEABLE UNIT (LRU), MAIN ELECTRICAL/ELECTRONIC (EE) BAY
3216	J20001-64	HOIST EQUIPMENT - LINE REPLACEABLE UNIT (LRU), MAIN ELECTRICAL/ELECTRONIC (EE) BAY
3217	J20002-43	LOAD POSITIONER - ENGINE ACCESSORIES
3218	J20002-44	LOAD POSITIONER - ENGINE ACCESSORIES
3219	J20002-59	LOAD POSITIONER - ENGINE ACCESSORIES
3220	J20002-67	LOAD POSITIONER - ENGINE ACCESSORIES
3221	J20002-70	LOAD POSITIONER - ENGINE ACCESSORIES
3222	J20003-6	RIG PIN ASSY
3223	J20003-16	PIN RIGGING
3224	J20003-34	PIN SET - RIGGING
3225	J20003-84	PIN SET - RIGGING
3226	J20004-8	PERSONNEL EQUIPMENT - SHOCK ABSORBING LANYARD, HORIZONTAL STABILIZER
3227	J20009-50	JACKING EQUIPMENT - HYDRAULIC TELESOPING
3228	J20009-64	JACKING EQUIPMENT - HYDRAULIC TELESOPING
3229	J20009-68	JACKING EQUIPMENT - HYDRAULIC TELESOPING

3230	J20009-70	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3231	J20009-88	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3232	J20009-108	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3233	J20009-109	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3234	J20009-110	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3235	J20009-136	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3236	J20009-140	JACKING EQUIPMENT - HYDRAULIC TELESCOPING
3237	J20011-1	INTERFACE ADAPTER - GE FLOOR HOIST, LRU
3238	J21001-3	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3239	J21001-72	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3240	J21001-73	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3241	J21001-79	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3242	J21001-80	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3243	J21001-81	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3244	J21001-132	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3245	J21001-133	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3246	J21001-134	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3247	J21001-154	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3248	J21001-155	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3249	J21001-156	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK
3250	J21002-1	PROOF LOAD EQUIPMENT - HOIST ADAPTER EQUIPMENT, AIR CONDITIONING (A/C) PACK
3251	J21003-1	MAINTENANCE PLATFORM EQUIPMENT
3252	J21003-2	MAINTENANCE PLATFORM EQUIPMENT
3253	J21003-23	MAINTENANCE PLATFORM EQUIPMENT
3254	J21003-24	MAINTENANCE PLATFORM EQUIPMENT
3255	J21007-1	ADAPTER EQUIPMENT - ADJUSTABLE ANGLE, BOOM HOIST
3256	J21009-33	AIR SAMPLER, AIRCRAFT PNEUMATIC SYSTEM
3257	J21009-48	AIR SAMPLER – AIRCRAFT PNEUMATIC SYSTEM
3258	J22001-1	TOOL SET - AUTOTHROTTLE SERVO ASSEMBLY
3259	J24018-1	HOIST ADAPTER - IDG
3260	J24018-49	HOIST ADAPTER - IDG
3261	J24019-1	HOIST ADAPTER - BACKUP GENERATOR RAM AIR INLET
3262	J24019-2	HOIST ADAPTER - BACKUP GENERATOR RAM AIR INLET
3263	J24019-3	HOIST ADAPTER - BACKUP GENERATOR RAM AIR INLET
3264	J25006-1	INSTALLATION/REMOVAL EQUIPMENT - OFF WING ESCAPE SLIDE
3265	J25006-37	INSTALLATION/REMOVAL EQUIPMENT - OFF WING ESCAPE SLIDE
3266	J25010-1	DOLLY EQPT-OFAR/OFOR MODULE RMVL/INSTL
3267	J25010-95	DOLLY EQPT-OFAR/OFOR MODULE RMVL/INSTL
3268	J25010-121	DOLLY EQPT-OFAR/OFOR MODULE RMVL/INSTL
3269	J25010-179	DOLLY EQPT-OFAR/OFOR MODULE RMVL/INSTL
3270	J25014-1	BLANKING PLATE - FREIGHTER COMMON TURNABLE, POWERED DRIVE UNIT, MAIN DECK
3271	J25015-241	CART EQUIPMENT - PASSENGER SEATS
3272	J25015-373	CART EQUIPMENT - PASSENGER SEATS
3273	J26008-1	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3274	J26008-2	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3275	J26008-3	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3276	J26008-35	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3277	J26009-1	TEST EQUIPMENT - FIRE EXTINGUISHING TUBING, CARGO COMPARTMENT
3278	J26009-16	TEST EQUIPMENT - FIRE EXTINGUISHING TUBING, CARGO COMPARTMENT
3279	J27002-1	LOCK, HORIZONTAL STABILIZER ACTUATOR BALL NUT
3280	J27002-14	LOCK, HORIZONTAL STABILIZER ACTUATOR BALL NUT
3281	J27005-48	LOCK EQUIPMENT - INBOARD/OUTBOARD, SPOILER ACTUATOR
3282	J27005-63	LOCK EQUIPMENT - INBOARD/OUTBOARD, SPOILER ACTUATOR
3283	J27005-64	LOCK EQUIPMENT - INBOARD/OUTBOARD, SPOILER ACTUATOR
3284	J27006-20	SLING EQUIPMENT - OUTBOARD TRAILING EDGE FLAP
3285	J27006-43	SLING EQUIPMENT - OUTBOARD TRAILING EDGE FLAP
3286	J27008-1	SLING - REMOVAL/INSTALLATION, AILERON
3287	J27008-13	SLING - REMOVAL/INSTALLATION, AILERON
3288	J27013-27	SLING EQUIPMENT - ELEVATOR REMOVAL/INSTALLATION
3289	J27013-55	SLING EQUIPMENT - ELEVATOR REMOVAL/INSTALLATION
3290	J27015-1	SPLINE ADAPTER - LEADING EDGE/TRAILING EDGE POWER DRIVE UNIT, MANUAL DRIVE
3291	J27016-46	REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR POWER CONTROL UNIT

3292	J27016-76	REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR POWER CONTROL UNIT
3293	J27017-1	RIGGING EQUIPMENT - FLAPERON
3294	J27017-19	RIGGING EQUIPMENT - FLAPERON
3295	J27019-1	PIN SET - BYPASS, ELEVATOR POWER CONTROL UNIT
3296	J27024-47	SLING EQUIPMENT - RUDDER, REMOVAL/INSTALLATION
3297	J27024-48	SLING EQUIPMENT - RUDDER, REMOVAL/INSTALLATION
3298	J27024-65	SLING EQUIPMENT - RUDDER, REMOVAL/INSTALLATION
3299	J27024-66	SLING EQUIPMENT - RUDDER, REMOVAL/INSTALLATION
3300	J27027-1	HOIST EQUIPMENT - REMOVAL/INSTALLATION, RUDDER POWER CONTROL UNIT (PCU)
3301	J27027-52	HOIST EQUIPMENT - REMOVAL/INSTALLATION, RUDDER POWER CONTROL UNIT (PCU)
3302	J27027-102	HOIST EQUIPMENT - REMOVAL/INSTALLATION, RUDDER POWER CONTROL UNIT (PCU)
3303	J27027-129	HOIST EQUIPMENT - REMOVAL/INSTALLATION, RUDDER POWER CONTROL UNIT (PCU)
3304	J27027-130	HOIST EQUIPMENT - REMOVAL/INSTALLATION, RUDDER POWER CONTROL UNIT (PCU)
3305	J27028-14	LOCK - POWER CONTROL UNIT
3306	J27028-20	LOCK - RUDDER AND ELEVATOR POWER CONTROL UNIT (PCU)
3307	J27028-21	LOCK - RUDDER AND ELEVATOR POWER CONTROL UNIT (PCU)
3308	J27028-31	LOCK-PCU RUDDER
3309	J27028-38	LOCK-PCU RUDDER
3310	J27028-39	LOCK-PCU RUDDER
3311	J27028-40	LOCK-PCU RUDDER
3312	J27028-41	LOCK-PCU RUDDER
3313	J27030-1	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3314	J27030-29	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3315	J27033-1	LOCK - OUTBOARD AILERON POWER CONTROL UNIT (PCU)
3316	J27034-13	GAP GAGE - SPOILER TO FLAP CLEARANCE
3317	J27036-53	CRADLE - FLAP SUPPORT FAIRING, REMOVAL AND INSTALLATION
3318	J27047-1	DRIVE BOLT - FLAP ATTACH BOLT INSTALLATION
3319	J27048-14	GAP GAGE - SPOILER TO FLAP CLEARANCE
3320	J27048-17	L PLATE ASSY
3321	J27048-19	ROD ASSY
3322	J27046-1	CLAMP
3323	J27046-34	CLAMP
3324	J27049-1	WRENCH - COUPLING SLEEVE, LEADING EDGE ACTUATION
3325	J27052-1	ADAPTER - SIDE GUST SUPPRESSION LEAK TEST
3326	J27072-1	ADAPTER - TEST, SPOILER AUXILIARY RETRACTION DEVICE (SARD) SYSTEM
3327	J27074-1	SPANNER WRENCH - TORQUE TUBE, INBOARD MAIN FLAP
3328	J27076-1	TEST ASSEMBLY - PRESSURE SWITCH, NOSE GEAR
3329	J27076-5	TEST ASSEMBLY - PRESSURE SWITCH, NOSE GEAR
3330	J27076-10	TEST ASSEMBLY - PRESSURE SWITCH, NOSE GEAR
3331	J27076-11	TEST ASSEMBLY - PRESSURE SWITCH, NOSE GEAR
3332	J27079-31	INSPECTION EQUIPMENT - ELEVATOR FREEPLAY
3333	J27079-32	INSPECTION EQUIPMENT - ELEVATOR FREEPLAY
3334	J27079-38	INSPECTION EQUIPMENT - ELEVATOR FREE PLAY
3335	J27079-57	INSPECTION EQUIPMENT - ELEVATOR FREE PLAY
3336	J27084-72	TEST EQUIPMENT - TRAILING EDGE FLAP TRANSMISSION, NO-BACK BRAKE OPERATION TEST
3337	J27084-79	TEST EQUIPMENT - TRAILING EDGE FLAP TRANSMISSION, NO-BACK BRAKE OPERATION TEST
3338	J27087-35	LOCK EQUIPMENT - SPOILER POWER CONTROL UNITS
3339	J27087-57	LOCK EQUIPMENT - SPOILER POWER CONTROL UNITS
3340	J27094-1	LINK, ADJUSTABLE - FLAPERON
3341	J27120-1	POWER CONTROL UNIT LOCK - OUTBOARD AILERON
3342	J27126-1	RIGGING TOOL - AILERON WING TRAILING EDGE SECTION 13
3343	J27129-1	RUDDER LOCK - POWER CONTROL UNIT
3344	J27131-1	POWER CONTROL UNIT LOCK - ELEVATOR
3345	J28010-26	CONSOLE EQUIPMENT - SHOP AIR SUPPLY
3346	J28010-135	CONSOLE EQUIPMENT - SHOP AIR SUPPLY
3347	J28010-139	CONSOLE EQUIPMENT - SHOP AIR SUPPLY
3348	J28010-154	CONSOLE EQUIPMENT - SHOP AIR SUPPLY
3349	J28012-1	DRAIN HOSE - SUMP VALVE, CENTER AUXILIARY FUEL TANKS
3350	J28012-13	DRAIN HOSE - SUMP VALVE, CENTER AUXILIARY FUEL TANKS
3351	J28013-1	FITTING EQUIPMENT - FUEL DRAIN SUMP
3352	J28017-1	ADAPTER EQUIPMENT - DRY BAY PRESSURIZATION, WING
3353	J29002-1	REMOVAL/INSTALLATION EQUIPMENT - RAM AIR TURBINE

3354	J29002-16	REMOVAL/INSTALLATION EQUIPMENT - RAM AIR TURBINE
3355	J29002-25	REMOVAL/INSTALLATION EQUIPMENT - RAM AIR TURBINE
3356	J29003-85	HOIST ADAPTER - AIR DRIVE UNIT (ADU) REMOVAL/INSTALLATION
3357	J29003-93	HOIST ADAPTER - AIR DRIVE UNIT (ADU) REMOVAL/INSTALLATION
3358	J29007-1	HOIST ADAPTER - ENGINE DRIVEN PUMP LEADING EDGE SLATS
3359	J29007-2	HOIST ADAPTER - ENGINE DRIVEN PUMP LEADING EDGE SLATS
3360	J29007-3	HOIST ADAPTER - ENGINE DRIVEN PUMP LEADING EDGE SLATS
3361	J32002-60	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3362	J32002-61	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3363	J32002-73	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3364	J32002-96	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3365	J32002-97	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3366	J32002-98	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3367	J32002-120	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/ INSTALLATION, MAIN LANDING GEAR
3368	J32004-1	PULLER EQUIPMENT - TRUNNION PIN
3369	J32004-21	PULLER EQUIPMENT - TRUNNION PIN
3370	J32004-22	PULLER EQUIPMENT - TRUNNION PIN
3371	J32004-23	PULLER EQUIPMENT - TRUNNION PIN
3372	J32004-24	PULLER ASSY
3373	J32004-26	HAMMER ASSY
3374	J32005-1	PULLER EQUIPMENT - TRUNNION PIN
3375	J32005-19	PULLER EQUIPMENT - TRUNNION PIN
3376	J32007-1	AXLE PROTECTOR
3377	J32007-2	PROTECTOR
3378	J32007-3	AXLE PROTECTOR
3379	J32008-1	PULLER EQUIPMENT - BRAKE SYSTEM PINS, MAIN LANDING GEAR
3380	J32008-31	PULLER EQUIPMENT - BRAKE SYSTEM PINS, MAIN LANDING GEAR
3381	J32008-74	PULLER EQUIPMENT - BRAKE SYSTEM PINS, MAIN LANDING GEAR
3382	J32008-88	PULLER EQUIPMENT PIN
3383	J32009-29	REPLACEMENT EQUIPMENT - NOSE LANDING GEAR LOWER SEALS
3384	J32009-45	REPLACEMENT EQUIPMENT - NOSE LANDING GEAR LOWER SEALS
3385	J32009-49	REPLACEMENT EQUIPMENT - NOSE LANDING GEAR LOWER SEALS
3386	J32010-106	PULLER EQUIPMENT - BRAKE SLEEVE, MLG AXLES
3387	J32010-107	PULLER EQUIPMENT - BRAKE SLEEVE, MLG AXLES
3388	J32010-110	PULLER EQUIPMENT - BRAKE SLEEVE, MLG AXLES
3389	J32011-3	DOWNLOCK EQUIPMENT - NLG & MLG
3390	J32011-4	DOWNLOCK EQUIPMENT - NLG & MLG
3391	J32011-7	DOWNLOCK EQUIPMENT - NLG & MLG
3392	J32012-18	PULLER EQUIPMENT - BRAKE, MAIN LANDING GEAR
3393	J32012-19	PULLER EQUIPMENT - BRAKE, MAIN LANDING GEAR
3394	J32013-1	SIDE STRUT ADJUSTMENT EQUIPMENT - DRAG STRUT LOCK LINK ASSEMBLY, MAIN LANDING GEAR
3395	J32014-89	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
3396	J32014-116	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
3397	J32018-14	ADJUSTMENT EQPT - DOWNLOCK STOP, MLG SIDE & DRAG STRUTS
3398	J32018-19	ADJUSTMENT EQPT - DOWNLOCK STOP, MLG SIDE & DRAG STRUTS
3399	J32018-28	ADJUSTMENT EQPT - DOWNLOCK STOP, MLG SIDE & DRAG STRUTS
3400	J32019-50	SLING EQUIPMENT - RETRACT ACTUATOR REMOVAL/INSTALLATION, MAIN LANDING GEAR
3401	J32019-59	SLING EQUIPMENT - RETRACT ACTUATOR REMOVAL/INSTALLATION, MAIN LANDING GEAR
3402	J32019-61	HOOK ACTUATOR CLAMP ASSY
3403	J32019-97	SLING EQUIPMENT - RETRACT ACTUATOR REMOVAL/INSTALLATION, MAIN LANDING GEAR
3404	J32025-1	HOIST ADAPTER EQUIPMENT - NLG DRAG STRUT, REMOVAL/INSTALLATION
3405	J32025-29	HOIST ADAPTER EQUIPMENT - NLG DRAG STRUT, REMOVAL/INSTALLATION
3406	J32026-1	SLING EQUIPMENT - HANDLING, NOSE LANDING GEAR
3407	J32027-47	HOIST EQPT - RMVL/INSTL NLG
3408	J32027-63	HOIST EQPT - RMVL/INSTL NLG
3409	J32028-1	LOCK PIN EQUIPMENT
3410	J32028-2	PIN ASSY NLG
3411	J32028-3	PIN ASSY MLG
3412	J32030-44	DOLLY TRASPORTATION N/L/G
3413	J32031-12	EQUIPMENT - PROTECTOR, MAIN LANDING GEAR
3414	J32031-13	PROTECTOR
3415	J32031-3	AXLE PROTECTOR MLG

3416	J32032-2	WRENCH
3417	J32032-12	SHAFT
3418	J32032-22	WRENCH EQUIPMENT - WHEEL RETENTION NUT, MLG
3419	J32032-23	WRENCH
3420	J32034-1	TURNBUCKLE - TRUCK POSITION ACTUATOR MLG
3421	J32034-2	TURNBUCKLE ASSY
3422	J32036-27	R/I EQPT, AFT TRUNNION PIN, MLG
3423	J32036-55	R/I EQPT, AFT TRUNNION PIN, MLG
3424	J32036-56	R/I EQPT, AFT TRUNNION PIN, MLG
3425	J32036-57	R/I EQPT, AFT TRUNNION PIN, MLG
3426	J32036-75	R/I EQPT, AFT TRUNNION PIN, MLG
3427	J32037-106	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3428	J32037-119	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3429	J32037-120	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3430	J32037-121	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3431	J32037-122	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3432	J32037-123	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3433	J32037-126	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3434	J32037-138	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3435	J32037-139	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3436	J32037-165	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)
3437	J32038-41	REMOVAL / INSTALLATION EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
3438	J32038-42	REMOVAL / INSTALLATION EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
3439	J32038-52	REMOVAL / INSTALLATION EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
3440	J32038-53	REMOVAL / INSTALLATION EQUIPMENT - FUSE PIN, MAIN LANDING GEAR FORWARD TRUNNION SUPPORT
3441	J32042-89	WRENCH KIT - LANDING GEAR
3442	J32043-119	EQUIPMENT – MAIN LANDING GEAR
3443	J32043-124	EQUIPMENT – MAIN LANDING GEAR
3444	J32043-125	EQUIPMENT – MAIN LANDING GEAR
3445	J32043-151	EQUIPMENT – MAIN LANDING GEAR
3446	J32043-175	EQUIPMENT – MAIN LANDING GEAR
3447	J32043-176	EQUIPMENT – MAIN LANDING GEAR
3448	J32043-178	EQUIPMENT – MAIN LANDING GEAR
3449	J32048-52	HANDLING EQUIPMENT - MAIN LANDING GEAR TORSION LINKS
3450	J32048-53	HANDLING EQUIPMENT - MAIN LANDING GEAR TORSION LINKS
3451	J32052-1	EXTENSION BAR - FUNCTIONAL TEST, NOSE LANDING GEAR STEERING
3452	J32054-50	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3453	J32054-51	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3454	J32054-91	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3455	J32054-92	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3456	J32054-116	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3457	J32054-117	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3458	J32055-1	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3459	J32055-3	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3460	J32055-50	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3461	J32055-61	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3462	J32055-82	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3463	J32055-97	TORQUE ADAPTER SET - LANDING GEAR COMPONENTS
3464	J32060-1	DRAIN EQUIPMENT - OLEO STRUT, MAIN LANDING GEAR/NOSE LANDING GEAR
3465	J32062-1	TRANSPORTER & POSITIONER EQPT - MLG
3466	J32062-26	TRANSPORTER & POSITIONER EQPT - MLG
3467	J32063-1	LOCATING EQUIPMENT - UPLOCK ROLLER, MAIN LANDING GEAR DOOR
3468	J32065-1	ALIGNMENT PIN, MAIN LANDING GEAR TOW FITTING
3469	J32065-7	ALIGNMENT PIN, MAIN LANDING GEAR TOW FITTING
3470	J32065-13	ALIGNMENT PIN - MAIN LANDING GEAR TOW FITTING
3471	J32066-1	BUILD-UP EQUIPMENT - TRUCK BEAM, MAIN LANDING GEAR
3472	J32066-157	BUILD-UP EQUIPMENT - TRUCK BEAM, MAIN LANDING GEAR
3473	J32066-197	BUILD-UP EQUIPMENT - TRUCK BEAM, MAIN LANDING GEAR
3474	J32067-85	FUNCTIONAL TEST LANDING GEAR SPRINGS
3475	J32067-86	FUNCTIONAL TEST LANDING GEAR SPRINGS
3476	J32067-95	SPOOL BUSHING “C”
3477	J32067-96	SPOOL BUSHING “E”

3478	J32067-97	SPOOL BUSHING “B”
3479	J32067-98	SPOOL BUSHING “D”
3480	J32067-99	SPOOL BUSHING “A”
3481	J32071-10	PIN - LOCKOUT
3482	J32072-34	REMOVAL EQPT.-NLG AND MLG DYNAMIC SEAL
3483	J32072-35	REMOVAL EQPT.-NLG AND MLG DYNAMIC SEAL
3484	J32072-49	REMOVAL EQPT.-NLG AND MLG DYNAMIC SEAL
3485	J32072-50	REMOVAL EQUIPMENT - DYNAMIC SEAL, NOSE LANDING GEAR AND MAIN LANDING GEAR
3486	J32073-21	HOIST EQUIPMENT - REMOVAL/INSTALLATION, INNER CYLINDER, NOSE LANDING GEAR
3487	J32076-1	SLING EQUIPMENT - INNER CYLINDER, MAIN LANDING GEAR
3488	J32076-13	SLING EQUIPMENT - INNER CYLINDER, MAIN LANDING GEAR
3489	J32077-1	TRANSPORTATION DOLLY EQUIPMENT
3490	J32077-55	TRANSPORTATION DOLLY EQUIPMENT
3491	J32077-67	TRANSPORTATION DOLLY EQUIPMENT
3492	J32077-76	TRANSPORTATION DOLLY EQUIPMENT
3493	J32082-73	EQUIP.-REPL.,MLG LOWER BEARINGS
3494	J32082-98	REPLACEMENT EQUIPMENT – LOWER BEARING SEALS, MAIN LANDING GEAR (MLG)
3495	J32083-2	OUTER CYL SPANNER ASSY
3496	J32084-1	SHOCK STRUT EQUIPMENT - COMPONENT MAINTENANCE, NOSE LANDING GEAR
3497	J32085-34	3 1/4 INCH SOCKET
3498	J32085-37	THREAD PROTECTOR
3499	J32085-76	WRENCH KIT - MLG AND NLG
3500	J32085-77	WRENCH KIT MLG & NLG
3501	J32085-80	3 INCH SOCKET
3502	J32085-87	WRENCH KIT - MAIN LANDING GEAR AND NOSE LANDING GEAR
3503	J32085-88	WRENCH KIT - MAIN LANDING GEAR AND NOSE LANDING GEAR
3504	J32086-1	SPANNER SOCKET KIT - NOSE LANDING GEAR
3505	J32087-1	TURNBUCKLE EQUIPMENT - SHOCK STRUT, MAIN LANDING GEAR
3506	J32087-3	PIN
3507	J32087-5	STORAGE BOX
3508	J32090-17	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
3509	J32090-53	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
3510	J32090-69	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
3511	J32090-70	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR
3512	J32091-11	TEST EQPT – VELOCITY/POSITION TRANSD
3513	J32091-2	TEST EQPT – VELOCITY/POSITION TRANSD
3514	J32091-3	TEST EQPT – VELOCITY/POSITION TRANSD
3515	J32091-4	TEST EQPT – VELOCITY/POSITION TRANSD
3516	J32092-1	BUSHING REPLACEMENT AND HONING KIT - MAIN LANDING GEAR
3517	J32093-1	REMOVAL/INSTALLATION EQUIPMENT - NOSE LANDING GEAR, RETRACT ACTUATOR
3518	J32103-1	FUSE PIN REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR FORWARD TRUNION HOUSING
3519	J32106-30	RETAINER EQPT - SHOCK STRUT, MLG/NLG
3520	J32106-31	RETAINER EQPT - SHOCK STRUT, MLG/NLG
3521	J32108-16	DRAIN EQPT – OLEO STRUT, MLG/NLG
3522	J32091-5	TEST EQPT – VELOCITY/POSITION TRANSD
3523	J34002-18	TEST FIXTURE - ANGLE OF ATTACK
3524	J34002-19	TEST FIXTURE - ANGLE OF ATTACK
3525	J36020-1	REMOVAL/INSTALLATION EQUIPMENT - PRECOOLER, GE90 ENGINES
3526	J38001-16	PRESSURIZATION EQUIPMENT - WASTE DRAIN SYSTEM
3527	J38001-20	PRESSURIZATION EQUIPMENT - WASTE DRAIN SYSTEM
3528	J38004-247	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
3529	J38004-232	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM
3530	J47548	PROTECTOR
3531	J47548-1	AXLE THREAD PROTECTOR NLG
3532	J47548-2	AXLE THREAD PROTECTOR NLG
3533	J47549	ADAPTOR NLG
3534	J47555	EXTRACTOR
3535	J47556	EXTRACTOR
3536	J47557	GUIDE CONE
3537	J47558	EXTRACTOR
3538	J47563	EXTRACTOR
3539	J47564	ADAPTOR

3540	J47779	CONE-PROTECTIVE
3541	J47999	GUIDE CONE
3542	J49001-9	BALLAST - FISHPOLE INSTALLATION, APU GENERATOR REMOVED
3543	J49002-27	FWD SLING BRACKET
3544	J49002-29	SLING ASSY - APU
3545	J49003-43	HOIST EQUIPMENT - APU, INSTALLATION/REMOVAL
3546	J49003-47	HOIST EQUIPMENT - APU, INSTALLATION/REMOVAL
3547	J49006-67	CRADLE - APU
3548	J49006-88	QUICK RELEASE 1/2-INCH PIN - NAS1334C5C25D
3549	J49006-90	QUICK RELEASE 1/4-INCH PIN -NAS1334C5C2OD
3550	J49007-29	DOLLY-APU TRANSPORTATION 777
3551	J51001-1	BARRIER - 48 SECTION, SERVICE ACCESS DOOR
3552	J51001-2	BARRIER - 48 SECTION, SERVICE ACCESS DOOR
3553	J51002-7	PLATFORM - SERVICE, FORWARD APU FIREWALL
3554	J51005-1	INSTALLATION/REMOVAL ADAPTER, FUSELAGE DRAIN VALVE
3555	J51005-7	INSTALLATION/REMOVAL ADAPTER, FUSELAGE DRAIN VALVE
3556	J52001-34	HOLD OPEN EQUIPMENT - PASSENGER ENTRY DOOR
3557	J52011-1	SAFETY BARRIER - CARGO DOORS
3558	J52011-2	SAFETY BARRIER - CARGO DOORS
3559	J52014-1	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
3560	J52041-1	GAGE - GO/NO-GO, FORWARD CARGO DOOR RIGGING ADJUSTMENT TOOL
3561	J52032-39	SLING - MAIN DECK CARGO DOOR
3562	J53001-1	LADDER EQUIPMENT - EMPENNAGE ACCESS, VERTICAL FIN
3563	J53001-3	LADDER EQUIPMENT - EMPENNAGE ACCESS, VERTICAL FIN
3564	J53001-49	LADDER EQUIPMENT - EMPENNAGE ACCESS, VERTICAL FIN
3565	J53002-1	ACCESS LADDER - HORIZONTAL STABILIZER
3566	J53003-1	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3567	J53003-199	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3568	J53003-200	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3569	J53003-201	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3570	J53003-202	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3571	J53003-235	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3572	J53003-236	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS
3573	J53004-1	WRENCH SET - TORQUE ADJUSTMENT, RADOME LATCH
3574	J54001-73	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3575	J54001-74	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3576	J54001-75	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3577	J54001-76	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3578	J54001-92	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3579	J54001-93	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3580	J54001-94	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT
3581	J54007-41	REMOVAL/INSTALLATION KIT - FUSE PIN
3582	J54007-42	REMOVAL/INSTALLATION KIT - FUSE PIN
3583	J54007-43	REMOVAL/INSTALLATION KIT - FUSE PIN
3584	J54007-52	REMOVAL/INSTALLATION KIT - FUSE PIN
3585	J54007-53	REMOVAL/INSTALLATION KIT - FUSE PIN
3586	J54007-54	REMOVAL/INSTALLATION KIT - FUSE PIN
3587	J54007-56	REMOVAL/INSTALLATION KIT - FUSE PIN
3588	J54007-84	REMOVAL/INSTALLATION KIT - FUSE PIN
3589	J55002-1	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3590	J55002-36	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3591	J55002-37	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3592	J55002-53	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3593	J55002-59	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3594	J55003-1	REMOVAL/INSTALLATION EQUIPMENT - HINGE PIN, HORIZONTAL STABILIZER
3595	J55003-9	REMOVAL/INSTALLATION EQUIPMENT - HINGE PIN, HORIZONTAL STABILIZER
3596	J55004-35	JACKING EQUIPMENT - HORIZONTAL STABILIZER
3597	J55004-86	JACKING EQUIPMENT - HORIZONTAL STABILIZER
3598	J55006-5	CARRIAGE ASSY RH
3599	J55006-6	CARRIAGE ASSY LH
3600	J55006-16	DRIVE ADAPTER
3601	J55006-114	TORQUE EQUIPMENT - VERTICAL FIN BOLTS

3602	J55006-115	TORQUE BEAM ASSY LH
3603	J55006-116	TORQUE BEAM ASSY RH
3604	J56001-1	PROTECTIVE COVER – MAINTENANCE ACCESS TERMINAL
3605	J57003-1	SLING EQUIPMENT - RAKED WING TIP INSTALLATION AND REMOVAL
3606	J57003-16	SLING EQUIPMENT - RAKED WING TIP INSTALLATION AND REMOVAL
3607	J57009-1	SLING EQPT - FOLDING WING TIP, R/I
3608	J57018-1	FREEPLAY CHECK EQUIPMENT - FOLDING WING TIP
3609	J57021-1	RIGGING EQUIPMENT - FOLDING WING TIP
3610	J71001-12	COLLAR
3611	J71001-62	HOIST PIN
3612	J71001-63	SLING EQUIPMENT - INLET COWL
3613	J71001-66	SLING EQUIPMENT - INLET COWL
3614	J71001-86	SPRING PIN
3615	J71001-94	SLING EQUIPMENT - INLET COWL
3616	J71002-74	TORQUE EQUIPMENT - ENGINE MOUNT BOLT GE90
3617	J71002-75	TORQUE EQUIPMENT - ENGINE MOUNT BOLT GE90
3618	J71002-95	TORQUE EQUIPMENT - ENGINE MOUNT BOLT GE90
3619	J71004-9	SLING - FAN COWL
3620	J71009-68	BOOTSTRAP EQUIPMENT - TRENT 800 ENGINE
3621	J71009-69	BOOTSTRAP EQUIPMENT - TRENT 800 ENGINE
3622	J71009-86	BOOTSTRAP EQUIPMENT - TRENT 800 ENGINE
3623	J71019-1	STABILIZATION EQPMT - ENGINE MOUNTS
3624	J71019-2	STABILIZATION EQPMT - ENGINE MOUNTS
3625	J71033-109	HOLD OPEN EQUIPMENT - FAN COWL, TRENT 800
3626	J71037-1	ADAPTER ASSEMBLY - STABILIZATION, ROLLS ROYCE AFT ENGINE MOUNT
3627	J71038-1	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3628	J71038-2	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3629	J71038-3	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3630	J71038-70	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3631	J71039-155	INLET, ENGINE RUNUP SAFETY
3632	J71043-102	AFT HOIST
3633	J71043-129	BOOTSTRAP EQUIPMENT - GE90 ENGINE
3634	J71043-130	BOOTSTRAP EQUIPMENT - GE90 ENGINE
3635	J71043-131	BOOTSTRAP EQUIPMENT - GE90 ENGINE
3636	J71043-135	STORAGE BOX
3637	J71072-1	PROTECTORS - HINGE LUG FAN COWL
3638	J71072-2	PROTECTORS - HINGE LUG FAN COWL
3639	J71072-3	PROTECTORS - HINGE LUG FAN COWL
3640	J71072-4	PROTECTORS - HINGE LUG FAN COWL
3641	J71072-5	PROTECTORS - HINGE LUG FAN COWL
3642	J78002-186	SLING EQPT. - PW FAN THRUST REVERSER
3643	J78003-27	HOLD OPEN EQPT – GE90 FAN REVERSER
3644	J78004-75	SLING EQUIPMENT - GE90 FAN THRUST REVERSER
3645	J78004-76	SLING EQUIPMENT - GE90 FAN THRUST REVERSER
3646	J78004-89	SLING EQUIPMENT - GE90 FAN THRUST REVERSER
3647	J78004-90	SLING EQUIPMENT - GE90 FAN THRUST REVERSER
3648	J78004-123	SLING EQUIPMENT - GE90 FAN THRUST REVERSER
3649	J78006-11	HOLD OPEN EQUIPMENT - THRUST REVERSER, ROLLS ROYCE TRENT 800
3650	J78007-58	REMOVAL/INSTALLATION EQUIPMENT - EXHAUST SLEEVE AND PLUG
3651	J78007-85	REMOVAL/INSTALLATION EQUIPMENT - EXHAUST SLEEVE AND PLUG
3652	J78007-104	REMOVAL/INSTALLATION EQUIPMENT - EXHAUST SLEEVE AND PLUG
3653	J78015-1	SLING EQUIPMENT - REMOVAL/INSTALLATION, GE90 FAN REVERSER SLEEVE
3654	J78015-77	SLING EQUIPMENT - REMOVAL/INSTALLATION, GE90 FAN REVERSER SLEEVE
3655	J78015-96	SLING EQUIPMENT - REMOVAL/INSTALLATION, GE90 FAN REVERSER SLEEVE
3656	J78015-97	SLING EQUIPMENT - REMOVAL/INSTALLATION, GE90 FAN REVERSER SLEEVE
3657	J78017-59	SLING EQUIPMENT - ROLLS ROYCE FAN THRUST REVERSER
3658	J78031-146	STAND - TRANSPORTATION/WORK, GE90 THRUST REVERSER
3659	K-3706	HIGH PRESSURE NITROGEN VALVE ADAPTOR
3660	K07005-1	JACK FITTING EQUIPMENT - OUTER WING
3661	K10001-26	PROTECTIVE COVER - WHEEL/TIRE/BRAKE, MLG & NLG
3662	K10004-1	PLUG SET - EXHAUST VENT, THERMAL ANTI-ICING
3663	K10004-24	PLUG SET - EXHAUST VENT, THERMAL ANTI-ICING

3664	K10004-39	PLUG SET - EXHAUST VENT, THERMAL ANTI-ICING
3665	K10013-15	PROTECTIVE PLUG EQUIPMENT - THRUST REVERSER EXHAUST DUCT, RR TRENT 1000
3666	K10014-1	PLUG - CABIN AIR COM
3667	K10014-2	PLUG - CABIN AIR COM
3668	K10014-3	PLUG - CABIN AIR COM
3669	K12003-1	FILL TOOL - HYDRAULIC STRUT, SEMI LEVER GEAR STANDARD PRACTICES - AIRFRAME
3670	K12004-1	DRAIN TOOL - HYDRAULIC STRUT, SEMI LEVER GEAR
3671	K20001-64	FORWARD ELECTRONIC/EQUIPMENT (E/E) BAY LINE REPLACEABLE UNITS
3672	K20004-46	PERSONNEL EQUIPMENT - SHOCK ABSORBING LANYARD, HORIZONTAL STABILIZER
3673	K20004-60	PERSONNEL EQUIPMENT - SHOCK ABSORBING LANYARD, HORIZONTAL STABILIZER
3674	K20004-70	PERSONNEL EQUIPMENT - SHOCK ABSORBING LANYARD, HORIZONTAL STABILIZER
3675	K20008-55	HOIST - AFT ELECTRICAL/ELECTRONIC BAY LINE REPLACEABLE UNITS
3676	K20009-1	PIN SET - RIGGING
3677	K20009-3	PIN SET - RIGGING
3678	K20009-14	PIN SET - RIGGING
3679	K20010-1	HOIST EQUIPMENT - P100 AND P200 POWER PANEL REMOVAL/ INSTALLATION
3680	K20015-1	HOIST - BOOM, GENERAL, 1000 LB MAX CAPACITY
3681	K20015-2	HOIST - BOOM, GENERAL, 1000 LB MAX CAPACITY
3682	K20015-3	HOIST - BOOM, GENERAL, 1000 LB MAX CAPACITY
3683	K21001-1	INSTALL/REMOVE/TRANSPORT CART - SUPPLEMENTAL COOLING UNIT
3684	K21001-76	INSTALL/REMOVE/TRANSPORT CART - SUPPLEMENTAL COOLING UNIT
3685	K21001-79	INSTALL/REMOVE/TRANSPORT CART - SUPPLEMENTAL COOLING UNIT
3686	K21002-62	TRANSPORT EQUIPMENT - CARGO REFRIGERATION UNIT REMOVAL AND INSTALLATION
3687	K21003-1	INSTALLATION/REMOVAL EQUIPMENT - POWER ELECTRONICS COOLING SYSTEM (PECS) COOLING PUMP
3688	K21003-67	INSTALLATION/REMOVAL EQUIPMENT - POWER ELECTRONICS COOLING SYSTEM (PECS) COOLING PUMP
3689	K21004-72	ADAPTER EQUIPMENT - HEAT EXCHANGER CLUSTER, REMOVAL AND INSTALLATION
3690	K21004-84	ADAPTER EQUIPMENT - HEAT EXCHANGER CLUSTER, REMOVAL AND INSTALLATION
3691	K21004-85	ADAPTER EQUIPMENT - HEAT EXCHANGER CLUSTER, REMOVAL AND INSTALLATION
3692	K21006-46	JACK ADAPTER - AIR COMPRESSOR, AIR CONDITIONING PACK
3693	K21006-53	JACK ADAPTER - AIR COMPRESSOR, AIR CONDITIONING PACK
3694	K21011-62	ADAPTER EQUIPMENT - ADJUSTABLE ANGLE, JACK
3695	K21016-111	KIT, ADAPTER - LIQUID COOLING SYSTEM SERVICE
3696	K21016-129	KIT, ADAPTER - LIQUID COOLING SYSTEM SERVICE
3697	K21016-130	KIT, ADAPTER - LIQUID COOLING SYSTEM SERVICE
3698	K21016-136	KIT, ADAPTER - LIQUID COOLING SYSTEM SERVICE
3699	K21016-155	KIT, ADAPTER - LIQUID COOLING SYSTEM SERVICE
3700	K21018-1	DISPATCH EQUIPMENT - BYPASS ASSEMBLY, GALLEY COOLING UNIT AND SUPPLEMENTAL COOLING UNIT
3701	K21019-1	SLING - R/I, UPPER RECIRCULATION FAN
3702	K21029-1	ADAPTER - JACK, SECONDARY HEAT EXCHANGER
3703	K21029-19	ADAPTER - JACK, SECONDARY HEAT EXCHANGER
3704	K24001-1	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3705	K24001-2	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3706	K24001-3	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3707	K24001-4	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3708	K24001-114	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3709	K24001-118	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3710	K24001-119	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3711	K24001-120	HOIST ADAPTER ASSEMBLY - VARIABLE FREQUENCY STARTER GENERATOR (VFSG) (GE AND RR) AND APU STARTER
3712	K24005-94	VARIABLE FREQUENCY STARTER GENERATOR HOIST – ROLLS ROYCE ENGINE ALL PURPOSE STAND
3713	K24012-1	DISPATCH KIT - APU STARTER GENERATOR
3714	K25002-139	LIFTING EQUIPMENT - OVERHEAD FLIGHT ATTENDANT REST (OFAR)/OVERHEAD FLIGHT CREW REST (OFCR) MODUL
3715	K25003-1	LIFTING EQUIPMENT - UPPER VESTIBULE MODULE REMOVAL/INSTALLATION
3716	K25003-209	LIFTING EQUIPMENT - UPPER VESTIBULE MODULE REMOVAL/INSTALLATION
3717	K25005-1	DOLLY EQUIPMENT - OVERHEAD FLIGHT ATTENDANT REST (OFAR)/OVERHEAD FLIGHT CREW REST (OFCR) MODUL
3718	K25005-125	DOLLY EQUIPMENT - OVERHEAD FLIGHT ATTENDANT REST (OFAR)/OVERHEAD FLIGHT CREW REST (OFCR) MODUL
3719	K25007-1	CART - PASSENGER SEAT
3720	K25007-49	CART - PASSENGER SEAT
3721	K26003-35	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3722	K26003-36	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3723	K26003-37	7/8-INCH PLUG ASSEMBLY
3724	K26003-61	1/2-INCH PLUG ASSEMBLY
3725	K26003-64	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM

3726	K26003-65	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3727	K26003-77	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3728	K26003-78	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3729	K26003-83	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHING SYSTEM
3730	K27001-100	REMOVAL/INSTALLATION EQUIPMENT-LE/TE PDU
3731	K27001-126	REMOVAL/INSTALLATION EQUIPMENT-LE/TE PDU
3732	K27002-83	ADAPTER EQUIPMENT - TRAILING EDGE GEARED ROTARY ACTUATOR, REMOVAL/INSTALLATION
3733	K27002-85	ADAPTER EQUIPMENT - TRAILING EDGE GEARED ROTARY ACTUATOR, REMOVAL/INSTALLATION
3734	K27004-156	HOIST EQUIPMENT - REMOVALAND INSTALLATION, RUDDER POWER CONTROL UNIT
3735	K27004-157	HOIST EQUIPMENT - REMOVALAND INSTALLATION, RUDDER POWER CONTROL UNIT
3736	K27004-158	HOIST EQUIPMENT - REMOVALAND INSTALLATION, RUDDER POWER CONTROL UNIT
3737	K27007-1	DRIVE ADAPTER EQUIPMENT - ACTUATOR, HORIZONTAL STABILIZER TRIM
3738	K27008-67	SLING EQUIPMENT - REMOVAL/INSTALLATION, AILERON
3739	K27010-99	REMOVE/INSTALL EQUIPMENT - HIGH LIFT HYDRAULIC CONTROL UNIT
3740	K27010-104	REMOVE/INSTALL EQUIPMENT - HIGH LIFT HYDRAULIC CONTROL UNIT
3741	K27011-32	DISPATCH EQUIPMENT - HYDRAULIC SPOILER ACTUATORS
3742	K27011-33	DISPATCH EQUIPMENT - HYDRAULIC SPOILER ACTUATORS
3743	K27011-47	DISPATCH EQUIPMENT - HYDRAULIC SPOILER ACTUATORS
3744	K27017-22	LOCK EQUIPMENT - SPOILER HYDRAULIC ACTUATORS
3745	K27017-36	LOCK EQUIPMENT - SPOILER HYDRAULIC ACTUATORS
3746	K27017-46	LOCK EQUIPMENT - SPOILER HYDRAULIC ACTUATORS
3747	K27019-82	LOCK EQUIPMENT - TRAILING EDGE FLAP
3748	K27019-83	LOCK EQUIPMENT - TRAILING EDGE FLAP
3749	K27019-84	LOCK EQUIPMENT - TRAILING EDGE FLAP
3750	K27019-85	LOCK EQUIPMENT - TRAILING EDGE FLAP
3751	K27019-100	LOCK EQUIPMENT - TRAILING EDGE FLAP
3752	K27021-1	REMOVAL/INSTALLATION EQUIPMENT – HORIZONTAL STABILIZER TRIM ACTUATOR
3753	K27023-42	SLING EQUIPMENT - ELEVATOR REMOVAL/INSTALLATION
3754	K27023-64	SLING EQUIPMENT - ELEVATOR REMOVAL/INSTALLATION
3755	K27024-25	SLING EQUIPMENT - INBOARD TRAILING EDGE FLAP, REMOVAL AND INSTALLATION
3756	K27024-30	SLING EQUIPMENT - INBOARD TRAILING EDGE FLAP, REMOVAL AND INSTALLATION
3757	K27024-59	SLING EQUIPMENT - INBOARD TRAILING EDGE FLAP, REMOVAL AND INSTALLATION
3758	K27027-211	SLING EQUIPMENT - REMOVAL/INSTALLATION, INBOARD AND OUTBOARD SLATS
3759	K27027-214	SLING EQUIPMENT - REMOVAL/INSTALLATION, INBOARD AND OUTBOARD SLATS
3760	K27037-76	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3761	K27037-77	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3762	K27037-78	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3763	K27037-84	RIGGING EQUIPMENT - LEADING EDGE SLAT INSTALLATION
3764	K27038-1	LOCK - RUDDER POWER CONTROL UNIT
3765	K27038-36	LOCK - RUDDER POWER CONTROL UNIT
3766	K27039-15	RIGGING EQUIPMENT - TRAILING EDGE FLAPS
3767	K27039-16	RIGGING EQUIPMENT - TRAILING EDGE FLAPS
3768	K27040-1	CLAMP EQUIPMENT - DRIVE SHAFTS, LEADING EDGE SLATS AND TRAILING EDGE FLAPS
3769	K27041-69	DOLLY - HORIZONTAL STABILIZER TRIM ACTUATOR
3770	K27047-1	REMOVAL/INSTALLATION EQUIPMENT – SPOILERS AND FLAPERON HINGE PANELS
3771	K27051-1	MEASURING TOOL - ELECTRIC MOTOR ACTUATOR POSITION, SPOILER
3772	K27051-10	MEASURING TOOL - ELECTRIC MOTOR ACTUATOR POSITION, SPOILER
3773	K27055-1	RIGGING TOOL - RUDDER
3774	K27056-50	REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR POWER CONTROL UNIT
3775	K27056-176	REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR POWER CONTROL UNIT
3776	K27056-177	REMOVAL/INSTALLATION EQUIPMENT - ELEVATOR POWER CONTROL UNIT
3777	K27057-1	WRENCH – ECCENTRIC BUSHING ADJUSTMENT, LEADING EDGE SLAT
3778	K27057-10	WRENCH – ECCENTRIC BUSHING ADJUSTMENT, LEADING EDGE SLAT
3779	K27058-1	RIGGING TOOL - SLAT SKEW DETECTION CABLE
3780	K27059-1	DISPATCH EQUIPMENT - SPOILER ELECTRO MECHANICAL ACTUATOR
3781	K27059-18	DISPATCH EQUIPMENT - SPOILER ELECTRO MECHANICAL ACTUATOR
3782	K27061-1	LOCK-OUT EQUIPMENT – SPOILER ELECTRO MECHANICAL ACTUATOR
3783	K27062-1	RIGGING TOOL - DROOP PANEL TO INBD FLAP FILLET FAIRING
3784	K27068-1	MEASURING TOOL - SKEW SENSOR ANGULAR
3785	K27068-2	MEASURING TOOL - SKEW SENSOR ANGULAR
3786	K27068-3	MEASURING TOOL - SKEW SENSOR ANGULAR
3787	K27068-4	MEASURING TOOL - SKEW SENSOR ANGULAR

3788	K27068-5	MEASURING TOOL - SKEW SENSOR ANGULAR
3789	K27068-6	MEASURING TOOL - SKEW SENSOR ANGULAR
3790	K27068-9	MEASURING TOOL - SKEW SENSOR ANGULAR
3791	K27068-10	MEASURING TOOL - SKEW SENSOR ANGULAR
3792	K27068-12	MEASURING TOOL - SKEW SENSOR ANGULAR
3793	K27069-1	ADAPTER-TORQUE WRENCH NO BACK BRAKE
3794	K27071-1	TEST EQUIPMENT - HALF SYSTEM TORQUE BRAKE (HSTB), PDU, LEADING EDGE
3795	K28005-1	TEST EQUIPMENT - SURGE TANK PRESSURE RELIEF VALVE
3796	K28007-1	REMOVAL AND INSTALLATION TOOL-FUEL BOOST PUMP EXTERNAL POWER CONTROL UNIT
3797	K29003-1	ADAPTER ASSEMBLY - ENGINE DRIVEN PUMP BLEED ADAPTER
3798	K29004-1	ADAPTER - RESERVOIR STANDPIPE OPERATIONAL TEST
3799	K29004-17	ADAPTER - RESERVOIR STANDPIPE OPERATIONAL TEST
3800	K32001-1	SLING EQUIPMENT - RETRACT ACTUATOR, MAIN LANDING GEAR
3801	K32002-1	PROTECTOR EQT AXLE AND THREAD
3802	K32002-2	AXLE PROTECTOR ASSY
3803	K32002-3	THREAD PROTECTOR
3804	K32003-1	SPRING REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR UPLOCK AND MAIN LANDING GEAR DOOR
3805	K32007-1	SPRING REMOVAL/INSTALLATION EQUIPMENT – DRAG BRACE, MAIN LANDING GEAR
3806	K32010-1	DOLLY - TRANSPORTATION, NOSE LANDING GEAR
3807	K32011-90	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
3808	K32011-91	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR
3809	K32012-1	HOIST EQUIPMENT - REMOVAL/INSTALLATION, NOSE LANDING GEAR
3810	K32012-77	HOIST EQUIPMENT - REMOVAL/INSTALLATION, NOSE LANDING GEAR
3811	K32012-98	HOIST EQUIPMENT - REMOVAL/INSTALLATION, NOSE LANDING GEAR
3812	K32013-1	REMOVAL / INSTALLATION EQUIPMENT – RETRACT ACTUATOR, NOSE LANDING GEAR
3813	K32016-1	TURNBUCKLE - TRUCK POSITION ACTUATOR, MAIN LANDING GEAR
3814	K32016-20	TURNBUCKLE - TRUCK POSITION ACTUATOR, MAIN LANDING GEAR
3815	K32019-91	SLING EQPT- DRAG & SIDE BRACE RMVL/INSTL, MLG
3816	K32020-1	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3817	K32020-2	BRACE ASSEMBLY
3818	K32020-4	HAND KNOB ASSEMBLY
3819	K32020-5	CHAIN ASSY RETAINER EQUIPMENT
3820	K32020-9	FAR SIDE PLUG
3821	K32020-29	RETAINER EQUIPMENT - MAIN LANDING GEAR/NOSE LANDING GEAR TORSION LINK
3822	K32021-1	DISPATCH EQUIPMENT - BRAKE/ELECTRIC BRAKE ACTUATOR (EBA) CONNECTOR COVERS
3823	K32022-1	WRENCH - NLG WHEEL RETENTION NUT
3824	K32022-2	WRENCH
3825	K32034-1	TORQUE ADAPTER - ELECTRICAL BRAKE ACTUATOR CONNECTOR, MAIN LANDING GEAR
3826	K32035-1	REMOVAL AND INSTALLATION EQUIPMENT - MAIN LANDING GEAR BOGIE PIVOT PIN
3827	K32035-2	HUB ASSY
3828	K32035-3	CROWFOOT WRENCH
3829	K32035-4	DRIFT PIN REMOVAL/INSTALLATION EQUIPMENT
3830	K32035-11	REMOVAL AND INSTALLATION EQUIPMENT - MAIN LANDING GEAR BOGIE PIVOT PIN
3831	K32036-1	DISPATCH EQUIPMENT - AXLE REMOTE DATA CONCENTRATOR (RDC) CONNECTOR COVERS
3832	K32036-2	DISPATCH EQUIPMENT - AXLE REMOTE DATA CONCENTRATOR (RDC) CONNECTOR COVERS
3833	K32036-3	DISPATCH EQUIPMENT - AXLE REMOTE DATA CONCENTRATOR (RDC) CONNECTOR COVERS
3834	K32036-21	DISPATCH EQUIPMENT - AXLE REMOTE DATA CONCENTRATOR (RDC) CONNECTOR COVERS
3835	K32036-36	DISPATCH EQUIPMENT - AXLE REMOTE DATA CONCENTRATOR (RDC) CONNECTOR COVERS
3836	K32037-1	PROTECTOR EQPT-AXLE, MLG
3837	K32037-2	AXLE PROTECTOR ASSY
3838	K32037-4	THREAD PROTECTOR
3839	K32040-1	SLING EQUIPMENT - DRAG AND SIDE BRACE REMOVAL/INSTALLATION, MAIN LANDING GEAR
3840	K32040-73	SLING EQUIPMENT - DRAG AND SIDE BRACE REMOVAL/INSTALLATION, MAIN LANDING GEAR
3841	K32040-81	SLING EQUIPMENT - DRAG AND SIDE BRACE REMOVAL/INSTALLATION, MAIN LANDING GEAR
3842	K32040-89	SLING EQUIPMENT - DRAG AND SIDE BRACE REMOVAL/INSTALLATION, MAIN LANDING GEAR
3843	K32042-1	PULLER EQUIPMENT - WHEEL SLEEVE, MAIN LANDING GEAR AXLE
3844	K32042-2	5.6-INCH INSIDE DIAMETER SLEEVE ASSEMBLY
3845	K32042-3	5.7-INCH INSIDE DIAMETER SLEEVE ASSEMBLY
3846	K32042-4	TUBE ASSEMBLY
3847	K32042-7	PIN REMOVER ASSEMBLY
3848	K32042-10	COUPLING NUT
3849	K32042-11	PAD

3850	K32042-12	SLEEVE NUT
3851	K32046-1	SLING EQUIPMENT - SEMI-LEVER GEAR (SLG) ACTUATOR
3852	K32048-1	PLATFORM - MAIN LANDING GEAR (MLG) WORK
3853	K38001-1	REMOVAL/INSTALLATION EQUIPMENT - VACUUM WASTE TANKS
3854	K47001-1	REMOVAL/INSTALLATION EQUIPMENT - NITROGEN GENERATION SYSTEM (NGS) AIR SEPARATION MODULE
3855	K47001-116	REMOVAL/INSTALLATION EQUIPMENT - NITROGEN GENERATION SYSTEM (NGS) AIR SEPARATION MODULE
3856	K47002-35	LEAK CHECK EQUIPMENT
3857	K47003-1	EQUIPMENT - NITROGEN GENERATION SYSTEM MOTOR DRIVEN COMPRESSOR, REMOVAL AND INSTALLATION
3858	K51002-1	PLATFORM - SERVICE, FORWARD APU FIREWALL
3859	K52001-1	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
3860	K52001-29	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR
3861	K52002-2	BARRIER - PASSENGER ENTRY DOORS
3862	K52002-66	BARRIER - PASSENGER ENTRY DOORS
3863	K52002-67	BARRIER - PASSENGER ENTRY DOORS
3864	K52002-68	BARRIER - PASSENGER ENTRY DOORS
3865	K52002-133	BARRIER - PASSENGER ENTRY DOORS
3866	K52005-85	HOLD OPEN EQUIPMENT - PASSENGER ENTRY DOOR
3867	K52005-99	HOLD OPEN EQUIPMENT - PASSENGER ENTRY DOOR
3868	K52005-100	HOLD OPEN EQUIPMENT - PASSENGER ENTRY DOOR
3869	K52008-175	REMOVAL / INSTALLATION EQUIPMENT - MAIN LANDING GEAR DOOR
3870	K52008-176	REMOVAL / INSTALLATION EQUIPMENT - MAIN LANDING GEAR DOOR
3871	K52008-233	REMOVAL / INSTALLATION EQUIPMENT - MAIN LANDING GEAR DOOR
3872	K52008-241	REMOVAL / INSTALLATION EQUIPMENT - MAIN LANDING GEAR DOOR
3873	K52009-1	BARRIER - BULK CARGO DOOR
3874	K52012-1	TEST EQUIPMENT - LATCH ASSEMBLY, BLOWOUT DOORS
3875	K52014-42	TOOL KIT - CARGO DOOR RIGGING ADJUSTMENT
3876	K52017-1	BARRIER - SECTION 48, SERVICE ACCESS DOOR
3877	K52024-69	SLING EQUIPMENT - PASSENGER DOOR, REMOVAL/INSTALLATION
3878	K52026-1	WRENCH – HOOK PULL-IN MECHANISM – FORWARD AND AFT CARGO DOOR
3879	K52033-83	PAX DOOR VENT FLAP SEAL TOOL
3880	K53002-38	REMOVAL/INSTALLATION EQUIPMENT - RADOME
3881	K53002-51	REMOVAL/INSTALLATION EQUIPMENT - RADOME
3882	K53014-1	INSTALLATION TOOL, DECOMPRESSION PANEL - BILGE BARRIER
3883	K54001-1	REMOVAL/INSTALLATION EQUIPMENT - AFT STRUT FAIRING
3884	K54001-100	REMOVAL/INSTALLATION EQUIPMENT - AFT STRUT FAIRING
3885	K54001-111	REMOVAL/INSTALLATION EQUIPMENT - AFT STRUT FAIRING
3886	K54004-43	SLING EQUIPMENT – REMOVAL/INSTALLATION, ENGINE PYLON
3887	K54005-1	REMOVAL/INSTALLATION KIT - FUSE PIN
3888	K54005-38	REMOVAL/INSTALLATION KIT - FUSE PIN
3889	K54005-48	REMOVAL/INSTALLATION KIT - FUSE PIN
3890	K54005-50	REMOVAL/INSTALLATION KIT - FUSE PIN
3891	K54005-51	REMOVAL/INSTALLATION KIT - FUSE PIN
3892	K54007-1	SLING EQPT. - STRUT UNLOAD, GE ENGINE
3893	K55002-45	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3894	K55002-46	LOCK ASSEMBLY - HORIZONTAL STABILIZER
3895	K55006-73	REACTION FIXTURE EQUIPMENT - TORQUE TOOL
3896	K55006-74	REACTION FIXTURE EQUIPMENT - TORQUE TOOL
3897	K55006-75	REACTION FIXTURE EQUIPMENT - TORQUE TOOL
3898	K55006-125	REACTION FIXTURE EQUIPMENT - TORQUE TOOL
3899	K55008-150	MAINTENANCE PLATFORM - VERTICAL FIN, TENSION BOLTS
3900	K55008-151	MAINTENANCE PLATFORM - VERTICAL FIN, TENSION BOLTS
3901	K55008-152	MAINTENANCE PLATFORM - VERTICAL FIN, TENSION BOLTS
3902	K55011-1	LATCH RELEASE TOOL - SERVICE ACCESS DOOR
3903	K55011-7	LATCH RELEASE TOOL - SERVICE ACCESS DOOR
3904	K56001-38	SLING SET - NUMBER 1 AND 2 CONTROL CABIN WINDOWS
3905	K56002-1	PROTRACTOR - WINDOW CLIP CHECK, PASSENGER WINDOWS
3906	K71001-141	TORQUE MULTIPLIER
3907	K71001-151	ENGINE CHANGE KIT - GE
3908	K71001-164	ENGINE CHANGE KIT - GE
3909	K71002-116	ENGINE CHANGE KIT - ROLLS-ROYCE
3910	K71002-141	ENGINE CHANGE KIT - ROLLS-ROYCE
3911	K71002-147	ENGINE CHANGE KIT - ROLLS-ROYCE

3912	K71002-148	ENGINE CHANGE KIT - ROLLS-ROYCE
3913	K71003-65	PROOF LOAD FIXTURE ADAPTER - BOOTSTRAP EQUIPMENT
3914	K71003-79	PROOF LOAD FIXTURE ADAPTER - BOOTSTRAP EQUIPMENT
3915	K71003-86	PROOF LOAD FIXTURE ADAPTER - BOOTSTRAP EQUIPMENT
3916	K71003-87	PROOF LOAD FIXTURE ADAPTER - BOOTSTRAP EQUIPMENT
3917	K71004-34	TRANSPORTATION EQUIPMENT - ENGINE MOUNT STABILIZATION
3918	K71006-20	HOIST EQUIPMENT - ENGINE MOUNTS AND THRUST LINKS
3919	K71006-25	SHORT WIRE ROPE ASSY
3920	K71008-37	SLING EQUIPMENT – FAN COWL SUPPORT BEAM, GE GENX
3921	K71009-41	SLING - FAN COWL
3922	K71009-47	SLING - FAN COWL
3923	K71009-49	SLING - FAN COWL
3924	K71010-87	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3925	K71010-88	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3926	K71010-89	STAND ASSEMBLY - STORAGE, INLET ASSEMBLY
3927	K71012-1	ADAPTER - HAND PUMP, POWER DOOR OPENING SYSTEM
3928	K71013-1	BLANKING EQPT - INHIBIT, FUEL
3929	K78001-49	THRUST REVERSER CHANGE KIT - GE GENX
3930	K78002-70	SLING EQUIPMENT - THRUST REVERSER SLEEVE, GENX
3931	K78003-65	THREAD PROTECTOR
3932	K78003-100	THRUST REVERSER CHANGE KIT - ROLLS ROYCE TRENT 1000
3933	K78004-1	EQUIPMENT - THRUST REVERSER SLEEVE SLING, TRENT 1000 ENGINE
3934	K78004-104	EQUIPMENT - THRUST REVERSER SLEEVE SLING, TRENT 1000 ENGINE
3935	K78005-22	HOLD OPEN EQUIPMENT - HANGAR MAINTENANCE, ROLLS ROYCE THRUST REVERSER
3936	K78006-1	LOCK - THRUST REVERSER ISOLATION VALVE (GROUND)
3937	K78008-1	STAND - TRANSPORTATION/WORK GENERAL ELECTRIC GENX THRUST REVERSER
3938	K78009-1	HOLD OPEN EQUIPMENT - HANGAR MAINTENANCE, GE THRUST REVERSER
3939	K78010-72	TRANSPORTATION/WORK STAND - THRUST REVERSER, ROLLS-ROYCE TRENT 1000
3940	K78011-1	HOLD OPEN EQUIPMENT - TRENT 1000 THRUST REVERSER
3941	K78011-59	HOLD OPEN EQUIPMENT - TRENT 1000 THRUST REVERSER
3942	K78012-63	HOLD OPEN EQUIPMENT - GENX-1B THRUST REVERSER
3943	K78012-85	HOLD OPEN EQUIPMENT - GENX-1B THRUST REVERSER
3944	K78013-1	PAD - PROTECTIVE, ANTI-EROSION ANGLE
3945	K78013-21	PAD - PROTECTIVE, ANTI-EROSION ANGLE
3946	K78013-39	PAD - PROTECTIVE, ANTI-EROSION ANGLE
3947	K78013-40	PAD - PROTECTIVE, ANTI-EROSION ANGLE
3948	K78013-41	PAD - PROTECTIVE, ANTI-EROSION ANGLE
3949	LLA789A004	SEAL EXTRACTION TOOL
3950	M21929	STRESSING FIXTURE
3951	M21930	FILLING ASSEMBLY
3952	M21931	HOISTING DEVICE
3953	M46200	JAWS - FALSE
3954	M46201	WRENCH PIN
3955	98D27309008000 ALT	WRENCH PIN
3956	M46214	ADJUSTMENT TOOL
3957	M46214-1000	ADJUSTMENT TOOL
3958	M46236	EXTRACTOR
3959	M46292	ADAPTOR, BRAKE UNIT NUT
3960	M47157-100	ADAPTOR
3961	M47380-100	MLG CONE BRAKE GUIDE
3962	M47381	GUIDE CONE-MLG WHEEL
3963	M47382-100	GUIDE CONE
3964	ME140W9255	CRADLE
3965	ME65B50263-1	GAUGE ASSY
3966	ME65B50263-2	GAUGE ASSY
3967	ME65B50263-3	GAUGE ASSY
3968	ME65B50263-4	PRESSURE HOSE ASSY
3969	MCAR105001	ADJUSTMENT TOOL
3970	MG174-04	TOOL, DISASSEMBLY IMPELLER
3971	OS22406	ADJUSTING BROACH
3972	PWA102718	SUPPORT-SHIPING
3973	PWA86411	TUBE-GUIDE BORESCOPE,1ST NOZZLE GUIDE VANES

3974	PWS34278	PULLER
3975	Q47316	PROTECTOR-MLG AXLE
3976	Q47323-1	PROTECTOR, WHEEL AXLE
3977	R21852	SWAGING TOOL
3978	R21852-1000	SWAGING TOOL
3979	R21884000	SWAGING TOOL
3980	R46014	ADAPTOR
3981	R47879	LOCATING PIN
3982	RSE1112	SLING INLET COWL
3983	RSE1113	SLING FAN COWL
3984	RSE1224	SPLINT - ENGINE MOUNT
3985	RSE1234	VALVE DEACTIVATOR ASSEMBLY
3986	RSE3404	SLING INLET COWL
3987	S16-0609-0872	BULLET SEAL
3988	S47425	COLLAR LEFT
3989	S47426	COLLAR RIGHT
3990	S47427	AXE PIN
3991	SE27-0001	STRAIGHTEDGE - CONTROL WHEEL
3992	SL90-313-3750	WASHER MOUNTING TOOL
3993	SL90-313-5625	WASHER MOUNTING TOOL
3994	SL90-314-3750	TOOL-EXTRACTION, TAB WASHERS
3995	SL90-314-5625	TOOL-EXTRACTION, TAB WASHERS
3996	SL90-314-7500	TOOL-EXTRACTION, TAB WASHERS STA-LOK NSA5454
3997	SL90-315-7500	WRENCH, NOTCHED, TIGHTENING of NUTS NSA5454
3998	SL90-350-7500	TOOL - EXTRACTION, TAB WASHERS
3999	SPL-1817	NLG SOCKET
4000	ST921MA	SLEEVE REMOVAL TOOL
4001	ST991A-2-250	REMOVAL TOOL - SCRIVET FASTENER
4002	ST991A-2-312	REMOVAL TOOL - SCRIVET FASTENER
4003	ST991A-2-375	REMOVAL TOOL - SCRIVET FASTENER
4004	ST991A-2-438	REMOVAL TOOL - SCRIVET FASTENER
4005	ST991A-2-500	REMOVAL TOOL - SCRIVET FASTENER
4006	ST991A-2-563	REMOVAL TOOL - SCRIVET FASTENER
4007	ST991A-2-625	REMOVAL TOOL - SCRIVET FASTENER
4008	ST991A-2-750	REMOVAL TOOL - SCRIVET FASTENER
4009	ST991A-2-875	REMOVAL TOOL - SCRIVET FASTENER
4010	ST1066-1	INSTALLATION TOOL AIR SEAL, RUBBER ROLLER TOOL
4011	ST1066-2	INSTALLATION TOOL AIR SEAL, RUBBER CORNER RADIUS TOOL
4012	ST1066-3	INSTALLATION TOOL AIR SEAL, RUBBER EDGE TOOL
4013	ST1066-4	INSTALLATION TOOL AIR SEAL, RUBBER TRIMMER KNIFE
4014	ST1066-5	INSTALLATION TOOL AIR SEAL, RUBBER CORNER CABLE PLACER
4015	ST1066-6	INSTALLATION TOOL AIR SEAL, RUBBER CORNER CABLE PLACER
4016	ST1066-7	STANDARD TOOL - INSTALLATION TOOL DOOR BULB SEAL
4017	ST1066-8	INSTALLATION TOOL AIR SEAL, RUBBER CORNER CABLE PLACER
4018	ST1066-9	INSTALLATION TOOL AIR SEAL, RUBBER CORNER CABLE PLACER
4019	ST1066-10	INSTALLATION TOOL AIR SEAL, RUBBER SEALANT SPREADER
4020	ST1066-11	INSTALLATION TOOL AIR SEAL, RUBBER SEALANT REMOVER
4021	ST1066-12	INSTALLATION TOOL AIR SEAL, RUBBER OFFSET ROLLER TOOL
4022	ST1066-13	SEAL INSTALLATION TOOL
4023	ST1066-18	RUBBER SEAL TOOL
4024	ST1066-19	RUBBER SEAL TOOL
4025	ST1066-20	RUBBER SEAL TOOL
4026	ST1066-21	WINDOW GASKET ALIGNMENT TOOL
4027	ST1066-22	STANDARD TOOL SEAL RETAINER ADJUSTMENT TOOL
4028	ST1066-23	BULB SEAL INSTALLATION TOOL
4029	ST1066-24	STANDARD TOOL - ASSEMBLY AID, GAP COVER SEAL 737 HORIZ STAB
4030	ST1066-26	STANDARD TOOL - SEAL INSTALLATION TOOL
4031	ST1066-27	STANDARD TOOL - SEAL INSTALLATION TOOL
4032	ST1066RB	STANDARD TOOL - RELEASE KEY FOR PIVOT BIN SNUBBER, "BOEING SKY" INTERIOR
4033	ST2580-202	WRENCH – SOCKET, MAIN GEAR TRUNNION LINK
4034	ST2580-550A	TORQUE ADAPTER, RATCHETING
4035	ST2580-436B-1	BOX WRENCH

4036	ST2580-436B-10	TOOL - CONNECTOR SOCKET
4037	ST2580-436B-15	TOOL - CONNECTOR SOCKET
4038	ST2580-436B-16	TOOL - CONNECTOR SOCKET
4039	ST2580-436B-17	TOOL - CONNECTOR SOCKET
4040	ST2580-436B-18	TOOL - CONNECTOR SOCKET
4041	ST2580-436B-19	TOOL - CONNECTOR SOCKET
4042	ST2580-436B-20	TOOL - CONNECTOR SOCKET
4043	ST2580-436B-25	TOOL - CONNECTOR SOCKET
4044	ST2580-436B-27	TOOL - CONNECTOR SOCKET
4045	ST2580-436B-28	TOOL - CONNECTOR SOCKET
4046	ST8842	TAP TEST TOOL
4047	ST8842-1	TAPPER TEST TOOL
4048	ST8842-A	TAPPER TEST TOOL
4049	ST8842-B	TAPPER TEST TOOL
4050	ST8842-S	TAPPER TEST TOOL
4051	T-262775	PLUG PRESSURE TEST FILL FITING
4052	T71884	GAUGE-BAYONET SLOT WEAR
4053	T262775	PLUG PRESSURE TEST FILL FITING
4054	TB3043G002	BORESCOPE GUIDE TOOL
4055	U21829	STRESSING FIXTURE
4056	U21842000	EXTRACTOR
4057	U21891000	FILLING ASSEMBLY
4058	U21895200	HOISTING DEVICE
4059	U21895200-1	HOISTING DEVICE