

		CAPABILITY LIST
#	PartNumber	Description
1	07-3016-6900	FUEL SAMPLE UNIT
2	29-TB1PT35A	INSTALLATION TOOL
3	29-TP1PT35A	INSTALLATION TOOL
4	1908	NLG SOCKET
5	2309-T006-001	SOCKET- REMOVAL/INSTALLATION, LOCK NUT
6	1.05.2900	Starrett Indicator model
7	351-2100-18GSE	A350 FAN COWL HOLD OPEN ROD
8	351-3000-11GSE	C-DUCT STEP FOAM BLOCK
9	1702198	INHIBITING RIG - ENGINE SYSTEM ON WING
10	2558757	CONE - WHEEL GUIDE
11	2558758	CONE - BRAKE GUIDE
12	2558759	TOOL - BRAKE HANDLING
13	2558806	SUPPORT, ADAPTER, INST. OBWH&IBWH
14	2CF65B05528-1	BALANCE STAND - OUTBOARD AILERON, UPPER RUDDER AND OUTBOARD ELEVATOR
15	81267600	RETAINER ADAPTER
16	81267700	ADAPTER, FILL BOSS
17	81268100	WELDING FIXTURE
18	81270000	WRENCH
19	81270100	WRENCH
20	81270200	HEAT SINK
21	83000089	CRADLE-FIRE EXTINGUISHER BOTTLE
22	460001794/6	PRESSURE TEST BUNG
23	460002502	CHARGING ADAPTOR
24	460003180-24	RING - KEEP
25	460003180-51	RING - KEEP
26	460004459/5	TEST ADAPTER
27	460004459/6	TEST ADAPTER
28	460005812	SPANNER - TUBE
29	460005832	SPRING EXPANDER-MLG SIDE STAY
30	460005834	SPANNER - TUBE
31	460005835	SLEEVE - GROUND LOCK
32	460006228	ADAPTER - TORQUE
33	460006428	BLOCK - SETTING
34	460006465	SPANNER-PEG
35	460006567	SPLINT SLING
36	460006804	BLEED ADAPTOR
37	460007011	SPANNER-AXLE NUT, MLG
38	460007019	SPACER, BRAKE ROD
39	460007020	SPACER, BRAKE ROD
40	460007021	SPANNER
41	460007022	SPANNER
42	460007028	REACTOR
43	460007033	SPANNER- A LINK
44	460007070	ADAPTOR
45	460007102	EQUIPMENT - LIFTING
46	460007156	ADAPTER, CHARGING - MLG
47	460007169	COMPRESSOR - SPRING
48	460007174	PIN-GROUNDLOCK, MLG
49	460007229	ADAPTER - TORQUE
50	460007230	ADAPTOR - TORQUE
51	460007242	ADAPTOR-TORQUE REACTOR
52	460007253	SPANNER PIN
53	460007280	SLEEVE-GROUND LOCK
54	460007305	GAG - SHOCKABSORBER
55	460007316-5	CLAMP
56	460007334	REACTOR BOGIE
57	27504095000	SPANNER-TRUNNION NUT (TRK1)
58	04Y0006-001	SLEEVE THRUST REVERSER ACTUATOR (SAFETY)
59	04Y0008-001	DISENGAGEMENT TOOL (HOOK LOCK KEY)

60	060-72-00-8V272	VANE 7-8 STG. HOLDER-CMM
61	0S22406	ADJUSTING BROACH
62	0S22473	PRESS IN GUIDE
63	0S22489	PRESS IN GUIDE
64	0S23119	PLUG
65	0U141267	MOUNTING CONE
66	0U141853	MOUNTING CONE
67	0U141854	MOUNTING CONE
68	0U141859	MOUNTING CONE
69	0U141861	MOUNTING CONE
70	0U141879	PRECASTING BUSH
71	0U141883	PRECASTING BUSH
72	0U141884	MOUNTING CONE
73	0U141889	MOUNTING CONE
74	0U141937	ASSEMBLY TOOL
75	0U142144	TORQUE WRENCH ADAPTOR
76	0U142195	MOUNTING CONE
77	0U142216	SPECIAL JAWS
78	0U144729	MOUNTING CONE
79	0U144929	SEAL-GUIDE
80	0U144930	SEAL-ASSEMBLY TOOL
81	0U144932	SEAL-GUIDE
82	0U144934	SEAL-ASSEMBLY TOOL
83	0U144936	SEAL-GUIDE
84	0U144937	SEAL-GUIDE
85	0U144940	SEAL-GUIDE
86	0U144945	SEAL-GUIDE
87	0U144946	SEAL-GUIDE
88	0U144950	SEAL-ASSEMBLY TOOL
89	0U144953	SEAL-GUIDE
90	0U144955	SEAL-GUIDE
91	0U144956	SETTLING BLOCK
92	0U144957	SEAL-GUIDE
93	0U144958	SETTLING BLOCK
94	0U144960	SETTLING BLOCK
95	0U144962	SETTLING BLOCK
96	0U145409	SPECIAL WRENCH
97	0U145506	CONE-MOUNTING,THS ACTUATOR
98	0U145920	TOOL-MANUAL CRANKING STOP,THS ACTUATOR
99	0U147196	SEAL MOUNTING
100	0U147197	SEAL MOUNTING
101	0U147198	SEAL MOUNTING
102	0U147200	SEAL MOUNTING
103	0U147204	PRECASTING BUSH
104	0U147205	PRECASTING BUSH
105	0U147244	SEAL MOUNTING
106	0U190360	PIN-RIGGING,THS ACTUATOR,MECHANICAL INPUT LEVER
107	0U190364	OIL DRAINING TOOL
108	0U190484	SPECIAL WRENCH
109	0U190834	TOOL-ZERO POSITIONING,THS ACTUATOR
110	0U190844	TOOL-RELEASE,POB
111	0U190863	BACKLASH CHECKING TOOL-THS ACTUATOR
112	0U191191	CHECKING TOOL-BALL SCREW AND TIE BAR
113	0U192146	TORQUE WRENCH
114	0U300054	PRECASTING BUSH
115	0U300093	CHECKING TOOL FOR SLIDING TORQUE
116	0U300395	RIVETING TOOL
117	0U301727	SEAL GUIDE
118	1C6173G02	FIXTURE, LIFT - FWD POWER TURBINE
119	1C6806P06	HALF RING of TRUCKk, TRANS and STORAGE
120	1C6807G01	ADAPTER BRACKETS, AFT SHAFT - PT ROTOR
121	1C6839G01	BRACKET SET, SUB ASSEMBLY STAND - TRF

122	1C6859P10	PROTECTOR No. 7B BEARING
123	1C6864G03	DOLLY,ASSY/DISASSY PT-VERTICAL
124	1C6865G01	FIXTURE, LIFT - POWER TURBINE TURNOVER, FORWARD
125	1C6868G01	FIXTURE, DRIVE - POWER TURBINE
126	1C6896G01	FIXTURE, HOLDING - PTR to TRF
127	1C6909G01	FIXTURE, DROP CHECK - PT ROTOR, AFT
128	1C6950G04	ADAPTER, TORQUE
129	1C6950G05	ADAPTER, TORQUE
130	1C8127G01	FIXTURE, LIFT - FWD POWER TURBINE
131	1C8134G01	FIXTURE, INSTALL & REMOVE COMPR ROTOR HUB TIE
132	114-263	PRESSURE RELIEF VALVE PENETRATION TEST TOOL
133	114-264	TIRE AND WHEEL ASSEMBLY TOOL
134	114-265	WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
135	114-266	BEARING CUP REMOVAL AND INSTALLATION
136	114-268	BEARING CUP REMOVAL AND INSTALLATION
137	114-332	TOOL FOR INSTALLATION OF A TORQUE BAR HOLE REPAIR BUSHING
138	114-349	TOOL FOR A LEAK TEST OF THERMAL RELIEF PLUGS AND THE OVERINFLATION PLUG
139	114-369	R/I OF TORQUE PLATE BUSHING
140	114-370	BULLET FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
141	114-371	SUPPORT TOOL FOR INSTALLATION OF PISTONS INTO ADJUSTER SLEEVES
142	114-374	TEST SHIMS
143	114-375	ASSEMBLLY TOOL
144	114-429	CUP REMOVAL PLATE
145	114-441	INSPECTS LIP HEIGHT OF SEALS
146	114-452	BULLET FOR INSTALLATION OF ADJUSTER PINS INTO PISTONS
147	114-780-4	TOOL THAT SIZES BACKUP RINGS ON ADJUSTER SLEEVES
148	114-901	RIVETING ANVIL
149	114-902	RIVETING PEEN
150	114-1074	TOOL FOR ASSEMBLY OF THE WHEEL AND TIRE
151	114-1075	TOOL THAT HOLDS THE OUTER WHEEL HALF FOR REMOVAL OR INSTALLATION OF A BEARING CUP AND THE INNER
152	114-1076	TOOL THAT HOLDS THE INNER WHEEL HALF FOR REMOVAL OF THE BEARING CUP
153	114-1077	TOOL FOR A LEAK TEST OF THE OVERINFLATION PLUG
154	114-1078	TOOL FOR ASSEMBLY OF THE TIRE AND THE WHEEL
155	114-1079	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
156	114-1080	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
157	114-1086	BEARING CUP REMOVAL PLATE FOR INNER AND OUTER WHEEL HALVES
158	114-1087	BEARING CUP INSTALLATION PLATE FOR INNER WHEEL HALF
159	114-1088	BEARING CUP INSTALLATION PLATE FOR OUTER WHEEL HALF
160	114-1089	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
161	114-1090	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
162	114-1091	TOOL FOR REMOVAL OF BEARING CUPS FROM THE INNER AND OUTER WHEEL HALVES
163	114-1092	TOOL FOR INSTALLATION OF BEARING CUPS INTO THE INNER AND OUTER WHEEL HALVES
164	114-1230	GREASE SEAL INSPECTION TOOL W/ CLAMP KNOB AND BOLT RETAINER
165	114-1274	TOOL FOR ASSEMBLY OF THE WHEEL AND TIRE
166	114-1276	OUTER WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
167	114-1277	INNER WHEEL HALF SUPPORT TOOL (BEARING CUP REMOVAL)
168	114-1278	OUTER WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
169	114-1279	INNER WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
170	114-1280	OUTER WHEEL HALF (REMOVAL PLATE DIAMETER)
171	114-1281	INNER WHEEL HALF (REMOVAL PLATE DIAMETER)
172	114-1282	OUTER WHEEL HALF (INSTALLATION PLATE DIAMETER)
173	114-1283	INNER WHEEL HALF (INSTALLATION PLATE DIAMETER)
174	114-1424	WHEEL HALF SUPPORT TOOL (BEARING CUP INSTALLATION)
175	114-1307	TOOL FOR INSPECTION OF INNER GREASE SEAL
176	114-1308	TOOL FOR INSPECTION OF INNER GREASE SEAL
177	19ME65B00116	KIT - HANDLING OUTBOARD TRAILING EDGE FLAP
178	24ME65B00116	LOCK - INBOARD TRAILING EDGE FLAP
179	3MIT65B80190	LOCK - DOOR, WING LANDING GEAR
180	11MIT65B04012	ACTUATOR LOCK - NLG DOOR
181	25-6Y1663A	SPANNER
182	290435-1-1	ADAPTER
183		

184	2C14029G01	PULLER, LP TURB MODULE
185	2C14029G02	PULLER, LP TURB MODULE
186	2C14029G03	PULLER, LP TURB MODULE
187	2C14029G04	PULLER, LP TURB MODULE
188	2C14030G04	FIXTURE LIFT AND TURN - CORE ENGINE, AFT
189	2C14040	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
190	2C14040G01	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
191	2C14040G02	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
192	2C14040G03	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
193	2C14040G04	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
194	2C14040G05	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
195	2C14040G06	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
196	2C14040G07	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
197	2C14040G08	TORQUE ADAPTER, PRESSURE TUBE-COUPLING
198	2C14052	FIXTURE, LIFT & TURN - LPT
199	2C14052G01	FIXTURE, LIFT & TURN - LPT
200	2C14052G02	FIXTURE, LIFT & TURN - LPT
201	2C14052G03	FIXTURE, LIFT & TURN - LPT
202	2C14052G04	FIXTURE, LIFT & TURN - LPT
203	2C14052G05	FIXTURE, LIFT & TURN - LPT
204	2C14092	WRENCH, STARTER-LPT
205	2C14092G01	WRENCH, STARTER-LPT
206	2C14092G02	WRENCH, STARTER-LPT
207	2C14093G03	WRENCH COUPLING NUT - LOW PRESSURE TURBINE MIDSHAFT
208	2C14131	FIXTURE, SEATING CHECK HP TURB
209	2C14131G01	FIXTURE, SEATING CHECK HP TURB
210	2C14131G02	FIXTURE, SEATING CHECK HP TURB
211	2C14186	FIXTURE, LIFT/TURB-CORE MODULE
212	2C14186G01	FIXTURE, LIFT/TURB-CORE MODULE
213	2C14186G02	FIXTURE, LIFT/TURB-CORE MODULE
214	2C14186G03	FIXTURE, LIFT/TURB-CORE MODULE
215	2C14193G03	STAND, SHIPPING/STORAGE HIGH PRESSURE TURBINE MODULE
216	2C14199G07	FIXTURE, INSTALL AND REMOVE - HP TURBINE MODULE ASSEMBLY
217	2C14220	FIXTURE, LIFT-HP TURB HORIZONTAL
218	2C14220G01	FIXTURE, LIFT-HP TURB HORIZONTAL
219	2C14220G02	FIXTURE, LIFT-HP TURB HORIZONTAL
220	2C14222	STAND, INSTALL/REMOVE-HP TURB RTR
221	2C14222G01	STAND, INSTALL/REMOVE-HP TURB RTR
222	2C14227G02	DOLLY, SUB-ASSEMBLIES - FRAMES
223	2C14240	FIXTURE, RUNOUT - HPC
224	2C14240G01	FIXTURE, RUNOUT - HPC
225	2C14241	GUIDE, COOLING AIR TUBE
226	2C14241G01	GUIDE, COOLING AIR TUBE
227	2C14602	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
228	2C14602G01	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
229	2C14602G02	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
230	2C14602G03	FIXTURE, RESTRAIN-TURB REAR FRAME TO LPT-ROTOR
231	2C14650	WRENCH, RETAINER NUT-INNER RACE NO 6 BEARING
232	2C14650G01	WRENCH, RETAINER NUT-INNER RACE NO 6 BEARING
233	2C14686	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
234	2C14686G01	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
235	2C14686G02	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
236	2C14686G03	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
237	2C14686G04	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
238	2C14686G05	ADAPTER, LIFT-LOW PRESSURE COMPRESSOR
239	2C14726G01	ADAPTOR SET PEDESTAL SET CF6-80C2
240	2C14726G02	ADAPTOR SET PEDESTAL SET CF6-80C2
241	2C14726G03	ADAPTOR SET PEDESTAL SET CF6-80C2
242	2C14726G04	ADAPTOR SET PEDESTAL SET CF6-80C2
243	2C14726G05	ADAPTOR SET PEDESTAL SET CF6-80C2
244	2C14729	ADAPTER SET PEDESTAL ENGINE AFT
245	2C14729G01</	

246	2C18012	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
247	2C18012G01	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
248	2C18012G02	FIXTURE PRELOAD-SPACER STAGE 1 FAN BLADE
249	2C14682G01	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
250	2C14682G02	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
251	2C14682G03	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
252	2C14682G04	CLOSURE SET, LEAK CHECK-LUBE SYSTEM AND SUMP, CRF
253	2C6122	FIXTURE,R/I-FWD FAN SHAFT BOLTS
254	2C6122G01	FIXTURE,R/I-FWD FAN SHAFT BOLTS
255	2C6122G02	FIXTURE,R/I-FWD FAN SHAFT BOLTS
256	2C6339	SUPPORT - ENGINE HANDLING
257	2C6339G01	SUPPORT - ENGINE HANDLING
258	2C6339G02	SUPPORT - ENGINE HANDLING
259	2C6339G03	SUPPORT - ENGINE HANDLING
260	2C6339G04	SUPPORT - ENGINE HANDLING
261	2C6339G05	SUPPORT - ENGINE HANDLING
262	2C6339G06	SUPPORT - ENGINE HANDLING
263	2C6352G01	WRENCH SET, SPANNER-AIRTUBE NUTS
264	2C6352G02	WRENCH SET, SPANNER-AIRTUBE NUTS
265	2C6352G03	WRENCH SET, SPANNER-AIRTUBE NUTS
266	2C6352G04	WRENCH SET, SPANNER-AIRTUBE NUTS
267	2C6352G05	WRENCH SET, SPANNER-AIRTUBE NUTS
268	2C6352G06	WRENCH SET, SPANNER-AIRTUBE NUTS
269	2C6352G07	WRENCH SET, SPANNER-AIRTUBE NUTS
270	2C6613G01	GAGE, IMMERSION DEPTH - IGNITER PLUG
271	2C6823G01	PULLER, MANIFOLD-NO.I BRG.
272	2C6856G04	FIXTURE, LIFT - FAN ROTOR SUB-ASSEMBLY
273	2C6894	REMOVAL,TOOL-FAN SPINNER
274	2C6894G01	REMOVAL,TOOL-FAN SPINNER
275	2C6894G02	REMOVAL,TOOL-FAN SPINNER
276	2C6894G03	REMOVAL,TOOL-FAN SPINNER
277	2C6894G04	REMOVAL,TOOL-FAN SPINNER
278	2C8073	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
279	2C8073G01	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
280	2C8073G02	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
281	2C8073G03	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
282	2C8073G04	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
283	2C8073G05	FIXTURE,PRELOAD-SPACER STAGE 1 FAN BLADE
284	2ME140W9255	CRADLE TOOL
285	460002661-2	TEST ADAPTER
286	460002661-3	TEST ADAPTER
287	4MIT65B80307-1	PROTRACTOR ASSEMBLY-CONTROL COLUMN
288	6MIT65B04002	SPANNER WRENCH SOCKET
289	558-1-05845	HEXAGON DRIVER
290	558-1-05846	TORQUE WRENCH ADAPTER
291	558-1-05903-002	EXTRACTOR-FUEL PUMP
292	56724S0000	SPANNER SET
293	57759A0000-01	WRENCH, SPECIAL
294	5952169-5	PIN ASSY
295	5952169-7	PIN ASSY
296	5952169-9	PIN ASSY
297	5952169-11	RIGPIN
298	5952169-13	SAFETY PIN
299	5952169-15	PIN
300	5952169-17	RIG PIN
301	5952169-19	PIN
302	5952169-21	PIN
303	5952169-23	RIG PIN
304	5952169-25	PIN
305	5952169-27	PIN RIGGING
306	5952169-29	RIG PIN
307	5952169-31	RIG PIN

308	5952169-33	RIG PIN
309	5952169-37	RIG PIN
310	5952169-71	RIG PIN
311	5952169-77	RIG PIN
312	5952169-79	RIG PIN
313	5952169-81	RIG PIN
314	5952169-83	RIG PIN
315	5952169-85	PIN
316	5952169-99	PIN
317	5E92-0300	PROTECTOR-AXLE,MLG
318	636GSE3009-901	TR HOLD OPEN STRUT TO PYLON
319	6026-4102	PROTECTOR - NLG WHEEL AXLE
320	6260-0003	SPANNER - NLG AXLE NUT
321	701-2978000	PIN-RIGGING
322	713292	TRANSDUCER EXTRACTOR
323	7ME65-73761-1	SPANNER WRENCH FWD TRUNNION
324	7MIT5-88439	WRENCH GEAR RETAINER STAB TRIM
325	833564-2	DRIVER INSTALLATION SEAL
326	852D102/4	TOOL, FLAP ACTUATORSB 27-069
327	856A1007G01	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
328	856A1007G02	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
329	856A1007G03	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
330	856A1007G04	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
331	856A1007G05	SUPPORT, COMBUSTION CASE-CORE MODULE ASSY
332	856A1008G01	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
333	856A1008G02	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
334	856A1008G03	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
335	856A1008G04	FIXTURE, LIFT & TURNCOMPR ROTOR, AFT END & HPTR, FWD END
336	856A1009G01	ADAPTER, VERTICAL LIFT FIXTURE
337	856A1009G02	ADAPTER, VERTICAL LIFT FIXTURE
338	856A1010G01	WRENCH, RATCHET - COMPRESSOR ROTOR INTERNAL NUT
339	856A1015G01	SLING - FRAMES
340	856A1016G01	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
341	856A1016G02	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
342	856A1016G03	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
343	856A1016G05	STAND, COMPR ROTOR & HP TURBINE ROTOR - VERTICAL
344	856A1017G01	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
345	856A1017G02	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
346	856A1017G03	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
347	856A1017G04	PULLER, IMPACT - HIGH PRESSURE TURBINE SHROUD REMOVAL
348	856A1018G01	STAND, SUB - ASSEMBLY - FRAMES
349	856A1018G02	STAND, SUB - ASSEMBLY - FRAMES
350	856A1018	

370	856A1042G05	WRENCH, TORQUE - NO 4 BRG RETAINER
371	856A1042G06	WRENCH, TORQUE - NO 4 BRG RETAINER
372	856A1042G07	WRENCH, TORQUE - NO 4 BRG RETAINER
373	856A1042G08	WRENCH, TORQUE - NO 4 BRG RETAINER
374	856A1050G01	FIXTURE, INSPECT SHIMMING INLET GEARBOX
375	856A1050G02	FIXTURE, INSPECT SHIMMING INLET GEARBOX
376	856A1050G03	FIXTURE, INSPECT SHIMMING INLET GEARBOX
377	856A1050G04	FIXTURE, INSPECT SHIMMING INLET GEARBOX
378	856A1051G01	PULLER ARM - COMPRESSOR
379	856A1051G02	PULLER ARM - COMPRESSOR
380	856A1052G01	FIXTURE - PRECISION BUILDUP/RUNOUT
381	856A1052G02	FIXTURE - PRECISION BUILDUP/RUNOUT
382	856A1052G03	FIXTURE - PRECISION BUILDUP/RUNOUT
383	856A1052G04	FIXTURE - PRECISION BUILDUP/RUNOUT
384	856A1052G05	FIXTURE - PRECISION BUILDUP/RUNOUT
385	856A1056G05	FIXTURE, GRIND - COMPRESSOR STATOR FLOWPATH
386	856A1057G01	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
387	856A1057G02	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
388	856A1057G03	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
389	856A1057G04	FIXTURE, LIFT & TURN - HPT ROTOR ASSY, AFT
390	856A1061G01	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
391	856A1061G02	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
392	856A1061G03	FIXTURE, LIFT & TURN - HP TURB ROTOR DISK, FWD
393	856A1062G01	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
394	856A1062G02	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
395	856A1062G03	FIXTURE, CHILLING - HPTR FORWARD FLANGE, HORIZONTAL
396	856A1063G01	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
397	856A1063G02	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
398	856A1063G03	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
399	856A1063G04	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
400	856A1063G05	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
401	856A1063G06	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
402	856A1063G07	TOOL-SET COMPR STATOR SECTORS & LINERS INSTALLATION
403	856A1070G01	FIXTURE, SPLINE BOLT REMOVAL
404	856A1070G02	FIXTURE, SPLINE BOLT REMOVAL
405	856A1071G01	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
406	856A1071G02	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
407	856A1071G03	TOOL SET, REMOVAL - C/S LINERS & VANE SEGMENTS
408	856A1071G0	

432	856A1086G02	STAND, ASSEMBLY - CORE SECTION
433	856A1093G01	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
434	856A1093G02	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
435	856A1093G03	FIXTURE, LIFT - COMBUSTION CHAMBER AND HPT NOZZLE INNER SUPPORT
436	856A1102G01	ADAPTER, HORIZONTAL LIFT-FIXTURE
437	856A1102G02	ADAPTER, HORIZONTAL LIFT-FIXTURE
438	856A1102G03	ADAPTER, HORIZONTAL LIFT-FIXTURE
439	856A1103G01	LIFT-HPT NOZZLE ASSEMBLY FIX
440	856A1110G01	INSTALLATION STAND
441	856A1110G02	INSTALLATION STAND
442	856A1110G03	INSTALLATION STAND
443	856A1110G04	INSTALLATION STAND
444	856A1110G05	INSTALLATION STAND
445	856A1112G01	STAND, INSTALLATION-REAR COMPRESSOR STATOR
446	856A1112G02	STAND, INSTALLATION-REAR COMPRESSOR STATOR
447	856A1115G01	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
448	856A1115G02	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
449	856A1115G03	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
450	856A1115G04	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
451	856A1115G05	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
452	856A1115G06	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
453	856A1115G07	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
454	856A1115G08	CART, NITROGEN - FUEL MANIFOLD PRESS CHECK
455	856A1117G01	FIXTURE, LIFT - HPTR HORIZONTAL
456	856A1117G02	FIXTURE, LIFT - HPTR HORIZONTAL
457	856A1117G03	FIXTURE, LIFT - HPTR HORIZONTAL
458	856A1126G01	DRIVER SET HPC
459	856A1126G02	DRIVER SET HPC
460	856A1126G03	DRIVER SET HPC
461	856A1126G04	DRIVER SET HPC
462	856A1130G01	TOOL SET JACKSCREW
463	856A1130G02	TOOL SET JACKSCREW
464	856A1130G03	TOOL SET JACKSCREW
465	856A1130G04	TOOL SET JACKSCREW
466	856A1130G05	TOOL SET JACKSCREW
467	856A1130G06	TOOL SET JACKSCREW
468	856A1130G07	TOOL SET JACKSCREW
469	856A1130G08	TOOL SET JACKSCREW
470	856A1130G09	TOOL SET JACKSCREW
471	856A1130G10	TOOL SET JACKSCREW
472	856A1140G01	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
473	856A1140G02	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
474	856A1140G03	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
475	856A1140G04	FIXTURE, SUPPORT-CORE MODULE TO C/R SHAFT
476	85	

494	856A1281G01	FIXT VERT LIFT HPT FWD OUTER SEAL
495	856A1281G02	FIXT VERT LIFT HPT FWD OUTER SEAL
496	856A1290G01	FIXTURE, CORE ENGINE SUPPORT, ROTATION AND RUNOUT
497	856A1291G01	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
498	856A1291G02	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
499	856A1291G03	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
500	856A1291G04	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
501	856A1291G05	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
502	856A1291G06	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
503	856A1291G07	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
504	856A1291G08	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
505	856A1291G09	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
506	856A1291G10	FIXTURE, INSTALL & REMOVE - INLET GEAR - BOX MODULE
507	856A1308G01	PULLER-HP TURB ROTOR FWD OUTER SEAL
508	856A1308G02	PULLER-HP TURB ROTOR FWD OUTER SEAL
509	856A1310G01	TOOL, KIT – BOR ESCOPE GUIDE, HP TURBINE
510	856A1310P02	GE GUIDE TUBE
511	856A1312G01	SUPPORT ENGINE HANDLING
512	856A1312G02	SUPPORT ENGINE HANDLING
513	856A1312G03	SUPPORT ENGINE HANDLING
514	856A1312G04	SUPPORT ENGINE HANDLING
515	856A1312G05	SUPPORT ENGINE HANDLING
516	856A1312G06	SUPPORT ENGINE HANDLING
517	856A1312G07	SUPPORT ENGINE HANDLING
518	856A1312G08	SUPPORT ENGINE HANDLING
519	856A1312P13	PEDESTAL EXTENSION COLUMN
520	856A1313G01	RING, ENGINE HANDLING SUPPORT
521	856A1313G02	RING, ENGINE HANDLING SUPPORT
522	856A1313G03	RING, ENGINE HANDLING SUPPORT
523	856A1313G04	RING, ENGINE HANDLING SUPPORT
524	856A1314G01	BRACKET SET SUPPORT C+F MILLIER 4 OFF
525	856A1332G01	FIXT LIFT & TURN CORE FWD
526	856A1334G01	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
527	856A1334G02	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
528	856A1334G03	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
529	856A1334G04	FIXTURE, BUILDUP - CORE ENGINE/HP COMPRESSOR ROTOR (BUILDUP FIXTURE)
530	856A1342G01	FIXTURE, PRESEAT - VSV LEVER ARMS
531	856A1351P01	GUIDE TUBE, BORESCOPE - HP TURB SHROUD
532	856A1356G02	FIXTURE, LIFT - HPCR STAGE 1 THRU 2 SPOOL, FORWARD
533	856A1364G01	SET-PRINT, IDENTIFICATION, MAGNETIC CHIP DETECTOR
534	856A1364G02	SET-PRINT, IDENTIFICATION, MAGNETIC CHIP DETECTOR

556	856A1396G01	FIXTURE
557	856A1404G01	FIXTURE, PRECISION BUILDUP & RUNOUT - HP TURBINE ROTOR
558	856A1411G01	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
559	856A1411G02	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
560	856A1411G03	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
561	856A1411G04	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
562	856A1411G05	FIXTURE, PUSH/PULL - HPT ROTOR AFT BLADE
563	856A1412G06	FIXTURE ASSL./DISASSEMBL. MOD.6 (5B/7B)
564	856A1417G01	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
565	856A1417G02	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
566	856A1417G03	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
567	856A1417G04	FIXTURE, LIFT & TURN - HP TURBINE ROTOR DISK FORWARD
568	856A1418G01	FIXT HPT SHROUD HANGER
569	856A1418G02	FIXT HPT SHROUD HANGER
570	856A1421G01	FIXTURE, LIFT HPC STATOR FWD CASE
571	856A1421G02	FIXTURE LIFT HP COMPR STATOR CASE
572	856A1423G01	FIXTURE, RETRAINING-CORE MODULE, AFT
573	856A1423G02	FIXTURE, RETRAINING-CORE MODULE, AFT
574	856A1423G03	FIXTURE, RETRAINING-CORE MODULE, AFT
575	856A1423G04	FIXTURE, RETRAINING-CORE MODULE, AFT
576	856A1423G05	FIXTURE, RETRAINING-CORE MODULE, AFT
577	856A1423G06	FIXTURE, RETRAINING-CORE MODULE, AFT
578	856A1423G07	FIXTURE, RETRAINING-CORE MODULE, AFT
579	856A1423G08	FIXTURE, RETRAINING-CORE MODULE, AFT
580	856A1424G01	FIXTURE LIFT COMBUSTION VERT & HORIZ
581	856A1424G02	FIXTURE LIFT COMBUSTION VERT & HORIZ
582	856A1424G03	FIXTURE LIFT COMBUSTION VERT & HORIZ
583	856A1424G04	FIXTURE LIFT COMBUSTION VERT & HORIZ
584	856A1428G01	TOOL SET, INSTALL/REMOVE - NO. 3 BEARING OUTER RACE AND SPANNER NUT
585	856A1429G02	PULLER, NO 3 BALL AND ROLLER BEARING INNER RACES
586	856A1430G02	FIXTURE, HOLDING - IGB MODULE
587	856A1433G01	TOOL, TORQUING- HPT STATOR MANIFOLD BUSHING
588	856A1433G02	TOOL, TORQUING- HPT STATOR MANIFOLD BUSHING
589	856A1469G01	WRENCH SET MEC FUEL PUMP NUTS
590	856A1469G02	WRENCH SET HMU/MEC/FUEL PUMP
591	856A1491G01	BRACKET SET, HANDLING - COMPRESSOR MID FLANGE
592	856A1491G02	BRACKET SET, HANDLING - COMPRESSOR MID FLANGE
593	856A1492G01	FIXTURE, REMOVAL - HP TURB FWD SHAFT BOLTS
594	856A1492G02	FIXTURE, REMOVAL - HP TURB FWD SHAFT BOLTS

618	856A1845G02	FIXTURE, ALIGNING-HIGH PRESSURE COMPRESSOR
619	856A1845G03	FIXTURE, ALIGNING-HIGH PRESSURE COMPRESSOR
620	856A1865G01	FIXTURE, TORQUE – BRG 3
621	856A1865G04	FIXTURE, TORQUE - BRG 3
622	856A1868G01	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
623	856A1868G02	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
624	856A1868G03	FIXTURE, INSTALL/REMOVE-HP TURB ROTOR FWD OUTER SEAL
625	856A1869G01	FIXTURE, PUSH/PULL – HP TURB ROTOR, AFT, BLADE RETAINER
626	856A1897G01	FIXTURE, LIFT & TURN - HP TURB ROTOR, DISK AFT
627	856A2308G01	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
628	856A2308G02	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
629	856A2310G01	ALIGNMENT FIXTURE - BOOSTER/LPT SHAFT
630	856A2310G02	ALIGNMENT FIXTURE - BOOSTER/LPT SHAFT
631	856A2316G01	WRENCH TORQUE LPT CPLG NUT
632	856A2351G01	TOOL SET, HANDLING SECTOR - TURBINE FRAME MAINTENANCE MODULE
633	856A2357G01	FIXTURE RESTRAINING LPT. ROTOR TO STATOR
634	856A2390G01	WRENCH BOLT DISK 1,2,3,5
635	856A2425G01	FIXTURE, RESTRAINING - LTP ROTOR TO STATOR
636	856A2501G01	RATCHET WRENCH DUAL PURPOSE
637	856A2524G01	FIXTURE, HANDLING - LPT MAJOR MODULE
638	856A2524G03	FIXTURE, HANDLING - LPT MAJOR MODULE
639	856A2537G01	PROTECTOR MOUNTING PIN
640	856A2540G01	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
641	856A2540G02	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
642	856A2540G03	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
643	856A2540G04	FIXTURE BUILD-UP _LPT SHAT MODULE TO LPT MODULE
644	856A2548G01	DOLLY, STORAGE AND ASSEMBLY/DISASSEMBLY. LPT SHAT MODULE
645	856A2567G01	EYE LIFT
646	856A2568G01	LIFTING EYE - AFT LPT SHAFT
647	856A2575G01	STAND, STORAGE _LPT
648	856A2575G02	STAND, STORAGE _LPT
649	856A2611G01	PULLER, LP TURBINE
650	856A2618G01	FIXTURE, HOLDING-ROTOR/STATOR
651	856A2618G02	FIXTURE, HOLDING-ROTOR/STATOR
652	856A2618G03	FIXTURE, HOLDING-ROTOR/STATOR
653	856A2618G04	TUBE DUMMY LPT SHAFT FWD END
654	856A2625G01	STAND, STORAGE MODULE 1
655	856A2626G01	STAND, STORAGE - MODULE 2
656	856A2626G02	STAND, STORAGE - MODULE 2
657	856A2627G01	LIFTING BEAM
658	856A2627G02	

680	856A2664G01	GAGE, SETTING - VARIABLE BLEED VALVE DOORS
681	856A2667G01	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
682	856A2667G02	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
683	856A2667G03	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
684	856A2667G04	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
685	856A2667G05	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
686	856A2667G06	AD2 RUNOUT CHECKING FIXTURE - FAN MAJOR
687	856A2668G01	KIT, PULLER ADAPTERS
688	856A2668G02	KIT, PULLER ADAPTERS
689	856A2673G02	TOOL,INSTALL ENRSEAL
690	856A2674G01	PROTECTION COVER LPT SHAFT
691	856A2677G01	FIXTURE - REMOVAL AND INSTALLATION, REMOVABLE RETAINING RING
692	856A2683G01	DETECTOR: CHIP,MAGNETIC
693	856A2690G01	ALIGNEMENT FIXTURE - N° 1 & N°2 BRG
694	856A2691G01	FAN BLADE SPACER PLIERS
695	856A2691G02	FAN BLADE SPACER PLIERS
696	856A2702G01	PINS GUIDE NO5 BEARING SUPPORT
697	856A2709G01	FORWARD SUPPORT
698	856A2713G01	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
699	856A2713G02	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
700	856A2713G03	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
701	856A2713G04	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
702	856A2713G05	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
703	856A2713G06	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
704	856A2713G07	FIXTURE BUILD, UP LPT SHAFT MODULE TO LPT MODULE
705	856A2714G01	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
706	856A2714G02	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
707	856A2714G03	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
708	856A2714G04	FIXTURE, HOIST LPT MODULE ROTOR-STATOR TURBINE BP
709	856A2716G01	RING DISTRIBUTION TORQUE
710	856A2717G01	CORE ENGINE LOCK ADAPTER
711	856A2718G01	INS/REM SET - AGB MANUAL DRIVE
712	856A2718G02	INS/REM SET - AGB MANUAL DRIVE
713	856A2718G03	INS/REM SET - AGB MANUAL DRIVE
714	856A2718G04	INS/REM SET - AGB MANUAL DRIVE
715	856A2719G01	FIXT SUPPORT R/I TGB
716	856A2719G02	FIXT SUPPORT R/I TGB
717	856A2719G03	FIXT SUPPORT R/I TGB
718	856A2726G01	TURNBUCKLE-TGB/AGB
719	856A2727G01	PULLER, RADIAL DRIVE SHAFT
720	856A2752G01	HOOKS, RESTRAIN AIR SEAL TO LPT DISK 2 AND 4
721		

742	856A2905G02	WRENCH, TORQUE/LOOSEN - FAN DISK COUPLER (WRENCH)
743	856A2906G01	GUIDE,COUNTERTORQ WRENCH
744	856A2906G02	GUIDE,COUNTERTORQ WRENCH
745	856A2943G01	SLEEVE, PROTECTION-REAR INNER ROTATING AIR/OIL SEAL
746	856A2954G01	PULLER - SPACERS, FAN BLADE
747	856A2954G02	PULLER - SPACERS, FAN BLADE
748	856A2954P02	HOOK
749	856A2954P02B	HOOK
750	856A2956G01	TOOL - ASSISTANCE, FAN BLADE, RETAINING RING
751	856A2956P04	BOLT (PULLER – SPACERS FAN BLADE)
752	856A2961G01	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
753	856A2961G02	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
754	856A2961G03	PUSHER/PULLER - CFM56-7 SEALOL AND MAGNETIC SEALS
755	856A2969G01	TOOL SET, TARGET - HANDLING SEAL
756	856A2969G02	TOOL SET, TARGET - HANDLING SEAL
757	856A2976G02	ASSY/DISASSY FIXTURE - LPT VANES STG3
758	856A2978G01	FIXTURE, HANDLING-LPT ROTOR/STATOR
759	856A2980G01	FIXTURE, TORQUE-CENTER VENT TUBE SPACER SLEEVE NUT
760	856A2984G01	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
761	856A2984G02	FIXTURE, ALIGNMENT - BOOSTER TO LPT SHAFT
762	856A2985G01	DRIVE ADAPTER - BOOSTER LPT SHAFT
763	856A2986G01	GUIDE BOOSTER ALIGNMENT FIXTURE
764	856A2986G02	GUIDE BOOSTER ALIGNMENT FIXTURE
765	856A2990G01	BEAM PUSHER / PULLER ADAPTATION
766	856A2993G01	GAGE, SEATING CHECK-CORE MODULE TO IGB
767	856A2994G01	BACKUP TORQUE TOOL
768	856A3030G01	EYE LIFT
769	856A3057G01	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
770	856A3057G02	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
771	856A3057G03	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
772	856A3057G04	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
773	856A3057G05	FIXTURE TORQUE - CENTER VENT TUBE SPACER SLEEVE NUT
774	856A3057G06	FIXTURE, TORQUE - CENTER VENT TUBE SPACER SL. NUT
775	856A3062G01	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
776	856A3062G02	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
777	856A3062G03	PULLER, HYDRAULIC - REAR ROTATING AIR/OIL SEAL
778	856A3100G01	PIN, LOCATING CENTER VENT TUBE
779	856A3100G02	PIN, LOCATING CENTER VENT TUBE
780	856A3100G03	PIN, LOCATING CENTER VENT TUBE
781	856A3100G04	PIN, LOCATING CENTER VENT TUBE
782	856A310	

804	856A3373G03	LIFTING FIXTURE, LPT BLADED
805	856A3383G01	FIXTURE ALIGNMENT_ TURBINE FRAME OR LPT/LPT SHAFT
806	856A3392G01	TORQUE WRENCH
807	856A3409G01	PIN GUIDE KIT SPINNER CONE ENGINE
808	856A3409P03	GUIDE
809	856A3410G01	TORQUING DISTRIBUTION RING
810	856A3460G01	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
811	856A3460G02	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
812	856A3460G03	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
813	856A3460G04	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
814	856A3460G05	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
815	856A3460G06	FIXTURE, CHECKING - CENTER VENT TUBE INNER SUPP.
816	856A3472G01	TOOL, CHECKING, AXIAL POSITION -CENTER VENT T. SU
817	856A3474G01	TOOL, CHECKING EXPANSION LOAD -CENTER VENT T. SUP
818	856A3480G01	FIXTURE, PUSH/PULL - HPT ROTOR, AFT, BLADE RETNR
819	856A3480G02	RING, CHECKING CENTER VENT TUBE INNER SUPPORT RING
820	856A3486G01	TOOL ASSY SEAL CENTER VENT TUBE
821	856A3489G01	TOOL SET TARGETS-NO1 BRG AIR IMPINGEMENT CHECKS
822	856A3501G01	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
823	856A3501G02	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
824	856A3501G03	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT FIXTURE
825	856A3501G04	FIXTURE, ALIGNMENT-GUIDE-BOOSTER/LPT SHAFT
826	856A3503G01	FIXTURE REMOVAL/ INSTALLATION AND HANDLING
827	856A3504G01	FIXTURE, PUSHER/PULL
828	856A3504G02	FIXTURE, PUSHER/PULL
829	856A3504G03	FIXTURE, PUSHER/PULL
830	856A3506G01	WRENCH, TORQUE-LPT COUPLING NUT
831	856A3506G02	WRENCH, TORQUE-LPT COUPLING NUT
832	856A3506G03	WRENCH, TORQUE-LPT COUPLING NUT
833	856A3508G01	SLEEVE CENTERING & RMVL/INS
834	856A3513G01	BEAM, RESIDUAL TORQUE
835	856A3513G02	BEAM, RESIDUAL TORQUE
836	856A3513G03	BEAM, RESIDUAL TORQUE
837	856A3513G04	BEAM, RESIDUAL TORQUE
838	856A3515G01	EXTENSION BEAM - VARIABLE CG LIFT FIXT.
839	856A3515G02	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE
840	856A3515G03	EXTENSION BEAM - VARIABLE CG LIFT FIXTURE
841	856A3515G04	DRIVE ADAPTOR, BOOSTER & LPT
842	856A3519G01	SLING LIFT AGB
843	856A3519G02	SLING LIFT AGB
844	856A3519G03	SLING LIFT AGB

866	856A3546G06	FIXTURE CHECKING BACKLASH TGB BEVEL GEAR DUO
867	856A3548G01	TOOL SET TARGETS AGB OIL
868	856A3548G02	TOOL SET TARGETS AGB OIL
869	856A3548G03	TOOL SET TARGETS AGB OIL
870	856A3548G04	TOOL SET TARGETS AGB OIL
871	856A3548G05	TOOL SET TARGETS AGB OIL
872	856A3549G01	TOOL SET, LEAK TEST - AGB
873	856A3549G02	TOOL SET, LEAK TEST - AGB
874	856A3549G03	TOOL SET, LEAK TEST - AGB
875	856A3557G01	D SEAL FITTING-MAGNETIC PLUG LUB UNI
876	856A3573G01	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
877	856A3573G02	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
878	856A3573G03	TOOL, ASSY/DISASSY - NO. 1 AND NO. 2 BEARING SUPPORT
879	856A3576G01	PUSHER/PULLER
880	856A3576G02	PUSHER/PULLER
881	856A3582G01	WRENCH
882	856A3591G01	PROTECTOR - MOUNTING PIN, ACCESSORY GEARBOX
883	856A3598G01	CRADLE - SUPPORT, FUEL PUMP AND MEC
884	856A3598G02	CRADLE - SUPPORT, FUEL PUMP AND MEC
885	856A3598G03	CRADLE - SUPPORT, FUEL PUMP AND MEC
886	856A3600G01	RADIAL DRIVE SHAFT PULLER
887	856A3601G01	ADAPTER - DRAIN, LUBRICATION UNIT
888	856A3603G01	CONTAINER, SHIPPING_ NO.1 AND NO.2 BRG SUPPORT MODULE
889	856A3603G02	CONTAINER, SHIPPING_ NO.1 AND NO.2 BRG SUPPORT MODULE
890	856A3610G01	FIXTURE CHECKING DIM, "V" MODULE 2
891	856A3617G01	PULLER MAGNETIC PLUG ENGINE
892	856A3618G01	TOOL SET PUSHERS
893	856A3621G01	PINS GUIDE BOOSTER STG1 AND 2 VANE ASSEMBLIES OUTER SHROUDS
894	856A3621G02	PINS GUIDE BOOSTER STG1 AND 2 VANE ASSEMBLIES OUTER SHROUDS
895	856A3628G01	INSTALLATION TOOL NO 1 BRG INNER RACE
896	856A3702G01	SLEEVE CENTER LPT MAJ MOD R/I
897	856A3702G02	SLEEVE CENTER LPT MAJ MOD R/I
898	856A3703G01	GUIDE, COUNTER TORQUE WRENCH
899	856A3704G01	TORQUE ADAPTATION BEAM
900	856A3707G01	PULLER - FAN BLADE SPACER
901	856A3707G02	PULLER - FAN BLADE SPACER
902	856A3707G03	PULLER - FAN BLADE SPACER
903	856A3707G04	PULLER - FAN BLADE SPACER
904	856A3707G05	PULLER - FAN BLADE SPACER
905	856A3707G06	PULLER - FAN BLADE SPACER
906	856A3707G07	PULLER - FAN BLADE SPACER

928	856A3722G01	DUMMY FAN DISK
929	856A3722G02	DUMMY FAN DISK
930	856A3722G03	DUMMY FAN DISK
931	856A3722G04	DUMMY FAN DISK
932	856A3723G01	FIXTURE GUIDE/PULLING - BOOSTER
933	856A3723G02	FIXTURE GUIDE/PULLING - BOOSTER
934	856A3724G01	FAN DISK RUN-ON FIXTURE
935	856A3724G02	FAN DISK RUN-ON FIXTURE
936	856A3725G01	WRENCH, TORQUE
937	856A3725G02	WRENCH, TORQUE
938	856A3725G03	WRENCH, TORQUE/LOOSEN FAN DISK
939	856A3728G01	CORE ENGINE SEALING PLATE AND LOCKING ADAPTER
940	856A3728G02	CORE ENGINE SEALING
941	856A3729G01	SHIELD THERMAL
942	856A3730G01	FIXTURE, HANDLING BOOSTER SPOOL
943	856A3730G02	FIXTURE, HANDLING BOOSTER SPOOL
944	856A3731G01	HANDLING FIXTURE - FAN DISK
945	856A3731G02	HANDLING FIXTURE - FAN DISK
946	856A3731G03	HANDLING FIXTURE - FAN DISK
947	856A3732G01	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
948	856A3732G02	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
949	856A3732G03	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
950	856A3732G04	FIXTURE HANDLING - BOOSTER ROTOR and STATOR ASSY
951	856A3732P39	RING
952	856A3735G03	GUIDE PIN
953	856A3736G01	TEMPLATE, LOCATING - DRAIN TUBE AND OIL SUPPLY TUBE
954	856A3738G01	FIXTURE, TORQUE / LOOSEN - #1 BEARING NUT
955	856A3746G01	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
956	856A3746G02	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
957	856A3746G03	ASSEMBLY / DISASSEMBLY TOOL, RADIAL DRIVE SHAFT
958	856A3749G01	TOOL SET STAGE 2 AND 3 STRIPS SEAL
959	856A3750G01	LPT SHAFT LOCATOR
960	856A3750G02	LPT SHAFT LOCATOR
961	856A3750G03	LPT SHAFT LOCATOR
962	856A3750G04	LPT SHAFT LOCATOR
963	856A3751G01	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
964	856A3751G02	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
965	856A3751G03	RING HOLDING STG 1 OUTER STA AIR SEAL & TURBINE SHROUD SUPPORT
966	856A3755P01	TOOL, FOOL-PROOF INSTALLATION LPT STG1 AND 2 ROTATING AIR SEAL
967	856A3756G01	FIXTURE INSTALLATION SHIELD STAGE 2
968	856A3756G02	FIXTURE INSTALLATION SHIELD STAGE 2
969	856A3759G01	SECTORS HANDLING TURBINE FRAME MODULE
97		

1362	98DNSA20206060	RIGGING PIN
1363	98DNSA20206080	RIGGING PIN
1364	98DNSA20206120	RIGGING PIN
1365	98DNSA20206150	RIGGING PIN
1366	98DNSA20208040	RIGGING PIN
1367	98DNSA20208060	RIGGING PIN
1368	98DNSA20208080	RIGGING PIN
1369	98DNSA20208120	RIGGING PIN
1370	98DNSA20208150	RIGGING PIN
1371	98F10103500000	CHOCK-MLG ENGINE RUN-UP
1372	98F26208551000	TROLLEY FIRE EXTINGUISHER BOTTLE
1373	98F26208586000	DEVICE-R I,FIRE EXTINGUISHER BOTTLE
1374	98F26208586046	TRAVERSE
1375	98F26208586050	RETAINER
1376	98F26208586001	DEVICE-R I,FIRE EXTINGUISHER BOTTLES
1377	98F27108231000	GAUGE SET AILERON SETTING
1378	98F27208312000	RIGGING PIN
1379	98F27401000000	PITCH TRIM CONTROL
1380	98F27407502002	STRUT DISTANCE-STRUT,FRAME 91
1381	98F27508209000	FLAP NEUTRAL SETTING PIN
1382	98F27508238002	STOP - CARRIAGE, FLAP
1383	98F27508238003	STOP - CARRIAGE, FLAP
1384	98F27508238004	STOP - CARRIAGE, FLAP
1385	98F27408394000	FRAME-SUPPORT,THS ACTUATOR
1386	98F27508498000	FLAP HOISTING SLING TOOL
1387	98F27608236000	RIGGING TOOL - ACTUATOR, SPOILER
1388	98F27608236001	RIGGING TOOL - ACTUATOR, SPOILER
1389	98F27608236002	RIGGING TOOL - ACTUATOR, SPOILER
1390	98F27608236003	RIGGING TOOL - ACTUATOR, SPOILER
1391	98F27608253000	SAFETY CLIP
1392	98F27608253001	SAFETY CLIP
1393	98F27608701000	COLLAR-DISTANCE,SPOILER
1394	98F27608701040	COLLARSPOILER 1
1395	98F27608701042	COLLAR SPOILER 2-6
1396	98F29208457000	PIN-SAFETY RAT
1397	98F30403001000	RAIN REPELLENT PRES
1398	98F32104013000	SAFETY COLLAR-DOOR MLG
1399	98F32104017000	R/I TOOL - ECCENTRIC PIN
1400	98F32201005000	TOOL,R/I-DRAG STAY NLG
1401	98F32201005001	TOOL,R/I-DRAG STAY NLG
1402	98F32204000000	HANDLING TROLLEY LG
1403	98F32204001001	SAFETY-COLL

